



## Modulare Kopfstelle / *Modulare Headend*

### MPX 106 D / MPX 106 D pro



Bedienungsanleitung  
*User manual*



## Inhaltsverzeichnis

<b>1. Montage- und Sicherheitshinweise .....</b>	<b>3</b>
<b>2. Allgemeine Funktionsbeschreibung .....</b>	<b>5</b>
<b>3. Lieferumfang .....</b>	<b>5</b>
<b>4. Funktions- und Bedienelemente.....</b>	<b>6</b>
<b>5. Montage .....</b>	<b>7</b>
<b>5.1 Montage 19" Rack.....</b>	<b>7</b>
<b>5.2 Netzanschluss und Erdung .....</b>	<b>7</b>
<b>6. Programmierung über das Ethernet-Interface (NMS) .....</b>	<b>8</b>
<b>6.1 Netzwerkverbindung zum Computer .....</b>	<b>8</b>
<b>7. Programmierung des Baseboards .....</b>	<b>9</b>
<b>7.1 Statusmenü .....</b>	<b>9</b>
<b>7.2 Menü „System Settings“ .....</b>	<b>9</b>
<b>7.3 Menü „IP Input“ .....</b>	<b>12</b>
<b>7.4 Menü „IP Output“ .....</b>	<b>14</b>
<b>7.5 Menü „admin“ .....</b>	<b>17</b>
<b>8. Programmierung der Module .....</b>	<b>18</b>
<b>8.1 Programmierung des DVB-S/S2-Empfangsmodules MPM 8500 (Doppel-Slot-Modul) .....</b>	<b>18</b>
<b>8.2 Programmierung des DVB-S/S2-Empfangsmodules mit CI MPM 4502 (Single-Slot-Modul) .....</b>	<b>27</b>
<b>8.3 Programmierung des DVB-C-Empfangsmodules mit CI MPM 4702 (Single-Slot-Modul).....</b>	<b>35</b>
<b>8.4 Programmierung des DVB-T/T2-Empfangsmodules mit CI MPM 4802 (Single-Slot-Modul).....</b>	<b>39</b>
<b>8.5 Programmierung des DVB-C Ausgangsmodule MPM 16010 (Single-Slot-Modul).....</b>	<b>43</b>
<b>8.6 Programmierung des DVB-T Ausgangsmodule MPM 8020 (Single-Slot-Modul) .....</b>	<b>48</b>
<b>8.7 Programmierung des Transcoder-Processing-Modules MPM 1333 (Single-Slot-Modul) .....</b>	<b>53</b>
<b>8.8 Programmierung des HDMI-Encoder-Modules MPM 4230 (Single-Slot-Modul).....</b>	<b>59</b>
<b>8.9 Programmierung des CI-Descrambler-Modules MPM 2331 (Single-Slot-Modul) .....</b>	<b>64</b>
<b>8.10 Programmierung des Multi-Protokoll-Modules MPM 50330 (Single-Slot-Modul) .....</b>	<b>xx</b>
<b>9. Technische Daten .....</b>	<b>132</b>

[zur englisch-sprachigen Bedienungsanleitung / to the English language manual →](#)

## 1. Montage- und Sicherheitshinweise

Bitte beachten Sie die nachfolgenden Sicherheitshinweise, um jegliche Risiken für Personen auszuschließen und Beschädigungen am Gerät zu vermeiden sowie einen Beitrag zum Umweltschutz zu leisten.

### Wichtige Hinweise

Bitte lesen Sie die Bedienungsanleitung der Geräte aufmerksam durch bevor Sie diese in Betrieb nehmen! Die Anleitung enthält wichtige Informationen zur Installation, Umgebungsbedingungen sowie Wartung und Service am Gerät! Bewahren Sie die Bedienungsanleitung für den späteren Gebrauch auf. Alle Bedienungsanleitungen finden sie auf unserer Website unter:

<https://polytron.de/index.php/de/service/bedienungsanleitungen>

### Bestimmungsgemäßer Gebrauch

Verwenden Sie das Gerät nur an den zulässigen Betriebsorten, unter den zulässigen Umgebungsbedingungen sowie zu den in der Bedienungsanleitung beschriebenen Zweck.



Liegen zum beabsichtigten Gebrauch (z.B. Betriebsort, Umgebungsbedingungen) keine Informationen vor oder enthält die Betriebsanleitung keine entsprechenden Hinweise, müssen Sie sich an den Hersteller dieses Gerätes wenden um sicherzustellen, dass das Gerät eingebaut werden kann. Erhalten Sie vom Hersteller keine Information hierzu, darf das Gerät nicht in Betrieb genommen werden.

### Transport



Überprüfen Sie die Verpackung und das Gerät nach Erhalt sofort auf Transportschäden. Nehmen Sie ein beschädigtes Gerät nicht in Betrieb.

Der Transport des Gerätes am Netzkabel ist nicht zulässig, da dies zu einer Beschädigung des Netzkabels oder der Zugentlastung führen kann. Durch übermäßige Belastung (z.B. Fall, Stoß, Vibration) können Isolierungen beschädigt werden, die dem Schutz vor Netzspannungen dienen.

### Achtung



Die auf dem Gerät angegebene Nennspannung muss mit der örtlichen Netzspannung übereinstimmen. Beim Betrieb von Geräten mit Schutzklasse I ist der Anschluss an Netzsteckdosen mit Schutzleiteranschluss zwingend erforderlich. Die Hinweise zum Betrieb des Gerätes sind zu beachten.



### Erdung und Potentialausgleich

Vor der Erstinbetriebnahme muss die Erdung hergestellt und der Potentialausgleich durchgeführt werden.

Gemäß der aktuell gültigen Fassung der EN 60728-11 müssen koaxiale Empfangs- und Verteilanlagen den Sicherheitsanforderungen bezüglich Erdung, Potentialausgleich etc. entsprechen, auch wenn das Gerät ausgebaut wird. Sonst können Schäden am Produkt, ein Brand oder andere Gefahren entstehen. Zusätzlich kann der Erdungsanschluss am Gerät genutzt werden. Geräte im Handbereich sind untereinander in den Potentialausgleich einzubinden. Ein Betrieb ohne Schutzleiteranschluss, Geräteerdeung oder Potentialausgleich ist nicht zulässig. Bei Beschädigung ist das Gerät außer Betrieb zu nehmen. Die elektrische Anlage zur Stromversorgung des Gerätes, z.B. Hausinstallation muss Schutzeinrichtungen gegen überhöhte Ströme, Erdschlüsse und Kurzschlüsse enthalten.

Befolgen Sie auch alle anwendbaren nationalen Sicherheitsvorschriften und Normen.



### Anschlusskabel

Alle Anschlusskabel müssen stolperfrei mit einer Schlaufe verlegt werden, damit das Kondenswasser- und/oder bei Schwitzwasserbildung kein Wasser ins Gerät läuft sondern auf den Boden tropft.



### Aufstellungsort wählen

Planen sie den Montageort so, dass Kinder nicht am Gerät und dessen Anschläßen spielen können. Die Montage des Gerätes sollte nur auf eine feste, ebene und möglichst brandresistente Oberfläche erfolgen. Die in der Bedienungsanleitung angegebene Betriebsposition der Geräte beachten. Starke Magnetfelder in der Nähe vermeiden. Zu starke Hitzeeinwirkung oder Wärmeanstau haben einen negativen Einfluss auf die Lebensdauer. Nicht direkt über oder in der Nähe von Heizungsanlagen, offenen Feuerquellen o.ä. Wärmequellen montieren, wo das Gerät Hitzestrahlung oder Öldämpfen ausgesetzt ist. Lüftergekühlte und passiv gekühlte Geräte so montieren, dass die Luft ungehindert durch die unteren Belüftungsschlitzte angesaugt wird und die Wärme an den oberen Lüftungsschlitzten austreten kann. Für freie Luftzirkulation sorgen, Lüftungsschlitzte dürfen nicht abgedeckt werden. Keine Gegenstände auf dem Gerät abstellen. Die Montage in Nischen und die Abdeckung des Montageortes, z.B. durch Vorhänge ist nicht zulässig. Zur Vermeidung von Stauwärmе ist unbedingt die richtige Einbaulage zu beachten und allseitige, freie Umlüftung gemäß den Angaben in der Bedienungsanleitung zu gewährleisten! Bei Schrankmontage muss eine ausreichende Luftkonvektion möglich sein, die sicherstellt, dass die maximal zulässige Umgebungstemperatur des Gerätes eingehalten wird.



### Feuchtigkeit

Die Geräte besitzen keinen Schutz gegen Wasser und dürfen daher nur in trockenen Räumen betrieben und angeschlossen werden. Tropf-, Spritzwasser und hohe Luftfeuchtigkeit schaden dem Gerät. Bei Kondenswasserbildung warten, bis die Feuchtigkeit abgetrocknet ist. Betriebsumgebung laut spezifizierter IP-Schutzklasse wählen.



### Wärme

Gehäuseteile in der Nähe von Kühlrippen und Kühlrippen selber können sehr heiß werden. Daher sollten Sie diese Teile nicht berühren.



### Installations- und Servicearbeiten

Das Gerät darf ausschließlich von sachverständigen Personen (gemäß EN 62368-1) oder von Personen, die durch Sachverständige unterwiesen wurden, entsprechend den Regeln der Technik, installiert und betrieben werden. Wartungsarbeiten dürfen nur von qualifiziertem Servicepersonal durchgeführt werden. Vor Beginn der Servicearbeiten die Betriebsspannung abschalten und gegen Wiedereinschalten sichern. Der Netzstecker dient im Service- und Gefahrenfall als Trennvorrichtung von der Netzspannung und muss deshalb jederzeit erreichbar und benutzbar sein. Um die Störstrahlsicherheit zu garantieren, müssen sämtliche Geräteabdeckungen nach Öffnen wieder fest verschraubt werden.

Sicherungen werden nur von autorisiertem Fachpersonal gewechselt. Es dürfen nur Sicherungen des gleichen Typs eingesetzt werden.



### Reparaturen

Reparaturen dürfen nur vom Hersteller ausgeführt werden. Durch unsachgemäße Reparaturen können erhebliche Gefahren für den Benutzer entstehen. Bei Funktionsstörungen muss das Gerät vom Netz getrennt und autorisiertes Fachpersonal hinzugezogen werden. Gegebenenfalls ist das Gerät an den Hersteller einzusenden.



### Gewitter

Laut EN 60728-Teil 1 Sicherheitsanforderungen, aufgrund erhöhter Blitzschlaggefahr keine Wartungs- und/oder Installationsarbeiten bei Gewitter am Gerät oder an der Anlage vornehmen.

Durch hohe Überspannungen (Blitz einschlag, Überspannungen im Stromnetz) können Isolierungen beschädigt werden, die dem Schutz vor Netzspannung dienen.



### Umgebungstemperatur

Die in den technischen Daten angegebenen zulässigen Umgebungstemperaturen müssen für Betrieb und Lagerung eingehalten werden, auch wenn sich die klimatischen Bedingungen durch äußere Einflüsse (Sonneneinstrahlung etc.) verändern. Durch Überhitzung des Gerätes können Isolierungen beschädigt werden, die der Isolation der Netzspannung dienen.



### Abschluss / Terminierung

Nicht benutzte koaxiale Anschlüsse sind mit 75 Ohm-Abschlusswiderständen abzuschließen. Bei DC versorgten Anschlüssen erst für eine DC Spannungsentkopplung sorgen bzw. 75 Ohm Abschlusswiderstände verwenden mit integrierter DC Entkopp lung.

### Achtung

Diese Baugruppe enthält ESD-Bauteile! (ESD = Elektrostatisch empfindliches Bauteil)

Eine elektrostatische Entladung ist ein elektrischer Stromimpuls, der, ausgelöst durch große Spannungsdifferenz, auch über ein normalerweise elektrisch isolierendes Material fließen kann.

Um die Zuverlässigkeit von ESD-Baugruppen gewährleisten zu können, ist es notwendig, beim Umgang damit die wichtigsten Handhabungsregeln zu beachten:

- » Nur an elektrostatisch geschützten Arbeitsplätzen (EPA) diese Bauteile verarbeiten!
- » Auf ständigen Potentialausgleich achten!
- » Personenerdung über Handgelenk- und Schuherdung sicherstellen!
- » Elektrostatisch aufladbare Materialien wie normales PE, PVC, Styropor, etc. vermeiden!
- » Elektrostatische Felder >100 V/cm vermeiden!
- » Nur gekennzeichnete und definierte Verpackungs- und Transportmaterialien einsetzen!

**Schäden durch fehlerhaften Anschluss und/oder unsachgemäße Handhabung sind von jeglicher Haftung ausgeschlossen.**



### Recycling

Unser gesamtes Verpackungsmaterial (Kartonagen, Einlegezettel, Kunststoff-Folien und -beutel) ist vollständig recyclingfähig.

Die entsprechenden Entsorgungshinweise sind nachfolgend aufgeführt.

Die Geräte sind nach ihrer Verwendung gemäß den aktuellen Entsorgungsvorschriften Ihres Landkreises/Landes/Staates als Elektronikschrott einer geordneten Entsorgung zuzuführen.

In Übereinstimmung mit folgenden Anforderungen:

EU

WEEE-Richtlinie (2012/19/EU)



**WEEE-Reg.-Nr. DE 51035844**

Italien

Direttiva RAEE (2012/19/UE)



Raccolta carta  
20 PAP  
22 PAP

Raccolta plastica  
04 LDPE  
06 PS  
07 0



### Garantiebedingungen

Es gelten die allgemeinen Geschäftsbedingungen der Polytron-Vertrieb GmbH. Diese finden Sie auf unserer Website unter:  
<https://polytron.de/index.php/de/unternehmen/agbs>

## ALLGEMEINE HINWEISE ZUR BEDIENUNGSANLEITUNG

- Alle Parameterangaben sind lediglich beispielhaft.
- Technisch realisierbare Parameter sind frei wählbar.
- Menüsichten können je nach Software-Stand leicht variieren; die Bedienbarkeit ändert sich dadurch nicht.
- Die Bilder in dieser Anleitung dienen lediglich als Illustrationen.

## 2. Allgemeine Funktionsbeschreibung

Die Kopfstelle MPX 106 D/MPX 106 D pro ist eine modulare Plattform zum Empfang von DVB-Signalen und deren Wandlung in IP oder/und der ausgangsseitigen DVB-Modulation. Je nach Anforderung können bis zu 6 Modulsteckplätze mit Receiver-, Encoder- oder Modulatormodulen bestückt werden, um somit allen Anforderungen an Satellitenempfang, Entschlüsselung, Multiplexing, Modulation und IP-Verarbeitung gerecht zu werden.

Durch einen integrierten leistungsstarken Gigabit-Switch kann das IP-Signal im gesamten IP-Netzwerk zur Verfügung gestellt und von PCs / Notebooks mit entsprechender Software, IP-tauglichen TV-Geräten oder Set-Top-Boxen, die den „DVB-IPTV“-Standard unterstützen, direkt empfangen werden. Parallel dazu kann durch das Stecken von DVB-C-Modulatormodulen der Empfang via Kabelnetz ermöglicht werden. Über die Webbrowser-Benutzeroberfläche können die Geräte einfach und schnell programmiert werden. Die gewählten Einstellungen können gespeichert und als Backup archiviert oder auf andere Geräte übertragen werden. Aufgrund des kompakten Designs, der umfangreichen Funktionen und der niedrigen Betriebskosten sind die Geräte der modularen MPX-Kopfstellenserie die optimale Wahl für die Installation von Kabel- oder IPTV-Systemen in Hotels, Krankenhäusern oder Bürogebäuden.

### HINWEIS

Nach einem Netzausfall bleiben alle Daten erhalten.

### Gerätevarianten

MPX 106 D	5530001	1HE Grundeinheit – 6 Steckplätze; 120 W
MPX 106 D pro	5530002	1HE Grundeinheit – 6 Steckplätze; 400 W, 2x SFP
MPS 16530	5530050	1HE Grundeinheit – 16x SAT FTA in IP (2 Slots Reserve)
MPS 16532	5530051	1HE Grundeinheit – 16x SAT mit 4x CI in IP (2 Slots Reserve)
MPS 16550	5530053	1HE Grundeinheit – 16x SAT FTA in IP/QAM (1 Slot Reserve)
MPS 16552	5530052	1HE Grundeinheit – 16x SAT mit 4x CI in IP/QAM (1 Slot Reserve)

### Modulübersicht

#### Receiver-Module

MPM 8500	5530010	8x DVB-S/S2 Receiver FTA	- 8 Eingänge (Doppelslot)
MPM 4502	5530011	4x DVB-S/S2 Receiver 2xCI	- 2 Eingänge (Einzelslot)
MPM 4702	5530012	4x DVB-C Receiver 2xCI	- 1 Eingang (Einzelslot)
MPM 4802	5530013	4x DVB-T/T2 Receiver 2xCI	- 1 Eingang (Einzelslot)

#### Modulator-Module

MPM 16010	5530020	16x QAM Modulator	- 1 Ausgang (Einzelslot)
MPM 8020	5530025	8x OFDM Modulator	- 1 Ausgang (Einzelslot)

#### Encoder-Module

MPM 4230	5530030	4-Kanal HDMI-Encoder H.264/H.265	- 4 Eingänge (Einzelslot)
MPM 4430	5530031	4-Kanal SDI-Encoder H.264/H.265	- 4 Eingänge (Einzelslot)

#### Transcoder-Module

MPM 1333	5530035	Transcoder-Modul	- Einzelslot
----------	---------	------------------	--------------

#### IP-Gateway-Module

MPM 50330	5530055	UDP/RTP/HLS/SRT in UDP/RTP/SRT	(Einzelslot)
-----------	---------	--------------------------------	--------------

#### Scrambler/Descrambler-Module


MPM 2331	5530040	CI-Scrambler/Descrambler	- 2x CI (Einzelslot)
----------	---------	--------------------------	----------------------

## 3. Lieferumfang

- 1 x Grundeinheit 1HE
- 1 x Netzanschlusskabel
- 1 x Schnellstartanleitung
- 1 x spezifische Module gemäß Bestellung
- 1 x Montagezubehör

## 4. Funktions- und Bedienelemente

### Frontansicht

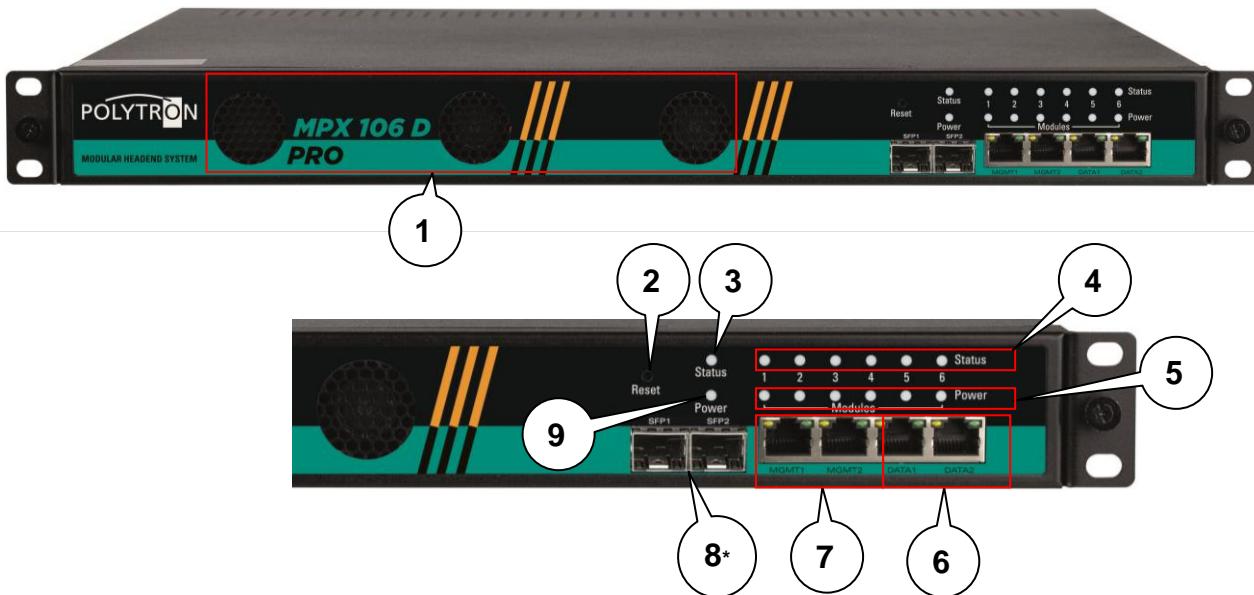

- 1 Belüftungsöffnungen (dürfen im Betrieb nicht verdeckt sein!)
- 2 Reset-Taste
- 3 Anzeige „Status“ Grundeinheit
- 4 Anzeige „Status“ Modul-Slot 1-6
- 5 Anzeige „Power“ Modul-Slot 1-6
- 6 IP-Streamports „DATA1“ & „DATA2“
- 7 IP-Managementports „MGMT1“ & „MGMT2“
- 8\* SFP-Ports (nur MPX 106 D pro)
- 9 Anzeige „Power“ Grundeinheit

### Power Grundgerät

LED grün	Gerät eingeschaltet
----------	---------------------

### Status Grundgerät

LED grün	Betriebsstatus Grundgerät okay
LED rot	Konfigurierter IP-Eingang kein Lock-Status Konfigurierter IP-Ausgang abnormal (z.B. Bitrate 0)

### Power Modul-Slot 1-6

LED grün	Modul eingeschaltet
----------	---------------------

### Status Modul-Slot 1-6

LED grün	Modul erkannt / gesteckt / fehlerfreier Betriebsstatus
LED rot blinkend	Modul-Status wird geladen
LED rot	Fehler am Modul erkannt Receiver-Modul: Eingangssignal kein Lock CI → Fehler beim Descrambling Encoder-Modul: Fehlender Signal-Eingang Fehler bzw. Unterbrechung beim Encodieren Modulator-Modul: Ausgangssignal ist abnormal (z.B. kein Ausgang) Überlauf der Bitrate pro Kanal

### IP-Ports

IP-Streamports	RJ45, Ethernet 1GBit/s, UDP/RTP
IP-Managementsports	RJ45, Ethernet 1 Gbit/s

## Rückansicht




- 10 Modul-Slot 1-6 (individuell bestückbar)  
 11 Netzteilanschluss (redundantes Netzteil)  
 12 Erdungsanschluss

## 5. Montage

### 5.1 Montage 19“ Rack

Die MPX 106 D (pro) ist für die Montage in einem 19“-Rack ausgelegt. Der Platzbedarf im 19“-Rack ist 1 HE. Es dürfen ausschließlich vom Hersteller angegebene Module verwendet werden. Der nicht autorisierte Austausch von Baugruppen kann zu Schäden am Gerät oder anderen Gefahren führen. Um das Gerät im 19“-Rack zu installieren, führen Sie bitte die folgenden Schritte aus:

1. Bestimmen Sie die gewünschte Position im Rack und kontrollieren Sie, dass alle Lüftungsschlitz/-löcher und die Luftauslässe auf der Rückseite des Gerätes nicht bedeckt werden. Es muss gewährleistet werden, dass die Luft frei durch die Lüftungslöcher zirkulieren kann.
2. Montieren Sie die Halterungen an der gewünschten Position im Rack.
3. Setzen Sie die Rack-Käfigmuttern an den gewünschten Montagelöchern im 19“-Rack ein.

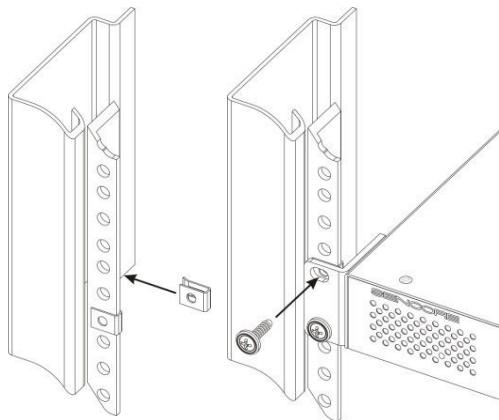

4. Montieren Sie nun die MPX 106 D (pro) indem Sie das Gerät mit den vier mitgelieferten Schrauben im 19“-Rack befestigen.

### Hinweis

Das Gerät muss akklimatisiert werden, hierzu muss das Gerät für mindestens 30 Minuten an die neuen Umgebungsbedingungen angepasst werden. Das Einschalten eines nicht akklimatisierten Gerätes kann zu Kurzschlägen oder anderen Schäden am Gerät führen!

### 5.2 Netzanschluss und Erdung

Bitte verwenden Sie nur das mitgelieferte 3-polige Netzanschlusskabel. Zur Montage oder bei Arbeiten an der Verkabelung muss der Netzstecker gezogen werden.

Das Gerät muss gemäß EN 60728-11 geerdet werden.

- Die Kabelisolierung des Erdungskabels (4mm<sup>2</sup>) um ca. 15 mm abisolieren.
- Das abisolierte Ende unter die Erdungsschraube schieben und die Schraube fest anziehen.

## 6. Programmierung über das Ethernet-Interface (NMS)

Sollen Änderungen an der Grundkonfiguration vorgenommen werden, so ist die jeweilige HTML-Bedienoberfläche über einen angeschlossenen Computer aufzurufen. Als Bedienprogramm wird ein Internetbrowser benötigt.

### 6.1 Netzwerkverbindung zum Computer

#### Systemvoraussetzungen:

- PC/Laptop mit Ethernet-Schnittstelle 10/100Mbps
- Internetbrowser (Empfehlung: Windows Internet Explorer 8 oder höher, Mozilla Firefox, Google Chrome)

#### Hinweis zum Einrichten einer Netzwerkverbindung:

PC und MPX 106 D (pro) werden über ein Ethernet-Kabel mit dem Netzwerk verbunden. Für die Verbindungsauflnahme müssen zunächst die IP-Adressen der Geräte abgeglichen werden.

Im Auslieferzustand lautet die MPX **IP-Adresse: 192.168.1.10**. Die Adresse des Netzwerkanschlusses im PC muss an die IP-Adresse der MPX angepasst werden (Subnetmask: 255.255.255.0, IP-Adresse: 192.168.1.xxx). xxx darf dabei nicht exakt mit den IP-Adressen der MPX-Kopfstelle und den installierten Modulen übereinstimmen. Es ist zu beachten, dass die installierten Module ebenfalls jeweils eigene IP-Adressen erhalten. Nicht erlaubt sind die Ziffern 0, 255 oder bereits verwendete IP-Adressen. Falls ein Proxyserver verwendet wird, ist dieser in den Netzverbindungen zu deaktivieren. Diese Einstellungen werden am PC unter „Netzwerkverbindungen → LAN-Verbindung“ vorgenommen. Nach Individualisierung der IP-Adressen kann die Netzwerkverbindung zwischen den Geräten hergestellt werden. Wenn ein Switch zwischen MPX-Kopfstelle und PC oder anderen Geräten angeschlossen wird, sollte dieser Switch IGMP V2 und die IGMP-Snooping-Funktion unterstützen. Wenn der verwendete Switch nicht richtig konfiguriert ist, kann dies zu Netzwerkproblemen führen. Der interne Switch des Grundgerätes ist mit den folgenden Werten für IGMP voreingestellt:

Static multicast MAC address	VLAN ID
01:00:5E:00:00:FC	2
01:00:5E:00:00:FB	2
01:00:5E:00:00:FB	1
01:00:5E:00:00:FC	1
01:00:5E:16:96:03	1
01:00:5E:16:96:0F	2

#### Verbindungsaufbau:

Die IP-Adresse des Gerätes (Standard IP-Adresse: **192.168.1.10**) in das Adressfeld des Browsers eingeben und die Bestätigungstaste „Enter“ drücken.

Die Verbindung zum Gerät wird hergestellt und das zugehörige Anmeldefenster dargestellt:



Der Zugang zum Konfigurationsmenü ist passwortgeschützt. Im Auslieferzustand lauten die Zugangsdaten:

Username: admin

Password: admin

Zum Bestätigen der Zugangsdaten den Button „**Login**“ betätigen.

#### HINWEIS

Sind Passwort oder Username nicht (oder nicht mehr) bekannt, kann über den Reset-Knopf auf der Frontseite des Gerätes ein Rücksetzen in den Auslieferzustand erfolgen. Das Gerät erhält dadurch wieder die werkseitigen Zugangsdaten und Ethernet-Einstellungen. Bereits individualisierte Konfigurationen bleiben erhalten.


## 7. Programmierung des Baseboards

Sollen Änderungen an der Grundkonfiguration vorgenommen werden, so werden diese in den Einstellungen des Baseboards durchgeführt.


### 7.1 Statusmenü

Nach erfolgreicher Anmeldung wird das Statusmenü angezeigt. Es enthält folgende Informationen:

1. Module List zeigt die gesteckten Module
2. Menüleiste und Zeitanzeige
3. Status „**Device Status**“ zeigt den Betriebsstatus der Grundeinheit und der Module sowie den Status der Lüfter  
„**Device Information**“ zeigt die Firmenware-, Software- und Hardwareversion der Grundeinheit und der eingesteckten Module

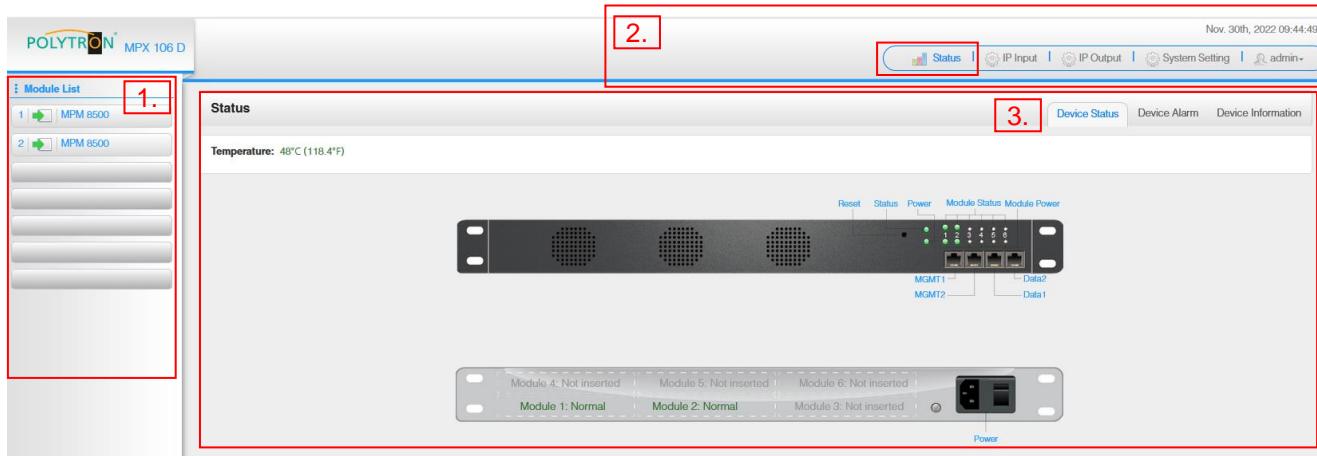


Durch Anwahl der Registerkarte „**Device Information**“ wird das Menü mit den Geräteinformationen geöffnet. In diesem Menü werden die gerätespezifischen Informationen (Firmware-, Software- und Hardware-Version) für das Baseboard und die gesteckten Module angezeigt.

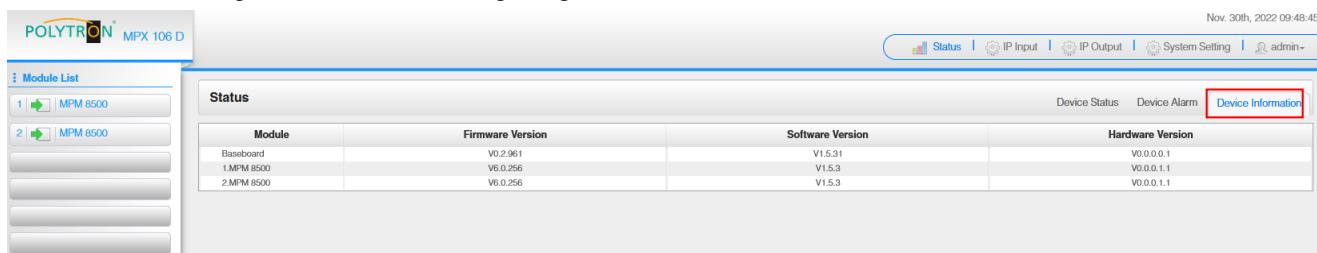

### 7.2 Menü „System Settings“

In diesem Menü erfolgt die Einstellung der systemspezifischen Parameter der MPX-Kopfstelle. Durch Anwahl der Registerkarten „Network“, „System“, „Time“, „User“ und „SNMP“ können diese Einstellungen gemäß der Anwendung vorgenommen werden.

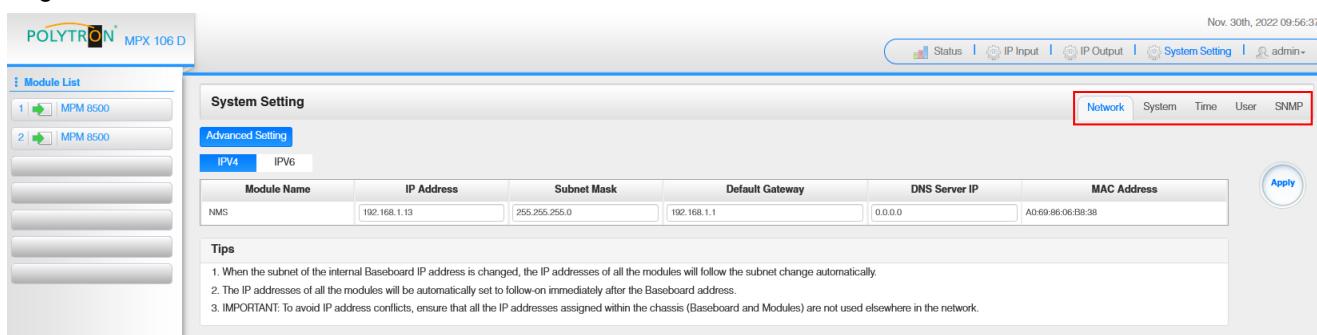

Durch Anwahl der Registerkarte „**Network**“ wird das Menü zur Vergabe der Netzwerkparameter für das Grundgerät geöffnet. Man kann zwischen der Vergabe gemäß IPV4 und IPV6 wählen. Nach Betätigen des Buttons „**Advances Setting**“ können die Netzwerkparameter des Datenboards angepasst werden. Weiterhin erfolgt die Anzeige der internen Netzwerkparameter für die gesteckten Module.

Module Name	IP Address	Subnet Mask	Default Gateway	DNS Server IP	MAC Address
NMS	192.168.1.13	255.255.255.0	192.168.1.1	0.0.0.0	A0:69:86:06:B8:38
DATA	10.184.55.10	255.255.255.0	10.184.55.254	0.0.0.0	A0:69:86:06:B8:37
1.MPM 8500	10.184.55.11	255.255.255.0	10.184.55.254		A0:69:86:06:B8:2D
2.MPM 8500	10.184.55.12	255.255.255.0	10.184.55.254		A0:69:86:06:B8:64

## ACHTUNG

Die IP-Adressvergabe für die Module in einem Grundgerät erfolgt automatisch an Hand der letzten 3 Stellen (</> 127) der IP-Adresse des DATA-Ports.

DATA-Port: 10.184.55.10 → <127 → Modul-Adressen ab 10.184.55.11 aufsteigend

DATA-Port: 10.184.55.135 → >127 → Modul-Adressen ab 10.184.55.134 absteigend

Nach Betätigen des Buttons „**Apply**“ werden die Einstellungen übernommen.

Die Registerkarte „**System**“ ermöglicht die folgenden allgemeinen System-Einstellungen:

- Upgrade (Update der Module und des Baseboards)
  - Configuration (Sicherung und Laden einer Konfiguration)
  - License (Sicherung und Laden von Lizenzdateien)
  - Standard (Auswahl des Modulations- und LCN-Standards)
  - SNMP MIB (Möglichkeit des MIB Exports)
  - Logs (Anzeige und Sicherung von Log-Daten)
  - Reboot Subboard (Möglichkeit gezieltes Reboot der Module)
  - Clear Power Alarm (Löschen Power-Alarmmeldung)
  - Others (Reboot = Neustart des Grundgerätes)
- Reset to Defaults = Laden der Werkseinstellungen für die IP Input und IP Output Einstellungen des Baseboards)

In der Registerkarte „**Time**“ erfolgt die Zuordnung der Zeitzone sowie die Datum- und Zeit-Einstellung des Gerätes.

The screenshot shows the 'System Setting' menu with the 'Time' tab selected. Under 'System Time', the date is set to 'Nov. 30th, 2022 10:41:37'. The 'Time Zone' dropdown is set to 'UTC +0 : 00'. The 'Mode' dropdown is set to 'Manual'. The 'Time' input field shows '2022/11/30 10:41:30'. A red circle highlights the 'Apply' button at the bottom right of the form.

Nach Betätigen des Buttons „**Apply**“ werden die Einstellungen übernommen.

In der Registerkarte „**User**“ erfolgt die Passwortvergabe und das Anlegen neuer Nutzer.

The screenshot shows the 'System Setting' menu with the 'User' tab selected. A red box highlights the 'Add User' button. Below it, a sub-menu titled 'Add User' is open, showing fields for Account (admin), Role (Administrator), Phone, Login Time (2022/11/30 09:44:43), Status (Enable), and Operator (Password). Below this, there are fields for Account, Password, Confirm Password, Phone, and Status. At the bottom are 'OK' and 'Cancel' buttons.

Durch Betätigen des Buttons „**Add User**“ öffnet sich ein Untermenu und es können weitere Nutzer angelegt werden.

Nachdem der neue Nutzer angelegt wurde, erfolgt die Freigabe der Zugriffsberechtigungen.

The screenshot shows the 'System Setting' menu with the 'User' tab selected. A new user 'SWI' has been added with the role 'Operator'. A red box highlights the 'Authority' link in the 'Add User' sub-menu. Below it, a table titled 'Authority' lists various system components like Main Board, Main BoardInput, Main BoardOutput, etc., with checkboxes for 'Visible' and 'Modify'. A red arrow points from the 'Authority' link to this table. At the bottom are 'OK' and 'Close' buttons.

In der Registerkarte „**SNMP**“ kann die SNMP-Funktion aktiviert und das Senden von Trap-Nachrichten eingerichtet werden.

The screenshot shows the 'System Setting' tab selected in the top navigation bar. Under the 'SNMP' section, there are fields forTrap IP Address1 (IPv4) and Trap IP Address1 (IPv6), both set to 0.0.0.0 with 'Enable' checkboxes. Trap IP Address2 (IPv4) and Trap IP Address2 (IPv6) are also set to 0.0.0.0 with 'Enable' checkboxes. Below these are fields for Read-Only Community (public) and Read-Write Community (private). At the bottom right of the form is a red-outlined 'Apply' button.

Nach Betätigen des Buttons „**Apply**“ werden die Einstellungen übernommen.

### 7.3 Menü „IP Input“

In diesem Menü erfolgt die Einstellung der IP-Eingangsdaten der MPX-Kopfstelle. Es können bis zu 120 Transportströme (SPTS oder MPTS) angelegt werden. Durch Anwahl der Registerkarten „Basic Setting“, „IGMP Setting“ und „Service Configuration“ können diese Einstellungen gemäß der Anwendung vorgenommen werden. In der Registerkarte „Status“ erfolgt die Anzeige der Transportströme gemäß den vorgenommenen Einstellungen.

In der Registerkarte „**Status**“ können die Gesamtbitrate und pro Transportstrom die Bitrate, die IP-Adresse und der Port sowie die effektive Bitrate kontrolliert werden. Der Button „**TS-Analysis**“ zeigt die Ergebnisse einer TS-Analyse pro Transportstrom an und der Button „**Service List**“ listet die Services aus dem angewählten Transportstrom auf.

The screenshot shows the 'IP Input' tab selected. A table lists 10 transport streams (1.1 to 1.10) with columns for Channel, IP Address : Port, Effective Bitrate(Mbps), Total Bitrate(Mbps), TS Analysis (with a red box labeled '1'), and Service List (with a red box labeled '2').

#### 1 TS-Analysis

This screenshot shows the 'Channel 1.1 TS Analysis' table. It includes columns for PID, Bit Rate(Mbps), Bandwidth(%), Continuity Count Error, Type, and Service. A red box highlights the 'Reset Counter' button at the top right. Below the table is a search bar with a magnifying glass icon, also highlighted with a red box.

Nach Betätigen des Buttons „**Reset Counter**“ startet die Aufnahme von Continuity Count Errors neu.

Im Suchfeld kann gezielt nach Themen wie Bitrate, Service, Bandbreite, etc. gesucht werden.

#### 2 Service List

This screenshot shows the 'Service List' for Channel 1.1. It lists services with columns for # and Service. The service [302] CCTV 2 is selected and highlighted with a red box. To the right, a detailed view window titled '[302] CCTV 2' shows a table with columns for Type, PID, and Bit Rate(Mbps). The service details are as follows:

Type	PID	Bit Rate(Mbps)
PCR	8190	0.044
PMT	258	0.018
Video(MPEG2)	513	4.099
Audio	660	0.256

Nach Anklicken eines Services werden alle servicespezifischen Daten angezeigt.

In der Registerkarte „**Basic Setting**“ werden die IP-Eingangsparameter programmiert. Die Kanäle müssen durch Anklicken der Auswahlbox „Enable“ gezielt aktiviert werden.

Channel	Enable	Destination IP Address	Destination Port	Protocol	Smoothing Mode	Smoothing Bitrate Value(...)	Pkt Length
1.1	<input type="checkbox"/>	227.20.30.1	1234	UDP	Bitrate Auto Smoothing	--	Auto
1.2	<input type="checkbox"/>	227.20.30.2	1234	UDP	Bitrate Auto Smoothing	--	Auto
1.3	<input type="checkbox"/>	227.20.30.3	1234	UDP	Bitrate Auto Smoothing	--	Auto
1.4	<input type="checkbox"/>	227.20.30.4	1234	UDP	Bitrate Auto Smoothing	--	Auto
1.5	<input type="checkbox"/>	227.20.30.5	1234	UDP	Bitrate Auto Smoothing	--	Auto
1.6	<input type="checkbox"/>	227.20.30.6	1234	UDP	Bitrate Auto Smoothing	--	Auto
1.7	<input type="checkbox"/>	227.20.30.7	1234	UDP	Bitrate Auto Smoothing	--	Auto
1.8	<input type="checkbox"/>	227.20.30.8	1234	UDP	Bitrate Auto Smoothing	--	Auto
1.9	<input type="checkbox"/>	227.20.30.9	1234	UDP	Bitrate Auto Smoothing	--	Auto
1.10	<input type="checkbox"/>	227.20.30.10	1234	UDP	Bitrate Auto Smoothing	--	Auto
1.11	<input type="checkbox"/>	227.20.30.11	1234	UDP	Bitrate Auto Smoothing	--	Auto
1.12	<input type="checkbox"/>	227.20.30.12	1234	UDP	Bitrate Auto Smoothing	--	Auto
1.13	<input type="checkbox"/>	227.20.30.13	1234	UDP	Bitrate Auto Smoothing	--	Auto
1.14	<input type="checkbox"/>	227.20.30.14	1234	UDP	Bitrate Auto Smoothing	--	Auto
1.15	<input type="checkbox"/>	227.20.30.15	1234	UDP	Bitrate Auto Smoothing	--	Auto
1.16	<input type="checkbox"/>	227.20.30.16	1234	UDP	Bitrate Auto Smoothing	--	Auto

Nach Betätigen des Buttons „**Apply**“ werden die Einstellungen übernommen.

Um mehrere Kanäle gleichzeitig zu konfigurieren den Button „Batch Setting“ betätigen. Danach wird das folgende Menü geöffnet, um die Eckdaten zu konfigurieren.

Select All	<input type="checkbox"/>	Start Channel-End Channel	1	-	120
<input checked="" type="checkbox"/> Enable	Disable	<input checked="" type="checkbox"/> Destination IP Address	227.10.20.80	Same	
<input checked="" type="checkbox"/> Protocol	UDP	<input checked="" type="checkbox"/> Destination Port	1234	Same	
<input checked="" type="checkbox"/> Smoothing Mode	Bitrate Auto Smoothin	Smoothing Bitrate Value	50		
		Pkt Length	7		

Nach Betätigen des Buttons „**Apply**“ werden die Einstellungen übernommen.

Die Registerkarte „**SNMP Setting**“ ermöglicht die Auswahl der IGMP-Version, einer Autofunktion zur Report-Erstellung und den Report-Zyklus.

IGMP Version:	V2
IGMP Automatic Report:	Enable
IGMP Report Cycle(s):	15


Nach Betätigen des Buttons „**Apply**“ werden die Einstellungen übernommen.

In der Registerkarte „**Service Configuration**“ erfolgt die Zuordnung der IP-Eingangstransportströme zu einem Multiplex. Weiterhin wird bei Anwahl von Bypass der Ausgangskanal genau von diesem Stream belegt. Der Kanal steht dann für andere Streams nicht mehr zur Verfügung.


Service Name	Destination	Destination Settings
Channel 1.1		<input type="checkbox"/>
[302] CCTV 2		<input type="checkbox"/>
[303] CCTV 7		<input type="checkbox"/>
Channel 1.2		<input type="checkbox"/>
[5] BCE		<input type="checkbox"/>

Wenn der Button „**Clear Config**“ betätigt wird, werden alle Konfigurationen gelöscht.

Nach Anwahl auf der Kanalebene wird das folgende Menü geöffnet und die Zuteilung des Kanals zu einem Multiplex oder zur Verwendung im Bypass-Mode kann erfolgen.

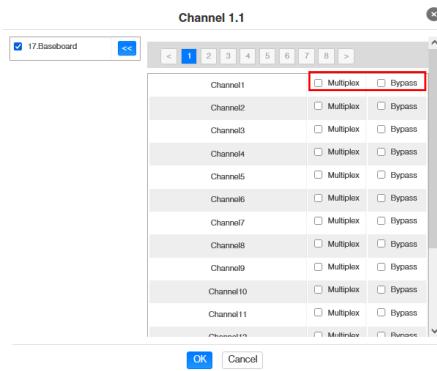

Nach Anwahl auf der Serviceebene wird das folgende Menü geöffnet und die Zuteilung des Kanals zu verschiedenen Ausgangsmodulen oder dem IP-Ausgang des Baseboards kann erfolgen.

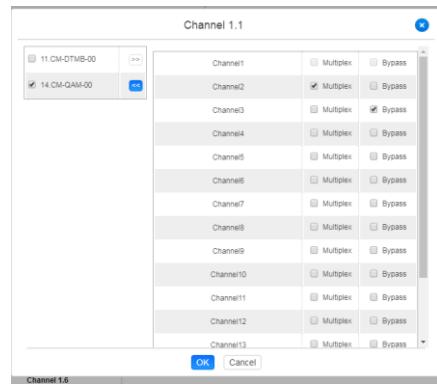

Nach Betätigen des Buttons „**Apply**“ werden die Einstellungen übernommen.

#### Hinweis

Mit dem Button kann ein manueller Scan der einzelnen Kanäle auf neue Services durchgeführt werden. Dies wird empfohlen, wenn es Änderungen im Eingangstransportstrom gab und die automatische Aktualisierung noch nicht durchgeführt wurde.

## 7.4 Menü „IP Output“

In diesem Menü erfolgt die Einstellung der IP-Ausgangsdaten der MPX-Kopfstelle. Es können bis zu 120 Transportströme (SPTS oder MPTS) angelegt werden. Durch Anwahl der Registerkarten „Basic Setting“, „Service Configuration“ und „PSIP“ können diese Einstellungen gemäß der Anwendung vorgenommen werden. In der Registerkarte „Status“ erfolgt die Anzeige der Transportströme gemäß den vorgenommenen Einstellungen.

In der Registerkarte „**Status**“ können die Gesamtbirate und pro Transportstrom die Bitrate, die IP-Adresse und der Port sowie die effektive Bitrate kontrolliert werden. Der Button „**TS-Analysis**“ zeigt die Ergebnisse einer TS-Analyse pro Transportstrom an und der Button „**Service List**“ listet die Services aus dem angewählten Transportstrom auf.

Channel	IP Address : Port	Effective Bitrate(Mbps)	Total Bitrate(Mbps)	Bitrate	TS Analysis	Service List
1.1	239.1.1.100 : 10001	7.204	30.000	Normal		
1.2	239.1.1.101 : 10001	16.094	30.000	Normal		
1.3	239.1.1.102 : 10001	16.986	30.000	Normal		
1.4	239.1.1.103 : 10001	15.537	30.000	Normal		
1.5	239.1.1.104 : 10001	15.521	30.000	Normal		
1.6	239.1.1.105 : 10001	2.574	30.000	Normal		
1.7	239.1.1.106 : 10001	5.415	30.000	Normal		
1.8	239.1.1.107 : 10001	2.311	30.000	Normal		
1.9	239.1.1.108 : 10001	2.698	30.000	Normal		
1.10	239.1.1.109 : 10001	5.354	30.000	Normal		
1.11	239.1.1.110 : 10001	3.341	30.000	Normal		
1.12	239.1.1.111 : 10001	7.256	30.000	Normal		
1.13	239.1.1.112 : 10001	4.675	30.000	Normal		
1.14	239.1.1.113 : 10001	3.860	30.000	Normal		

## 1 TS-Analysis

Nach Betätigen des Buttons „**Reset Counter**“ startet die Aufnahme von Continuity Count Errors neu.  
Im Suchfeld kann gezielt nach Themen wie Bitrate, Service, Bandbreite, etc. gesucht werden.

Channel.1 TS Analysis

PID	Bitrate(Mbps)	Bandwidth(%)	Continuity Count Error	Type	Service
0x12(18)	0.015	0.050	0	EIT	
0x492(1170)	0.009	0.030	0	PrivateData	Das Erste HD
0x498(1176)	0.010	0.033	0	PrivateData	Das Erste HD
0x57b(2171)	0.150	0.500	0	PrivateData	Das Erste HD
0x13ec(5100)	0.030	0.100	0	PMT	Das Erste HD
0x13ed(5101)	8.873	29.577	0	PCR, Video	Das Erste HD
0x13ee(5102)	0.273	0.910	0	Audio	Das Erste HD
0x13ef(5103)	0.270	0.900	0	Audio	Das Erste HD

Reset Counter

Search

## 2 Service List

Nach Anklicken eines Services werden alle servicespezifischen Daten angezeigt.

The screenshot shows two windows. On the left, a list titled "Channel : 1.1" contains one item: "1 [10301] Das Erste HD". A red box highlights this item, and a red arrow points to the right window. The right window is titled "[10301] Das Erste HD" and shows a detailed list of service components under "Source : 1.1.1". It includes entries like "PCR PID", "PMT PID", "Video PID", "Audio PID", and various "PID" entries for different types of data streams. A "Close" button is at the bottom right of this window.

In der Registerkarte „**Basic Setting**“ werden die IP-Ausgangsparameter programmiert. Die Kanäle müssen durch Anklicken der Auswahlbox „Enable“ gezielt aktiviert werden. Im Auswahlpunkt „Stream Mode“ kann zwischen VBR und CBR Ausgangsstreams gewählt werden.

POLYTRON MPX 106 D

Dec. 01st, 2022 07:16:19

Status IP Input IP Output System Setting admin+

Module List

1 MPM 8500  
2 MPM 8500

IP Output

Batch Setting

TX Interval: 100 (ms) Stream Mode: VBR

Channel	Enable	Source Port	Destination IP Address	Destination Port	Protocol	Pkt Length	Bitrate(Mbps)	Enable Destination MAC	Destination MAC
1.1	<input checked="" type="checkbox"/>	1000	239.1.1.100	10001	RTP	7	30	Disable	01:00:5E:01:01:64
1.2	<input checked="" type="checkbox"/>	1000	239.1.1.101	10001	RTP	7	30	Disable	01:00:5E:01:01:65
1.3	<input checked="" type="checkbox"/>	1000	239.1.1.102	10001	RTP	7	30	Disable	01:00:5E:01:01:66
1.4	<input checked="" type="checkbox"/>	1000	239.1.1.103	10001	RTP	7	30	Disable	01:00:5E:01:01:67
1.5	<input checked="" type="checkbox"/>	1000	239.1.1.104	10001	RTP	7	30	Disable	01:00:5E:01:01:68
1.6	<input checked="" type="checkbox"/>	1000	239.1.1.105	10001	RTP	7	30	Disable	01:00:5E:01:01:69
1.7	<input checked="" type="checkbox"/>	1000	239.1.1.106	10001	RTP	7	30	Disable	01:00:5E:01:01:6A
1.8	<input checked="" type="checkbox"/>	1000	239.1.1.107	10001	RTP	7	30	Disable	01:00:5E:01:01:6B
1.9	<input checked="" type="checkbox"/>	1000	239.1.1.108	10001	RTP	7	30	Disable	01:00:5E:01:01:6C
1.10	<input checked="" type="checkbox"/>	1000	239.1.1.109	10001	RTP	7	30	Disable	01:00:5E:01:01:6D
1.11	<input checked="" type="checkbox"/>	1000	239.1.1.110	10001	RTP	7	30	Disable	01:00:5E:01:01:6E
1.12	<input checked="" type="checkbox"/>	1000	239.1.1.111	10001	RTP	7	30	Disable	01:00:5E:01:01:6F
1.13	<input checked="" type="checkbox"/>	1000	239.1.1.112	10001	RTP	7	30	Disable	01:00:5E:01:01:70
1.14	<input checked="" type="checkbox"/>	1000	239.1.1.113	10001	RTP	7	30	Disable	01:00:5E:01:01:71
1.15	<input checked="" type="checkbox"/>	1000	239.1.1.114	10001	RTP	7	30	Disable	01:00:5E:01:01:72
1.16	<input checked="" type="checkbox"/>	1000	239.1.1.115	10001	RTP	7	30	Disable	01:00:5E:01:01:73

Basic Setting Service Configuration PSIP

Apply

Nach Betätigen des Buttons „**Apply**“ werden die Einstellungen übernommen.

Um mehrere Kanäle gleichzeitig zu konfigurieren den Button „Batch Setting“ betätigen. Danach wird das folgende Menü geöffnet, um die Eckdaten zu konfigurieren.

IP Output

Batch Setting

Select All

Enable

Source Port

Protocol

Bitrate

Start Channel-End Channel

Destination IP Address

Destination Port

Pkt Length

Enable Destination MAC  AA:BB:CC:DD:EE:FF

Batch Setting

Apply

Nach Betätigen des Buttons „**Apply**“ werden die Einstellungen übernommen.

## Hinweis

Es ist darauf zu achten, dass IP-Konflikte zwischen Baseboard, den Modulen und anderen Geräten vermieden werden.

Die Aktivierung von „**Destination MAC**“ ist nur in bestimmten Fällen, in denen ein Unicast-Stream aus unbekannten Gründen nicht empfangen werden kann nötig. Zur Abhilfe kann die Ziel-MAC aktiviert und die richtige Empfänger-MAC eingegeben werden. Diese wird an Stelle der Unicast-IP-Adresse verwendet.

## Achtung

### CBR-Mode

Die konstante „**Bitrate**“ jedes Ausgangskanals/TS/Ports sollte manuell etwa 2 MBit/s höher als die effektive Bitrate im entsprechenden Ausgangskanal/TS/Port eingestellt werden, da die effektiven Bitraten ein wenig schwanken können. Es ist zu berücksichtigen, dass Nullpakete im Ausgangs-Transportstrom eingefügt werden.


### VBR-Mode

Bei Anwahl des VBR-Mode muss die „**Bitrate**“ ebenfalls zur Überwachung eingestellt werden. Diese kann viel höher als die effektive Bitrate gewählt werden, um Datenraten-Überläufe auszuschließen. In diesem Mode erfolgt keine Auffüllung mit Nullpaketen.

Die Registerkarte „**Service Configuration**“ dient der Einstellung der Servicedaten (TS-Daten, NIT, TOT, PMT) für die zugeordneten Programme. Bei Bedarf kann hier eine Anpassung der Service-PIDs erfolgen.

Nach Anklicken des gewünschten Transportstromes öffnet sich das Menü zur Einstellung der folgenden Daten:

- Original Network ID (automatische Übernahme vom ersten Service bei MUX)
- TS ID (automatische Übernahme vom ersten Service bei MUX)
- Service ID (automatische Übernahme aus Transportstrom)
- Service Name (automatische Übernahme aus Transportstrom)
- Service Provider (automatische Übernahme aus Transportstrom)

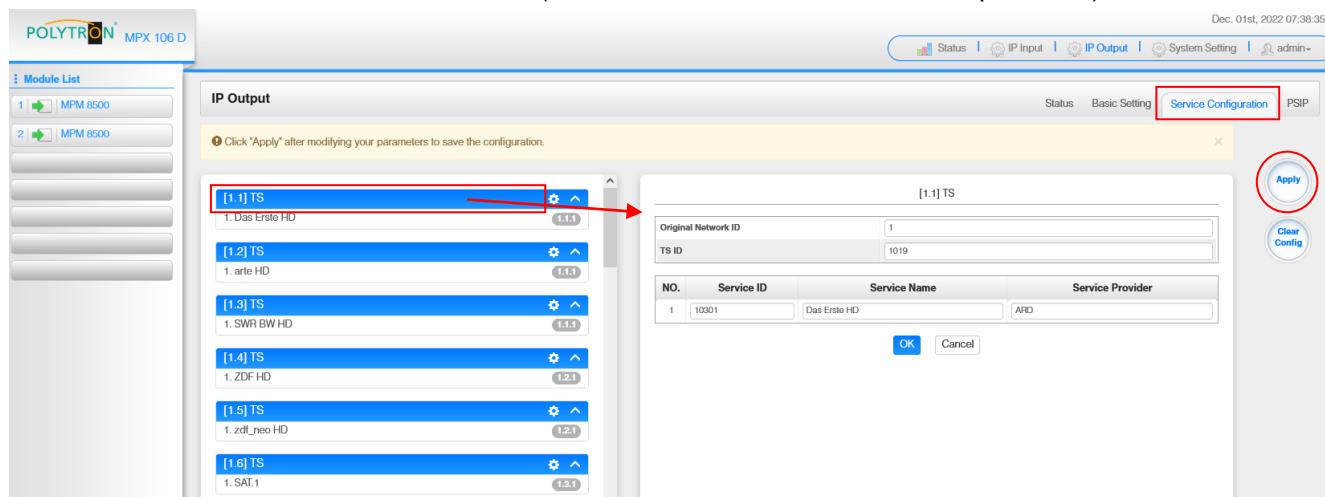

Nach Anwahl wird das Menü zur Anpassung der NIT, TOT und PMT geöffnet.



Nach Anklicken eines Service werden alle servicespezifischen Daten angezeigt.

The screenshot shows a list of services under [1.1] TS. The first service, "1. Das Erste HD", is selected and highlighted with a red box. An arrow points from this selection to a detailed configuration window titled "[1.1] TS >> Das Erste HD". This window lists various service parameters such as Service ID (10001), Service Name (Das Erste HD), Service Provider (ARD), Service Type (1), PCR PID (5101), PMT PID (5100), Video(1064), Audio, and Private Data/AC3, AC2, AC1, User Private fields. At the bottom are "OK" and "Cancel" buttons.

Alle Einstellungen müssen durch Betätigen des Buttons „**Apply**“ oder „**OK**“ in jedem Untermenü bestätigt werden. Danach erfolgt die Übernahme der eingestellten Konfigurationen.

In der Registerkarte „**PSIP**“ können gezielt die zur Übertragung notwendigen Tabellen aktiviert werden. Die Auswahl kann für alle IP-Ausgangskanäle geschlossen via  **Select All** oder durch Einzelanwahl der gewünschten Kanäle festgelegt werden.

The screenshot shows the "IP Output" configuration page. On the left, the "Output Channel List" shows channels 1.1 through 1.12. Channel 1.1 is selected and highlighted with a red box. An arrow points from this selection to a detailed configuration window titled "Output Channel [1.1] >> PSIP". This window lists several insert options with checkboxes: PAT Insert (checked), PMT Insert (checked), SDT Insert (checked), NIT Insert (unchecked), CAT Insert (checked), TDT Insert (checked), and TOT Insert (unchecked). At the bottom is an "OK" button, which is also highlighted with a red box.

Nach Betätigen des Buttons „**OK**“ werden die Einstellungen übernommen.


## 7.5 Menü „admin“

In diesem Menü erfolgt das Abmelden von der Programmier-Oberfläche der MPX-Kopfstelle.

The screenshot shows the "Status" page with a "Temperature: 42°C (107.6°F)" reading. At the top right, there is a "User" dropdown menu with a "Log Out" option, which is highlighted with a red box. Below the status bar are buttons for "Device Status", "Device Alarm", and "Device Information".

## 8. Programmierung der Module

Die Programmierung der modulspezifischen Daten erfolgt durch Anwahl des entsprechenden Moduls in der Modulliste.

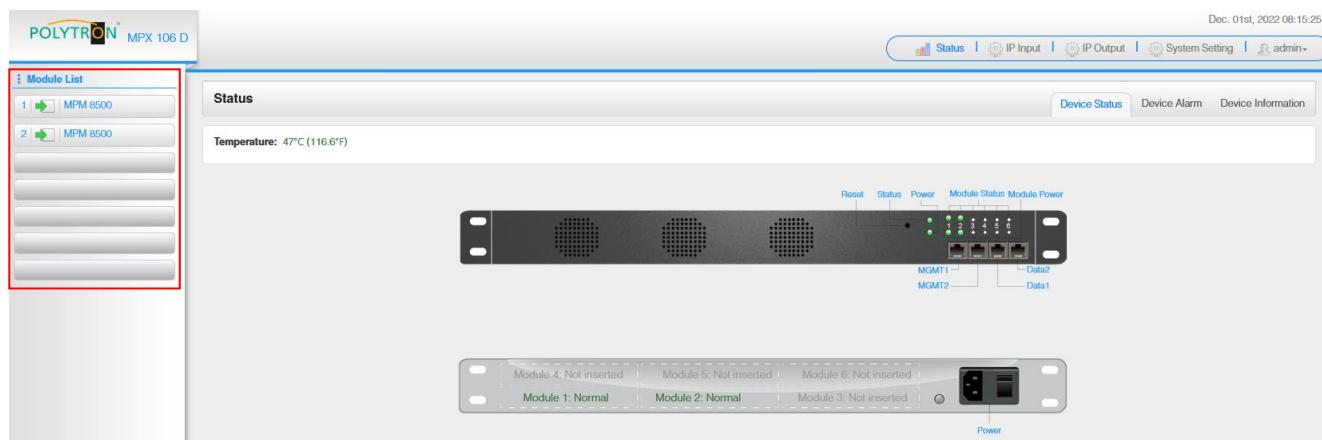

### 8.1 Programmierung des DVB-S/S2-Empfangsmodules MPM 8500 (Doppel-Slot-Modul)

Das MPM 8500 ist ein 8-Kanal-DVB-S/S2 FTA-Empfangsmodul mit 8 HF-Eingängen für 8 SAT-Eingangssignale, die unabhängig von Strom versorgt werden können. Das Modul unterstützt verschiedene Schaltsignale (13/18 V, 22 kHz) sowie DiSEqC1.0 /DiSEqC1.1 zur Vorschaltung von Multischaltern als Eingangsverteiler. Das Modul verfügt über einen direkten IP-Ausgang (CBR).

#### Hinweis

**Sollen die IP-Ausgangstransportströme als VBR-Signal übertragen werden, ist das Routing über das Baseboard nötig. Die direkt am Modul vorhandenen IP-Transportströme unterstützen nur den CBR-Mode.**

Durch Anklicken des Moduls in der Modulliste erfolgt die Weiterleitung zur Programmieroberfläche des angewählten Moduls. In diesem Menü erfolgt die Einstellung der systemspezifischen Parameter des MPM 8500. Durch Anwahl der Registerkarten „Biss“, „Basic Setting“, „Service Configuration“, „IP Output“ und „System“ können diese Einstellungen gemäß der Anwendung vorgenommen werden.

In der Registerkarte „Status“ erfolgt die Anzeige des Lock-Status sowie der Performance der Eingangs-Transportströme gemäß den vorgenommenen Einstellungen.

Channel	Locked Status	Total Bitrate(Mbps)	Effective Bitrate(Mbps)	PER	RF Level	CNR(dB)	Link Margin(dB)	FEC Code Rate	Modulation	TS Analysis	Service List
1.1	Locked	42.584	41.425	0.00000000	-45dBm (63dB <sub>V</sub> )	17.500	10	2/3	8PSK	<span style="border: 1px solid red; padding: 2px;">1</span>	<span style="border: 1px solid red; padding: 2px;">2</span>
2.1	Locked	42.584	31.787	0.00000000	-47dBm (61dB <sub>V</sub> )	16.200	9	2/3	8PSK	<span style="border: 1px solid red; padding: 2px;">1</span>	<span style="border: 1px solid red; padding: 2px;">2</span>
3.1	Locked	33.792	30.203	0.00000000	-46dBm (62dB <sub>V</sub> )	16.900	10	5/6	QPSK	<span style="border: 1px solid red; padding: 2px;">1</span>	<span style="border: 1px solid red; padding: 2px;">2</span>
4.1	Locked	38.014	34.721	0.00000000	-46dBm (62dB <sub>V</sub> )	17.700	12	3/4	QPSK	<span style="border: 1px solid red; padding: 2px;">1</span>	<span style="border: 1px solid red; padding: 2px;">2</span>
5.1	Locked	42.586	42.417	0.00000000	-20dBm (88dB <sub>V</sub> )	16.800	9	2/3	8PSK	<span style="border: 1px solid red; padding: 2px;">1</span>	<span style="border: 1px solid red; padding: 2px;">2</span>
6.1	Locked	42.584	42.204	0.00000000	-44dBm (64dB <sub>V</sub> )	17.900	10	2/3	8PSK	<span style="border: 1px solid red; padding: 2px;">1</span>	<span style="border: 1px solid red; padding: 2px;">2</span>
7.1	Locked	42.586	42.148	0.00000000	-45dBm (63dB <sub>V</sub> )	16.100	9	2/3	8PSK	<span style="border: 1px solid red; padding: 2px;">1</span>	<span style="border: 1px solid red; padding: 2px;">2</span>
8.1	Locked	42.584	19.274	0.00000000	-40dBm (68dB <sub>V</sub> )	16.800	9	2/3	8PSK	<span style="border: 1px solid red; padding: 2px;">1</span>	<span style="border: 1px solid red; padding: 2px;">2</span>

PER

Packet Error Rate

RF Level

SAT-Eingangsspegel des Moduls

Link Margin (dB)

Pegelreserve am Eingang

#### 1 TS-Analysis

Nach Betätigen des Buttons „Reset Counter“ startet die Aufnahme von Continuity Count Errors neu.  
Im Suchfeld kann gezielt nach Themen wie PID, Service, Typ, etc. gesucht werden.

PID	Bitrate(Mbps)	Bandwidth(%)	Continuity Count Error	Type	Service
0x0(0)	0.007	0.016	0	PAT	
0x1(1)	0.003	0.007	0	CAT	
0x10(16)	0.001	0.002	0	Other	
0x11(17)	0.013	0.031	0	SDT	
0x12(18)	0.755	1.773	0	Other	
0x14(20)	0.003	0.007	0	Other	
0x49(21170)	0.009	0.021	0	AIT	Das Erste HD
0x49(81176)	0.010	0.023	0	PrivateData	Das Erste HD

## 2 Service List

Nach Klick auf Service List werden alle Kanäle mit den empfangenen Services angezeigt. Nach Anwahl eines Services werden die Service Informationen dargestellt.

Type	PID	Bitrate(Mbps)
PCR	5111(0x137)	7.352
PMT	5110(0x136)	0.008
StreamType:27-Video(t264)	5111(0x137)	7.352
StreamType:3-Audio	5112(0x138)	0.197
StreamType:3-Audio	5113(0x139)	0.196
StreamType:3-Audio	5116(0x13c)	0.199
StreamType:3-Audio	5117(0x13d)	0.199
StreamType:6-Private Data/AC3	5114(0x13a)	0.188
AIT	1270(0x4f6)	0.011
PrivateData	1276(0x4fc)	0.011
StreamType:6-Private Data/AC3	5115(0x13b)	0.033
StreamType:6-Private Data/AC3	5116(0x13e)	0.033
StreamType:6-Private Data/AC3	5119(0x13f)	0.005

In der Registerkarte „**Biss**“ kann eine Biss-ID inklusive der zugehörigen Parameter (Mode, Key und Injected ID) erstellt werden. Anschließend kann in der Serviceliste die Biss ID aktiviert werden.

Biss ID	Mode	Key	Injected ID
Biss-1	▼	Key	+

Service Information		Biss ID
[1.1][10301]	Das Erste HD	Biss-Off
[1.1][10302]	arte HD	Biss-Off
[1.1][10303]	SWR BW HD	Biss-Off
[2.1][11110]	ZDF HD	Biss-Off
[2.1][11130]	zdf_neo HD	Biss-Off
[3.1][17500]	SAT.1	Biss-Off
[3.1][17501]	ProSieben	Biss-Off
[3.1][17502]	kabel eins	Biss-Off
[3.1][17503]	WELT	Biss-Off
[3.1][17504]	SAT.1 Gold	Biss-Off
[3.1][17505]	Pro7 MAXX	Biss-Off
[3.1][17507]	SAT.1 Bayern	Biss-Off
[3.1][17508]	SAT.1 NRW	Biss-Off
[1.1][10325]	rbb Brandenburg HD	Biss-Off
[2.1][10326]	BR Fernsehen Nord...	Biss-Off
[3.1][10327]	NDR F3 NDS HD	Biss-Off
[1.1][10350]	rbb Berlin HD	Biss-Off
[2.1][10361]	rbb Berlin HD	Biss-Off
[3.1][10362]	MDR Sachsen HD	Biss-Off
[1][28332]	WDR HD Köln	Biss-Off
[2][28333]	WDR HD Aachen	Biss-Off
[3][28334]	WDR HD Bielefeld	Biss-Off

Nach Betätigen des Buttons „**Apply**“ werden die Einstellungen übernommen.

In der Registerkarte „**Basic Setting**“ werden die SAT-Eingangsparameter programmiert. Es wird die Sendefrequenz, die Symbolrate und die Lokaloszillatorkreisfrequenz des LNB eingestellt. Zur Versorgung des LNB mit Spannung/Schaltsignalen können die Einstellungen LNB Power, LNB 22 kHz, DiSEqC Level und DiSEqC Port vorgenommen und damit auch Multischalter zur SAT-Signalzuführung genutzt werden.

Channel	Satellite Frequency(MHz)	SymbolRate(KBaud)	LNB Frequency(MHz)	LNB Power	LNB 22KHz	DiSEqC Level	DiSEqC Port	DiSEqC Bytes(Hex)	Reboot Tuner
1.1	11494	22000	9750	off	off	Disable	1	FFFFFFFFFFFF	<span style="background-color: red; border: 1px solid black;">Reboot</span>
2.1	11362	22000	9750	off	off	Disable	1	FFFFFFFFFFFF	<span style="background-color: red; border: 1px solid black;">Reboot</span>
3.1	12545	22000	10600	off	off	Disable	1	FFFFFFFFFFFF	<span style="background-color: red; border: 1px solid black;">Reboot</span>
4.1	12188	27500	10600	off	off	Disable	1	FFFFFFFFFFFF	<span style="background-color: red; border: 1px solid black;">Reboot</span>
5.1	11347	22000	9750	off	off	Disable	1	FFFFFFFFFFFF	<span style="background-color: red; border: 1px solid black;">Reboot</span>
6.1	11582	22000	9750	off	off	Disable	1	FFFFFFFFFFFF	<span style="background-color: red; border: 1px solid black;">Reboot</span>
7.1	10891	22000	9750	off	off	Disable	1	FFFFFFFFFFFF	<span style="background-color: red; border: 1px solid black;">Reboot</span>
8.1	11523	22000	9750	off	off	Disable	1	FFFFFFFFFFFF	<span style="background-color: red; border: 1px solid black;">Reboot</span>

Name	Range
<b>Satellite Frequency (MHz)</b>	950~14500
<b>Symbol Rate (KBaud)</b>	1000~45000
<b>LNB Frequency (MHz)</b>	0~13550
<b>LNB Power</b>	Off/13V/18V
<b>LNB 22KHz</b>	Off/22kHz
<b>DiSEqC Level</b>	1.0, 1.1, 1.1+1.0, Manually Defined, Disable
<b>DiSEqC Port</b>	1,2,3,4
<b>DiSEqC Bytes</b>	In HEX

Für die „**LNB-Frequency**“ bitte die entsprechende LOF (Lokal-Oszillatorkreisfrequenz) des LNBs eintragen.

Über den „**Reboot**“-Button kann manuell ein Neustart des ausgewählten Tuners erfolgen.

Nach Betätigen des Buttons „**Apply**“ werden die Einstellungen übernommen.

Die Registerkarte „**Service Configuration**“ dient der Zuordnung der vorhandenen Eingangskanäle oder Services zu einem Ausgangsmodul und den darin vorhandenen Ausgangstransportströmen.


Nach Anklicken des gewünschten Kanals öffnet sich das Menü zur Zuordnung des Kanals zu einem Ausgangsmodul und den darin verfügbaren Multiplex oder zur Aktivierung im Bypass-Mode.

Das gezielte Zuordnen einzelner Services zu einem Ausgangsmodul und Ausgangstransportstrom erfolgt durch Anklicken von direkt hinter dem gewünschten Service.

Service Name	Destination	Destination Setting
Channel 1.1	17.Baseboard[1.1] 17.Baseboard[1.2] 17.Baseboard[1.3]	<input checked="" type="checkbox"/> <input checked="" type="checkbox"/> <input checked="" type="checkbox"/>
Channel 2.1	17.Baseboard[1.4] 17.Baseboard[1.5]	<input checked="" type="checkbox"/> <input checked="" type="checkbox"/>
Channel 3.1	17.Baseboard[1.6] 17.Baseboard[1.7] 17.Baseboard[1.8]	<input checked="" type="checkbox"/> <input checked="" type="checkbox"/> <input checked="" type="checkbox"/>


Nach Betätigen des Buttons „**Apply**“ werden die Einstellungen übernommen.

## Zuordnung eines Kanals (gesamter Transportstrom)

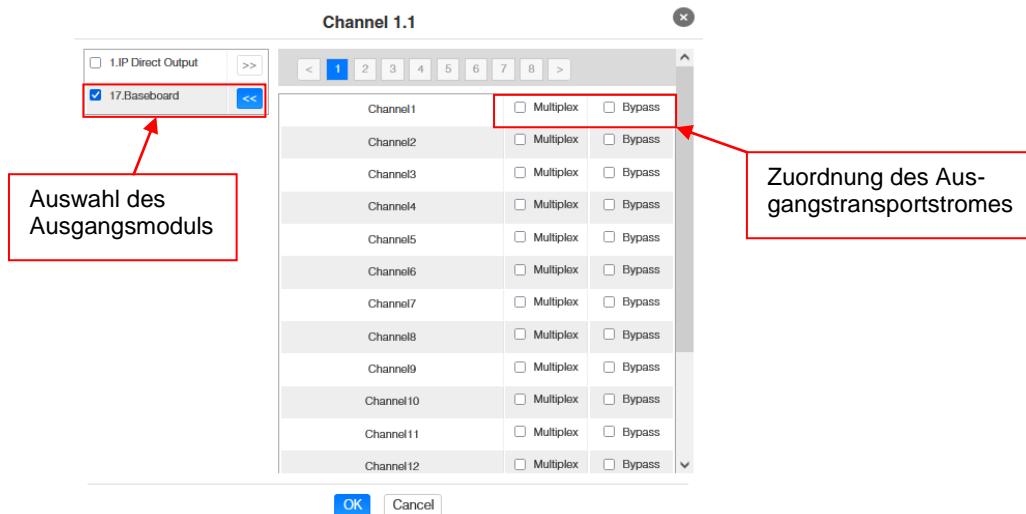

Nach Betätigen des Buttons „OK“ werden die Einstellungen übernommen.

## Zuordnung eines Service

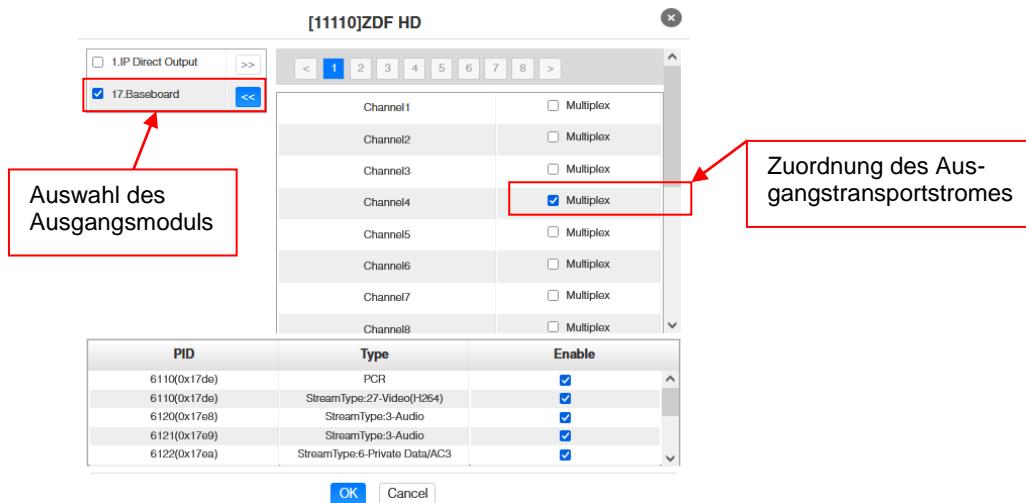

Nach Betätigen des Buttons „OK“ werden die Einstellungen übernommen.

## Achtung

Sollen die Programme als SPTS übertragen werden, muss jedem Programm ein eigener Multiplex auf dem Baseboard zugewiesen werden.

## Scanning Time

Die Scandauer kann im Bereich 1000 ... 12000 ms eingestellt werden. Diese sollte erhöht werden, wenn der Servicename nach einem Programm-Scan nicht angezeigt wird.



## SI Search Time

Die Scandauer für die SI-Daten kann im Bereich von 5000 ... 12000 ms eingestellt werden. Diese sollte erhöht werden, wenn die SI-Daten nach einem Scavorgang nicht angezeigt werden.



In der Registerkarte „**IP Output**“ erfolgt die Einstellung der IP-Ausgangsdaten des MPM 8500. Es können bis zu 64 Transportströme (SPTS oder MPTS) angelegt werden. Durch Anwahl der Registerkarten „Setting“ und „Service Configuration“ können diese Einstellungen gemäß der Anwendung vorgenommen werden. In der Registerkarte „Status“ erfolgt die Anzeige der Transportströme gemäß den vorgenommenen Einstellungen.

In der Registerkarte „**Status**“ können pro Transportstrom die Bitrate, die IP-Adresse und der Port sowie die effektive Bitrate kontrolliert werden. Der Button „**TS-Analysis**“ zeigt die Ergebnisse einer TS-Analyse pro Transportstrom an und der Button „**Service List**“ listet die Services aus dem angewählten Transportstrom auf.

## 1 TS-Analysis

Nach Betätigen des Buttons „**Reset Counter**“ startet die Aufnahme von Continuity Count Errors neu. Im Suchfeld kann gezielt nach Themen wie Bitrate, Service, Bandbreite, etc. gesucht werden.

## 2 Service List

Nach Anklicken eines Service werden alle servicespezifischen Daten angezeigt.

In der Registerkarte „**Setting**“ werden die IP-Ausgangsparameter programmiert. Die Kanäle müssen durch Anklicken der Auswahlbox „Enable“ gezielt aktiviert werden.

Nach Betätigen des Buttons „**Apply**“ werden die Einstellungen übernommen.

Um mehrere Kanäle gleichzeitig zu konfigurieren den Button „Batch Setting“ betätigen. Danach wird das folgende Menü geöffnet, um die Eckdaten zu konfigurieren.

The screenshot shows the 'Batch Setting' menu for the MPM 8500. It includes sections for 'Select All', 'Start Channel-End Channel', and 'Destination MAC'. A red box highlights the 'Batch Setting' button at the bottom right of the menu area. To the right of the menu, there is a status bar with tabs: Status, Biss, Basic Setting, Service Configuration, IP Output (highlighted in blue), System, Setting (highlighted in red), and Service Configuration. A red circle highlights the 'Apply' button in the top right corner of the main window.

Nach Betätigen des Buttons „**Apply**“ werden die Einstellungen übernommen.

### Hinweis

Es ist darauf zu achten, dass IP-Konflikte zwischen Baseboard, den Modulen und anderen Geräten vermieden werden.

Die Aktivierung von „**Destination MAC**“ ist nur in bestimmten Fällen, in denen ein Unicast-Stream aus unbekannten Gründen nicht empfangen werden kann nötig. Zur Abhilfe kann die Ziel-MAC aktiviert und die richtige Empfänger-MAC eingegeben werden. Diese wird an Stelle der Unicast-IP-Adresse verwendet.

Die Registerkarte „**Service Configuration**“ dient der Einstellung der Servicedaten (TS-Daten, NIT) für die zugeordneten Programme. Bei Bedarf kann hier eine Anpassung der Service-PIDs erfolgen.

Nach Anklicken des gewünschten Transportstromes öffnet sich das Menü zur Einstellung der folgenden Daten:


- Original Network ID (automatische Übernahme vom ersten Service bei MUX)
- TS ID (automatische Übernahme vom ersten Service bei MUX)
- Service ID (automatische Übernahme aus Transportstrom)
- Service Name (automatische Übernahme aus Transportstrom)
- Service Provider (automatische Übernahme aus Transportstrom)

The screenshot shows the 'Service Configuration' menu for a selected transport stream (TS ID: 1019). A red box highlights the 'Service Configuration' tab in the top right. A red arrow points from the 'TS' entry in the main menu to the detailed configuration window. The detailed window shows fields for 'Original Network ID' (0), 'TS ID' (1019), and a table for 'Service ID', 'Service Name', and 'Service Provider' with two entries: 10301 (Das Erste HD) and 10302 (arte HD). A red circle highlights the 'Apply' button in the top right of the detailed window.

Nach Anwahl wird das Menü zur Anpassung der NIT geöffnet.

The screenshot shows the 'NIT' configuration menu. It includes a 'NIT Network' section with 'Tag(Hex)' (40) and 'Data(Hex)' fields, and an 'Add' button. Below this is a table for 'Tag(Hex)', 'Data(Hex)', 'Length', and 'Operation' with one row: Tag(Hex) 40, Data(Hex) 123, Length 3, Operation X. A red box highlights the 'NIT' tab in the top left.

Nach Anklicken eines Service werden alle servicespezifischen Daten angezeigt.

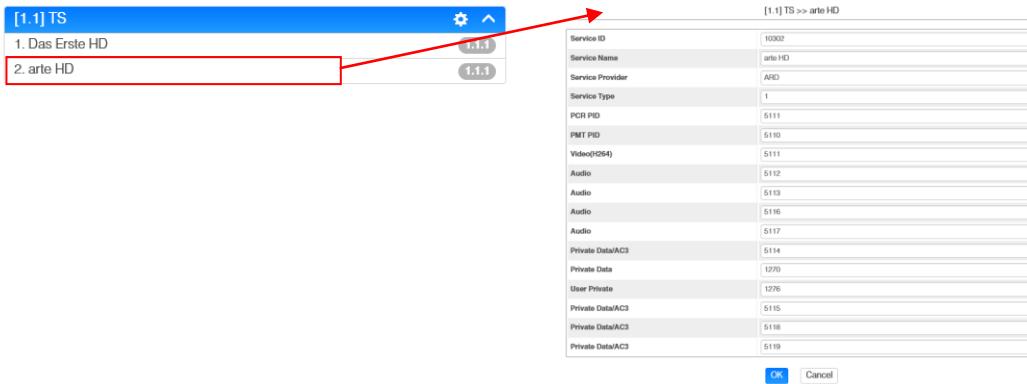

Alle Einstellungen müssen durch Betätigen des Buttons „**Apply**“ oder „**OK**“ in jedem Untermenü bestätigt werden. Danach erfolgt die Übernahme der eingestellten Konfigurationen.

Die Registerkarte „**System**“ ermöglicht die folgenden allgemeinen System-Einstellungen:

- Program Auto Scan (Aktivierung der automatischen Scan-Funktion)
- License (Sicherung und Laden von Lizenzdateien)
- SNMP MIB (Möglichkeit des MIB Exports)
- Logs (Anzeige und Sicherung von Log-Daten)
- Others (Reboot = Neustart des Grundgerätes)
- Reset to Defaults = Laden der Werkseinstellungen)

## Grundeinstellungen MPM8500

### Modul 1

Modul	Service Name	Reception	Transponder	SAT Frequency	LNB Frequency	SymbolRate	LNB Power	SID	Destination	Channel Baseboard	Destination IP	Destination Port	Protocol
1/1.1	Das Erste HD	A/HL	19	11494 MHz	9750 MHz	22000 kSym	Off	10301	Baseboard	1.1	239.1.1.100	10001	RTP
1/1.1	Arte HD	A/HL	19	11494 MHz	9750 MHz	22000 kSym	Off	10302	Baseboard	1.2	239.1.1.101	10001	RTP
1/1.1	SWR BW HD	A/HL	19	11494 MHz	9750 MHz	22000 kSym	Off	10303	Baseboard	1.3	239.1.1.102	10001	RTP
1/2.1	ZDF HD	A/HL	11	11362 MHz	9750 MHz	22000 kSym	Off	11110	Baseboard	1.4	239.1.1.103	10001	RTP
1/2.1	ZDF Neo	A/HL	11	11362 MHz	9750 MHz	22000 kSym	Off	11130	Baseboard	1.5	239.1.1.104	10001	RTP
1/3.1	Sat.1 Deutschland	A/HH	107	12545 MHz	10600 MHz	22000 kSym	Off	17500	Baseboard	1.6	239.1.1.105	10001	RTP
1/3.1	Pro 7 Deutschland	A/HH	107	12545 MHz	10600 MHz	22000 kSym	Off	17501	Baseboard	1.7	239.1.1.106	10001	RTP
1/3.1	Kabel 1 Deutschland	A/HH	107	12545 MHz	10600 MHz	22000 kSym	Off	17502	Baseboard	1.8	239.1.1.107	10001	RTP
1/3.1	Welt	A/HH	107	12545 MHz	10600 MHz	22000 kSym	Off	17503	Baseboard	1.9	239.1.1.108	10001	RTP
1/3.1	Kabel 1 Doku Deutschland	A/HH	107	12545 MHz	10600 MHz	22000 kSym	Off	17509	Baseboard	1.10	239.1.1.109	10001	RTP
1/4.1	RTL Deutschland	A/HH	89	12188 MHz	10600 MHz	27500 kSym	Off	12003	Baseboard	1.11	239.1.1.110	10001	RTP
1/4.1	RTL 2 Deutschland	A/HH	89	12188 MHz	10600 MHz	27500 kSym	Off	12020	Baseboard	1.12	239.1.1.111	10001	RTP
1/4.1	Toggo Plus	A/HH	89	12188 MHz	10600 MHz	27500 kSym	Off	12030	Baseboard	1.13	239.1.1.112	10001	RTP
1/4.1	Super RTL	A/HH	89	12188 MHz	10600 MHz	27500 kSym	Off	12040	Baseboard	1.14	239.1.1.113	10001	RTP
1/4.1	VOX	A/HH	89	12188 MHz	10600 MHz	27500 kSym	Off	12060	Baseboard	1.15	239.1.1.114	10001	RTP
1/4.1	N-TV	A/HH	89	12188 MHz	10600 MHz	27500 kSym	Off	12090	Baseboard	1.16	239.1.1.115	10001	RTP
1/5.1	3sat HD	A/VL	10	11347 MHz	9750 MHz	22000 kSym	Off	11150	Baseboard	1.17	239.1.1.116	10001	RTP
1/5.1	KIKA HD	A/VL	10	11347 MHz	9750 MHz	22000 kSym	Off	11160	Baseboard	1.18	239.1.1.117	10001	RTP
1/5.1	ZDF Info HD	A/VL	10	11347 MHz	9750 MHz	22000 kSym	Off	11170	Baseboard	1.19	239.1.1.118	10001	RTP
1/6.1	Bayerisches Fernsehen Süd HD	A/HL	25	11582 MHz	9750 MHz	22000 kSym	Off	10325	Baseboard	1.20	239.1.1.119	10001	RTP
1/6.1	NDR Fernsehen NDS HD	A/HL	25	11582 MHz	9750 MHz	22000 kSym	Off	10327	Baseboard	1.21	239.1.1.120	10001	RTP
1/6.1	Phoenix HD	A/HL	25	11582 MHz	9750 MHz	22000 kSym	Off	10331	Baseboard	1.22	239.1.1.121	10001	RTP
1/7.1	RBB Berlin HD	A/HL	61	10891 MHz	9750 MHz	22000 kSym	Off	10351	Baseboard	1.23	239.1.1.122	10001	RTP
1/7.1	MDR Fernsehen SA HD	A/HL	61	10891 MHz	9750 MHz	22000 kSym	Off	10353	Baseboard	1.24	239.1.1.123	10001	RTP
1/7.1	HR Fernsehen HD	A/HL	61	10891 MHz	9750 MHz	22000 kSym	Off	10355	Baseboard	1.25	239.1.1.124	10001	RTP
1/7.1	HR 3	A/HL	61	10891 MHz	9750 MHz	22000 kSym	Off	10467	Baseboard	1.26	239.1.1.125	10001	RTP
1/7.1	MDR Jump	A/HL	61	10891 MHz	9750 MHz	22000 kSym	Off	10478	Baseboard	1.27	239.1.1.126	10001	RTP
1/7.1	Radio Eins	A/HL	61	10891 MHz	9750 MHz	22000 kSym	Off	10488	Baseboard	1.28	239.1.1.127	10001	RTP
1/8.1	WDR Fernsehen Köln HD	A/HL	21	11523 MHz	9750 MHz	22000 kSym	Off	28332	Baseboard	1.29	239.1.1.128	10001	RTP

**Modul 2 (für MPS 16530)**

Modul	Service Name	Reception	Transponder	SAT Frequency	LNB Frequency	SymbolRate	LNB Power	SID	Destination	Channel Baseboard	Destination IP	Destination Port	Protocol
2/1.1	Tagesschau 24 HD	A/HL	39	11053 MHz	9750 MHz	22000 kSym	Off	10375	Baseboard	1.30	239.1.1.129	10001	RTP
2/1.1	One HD	A/HL	39	11053 MHz	9750 MHz	22000 kSym	Off	10376	Baseboard	1.31	239.1.1.130	10001	RTP
2/1.1	ARD Alpha HD	A/HL	39	11053 MHz	9750 MHz	22000 kSym	Off	10377	Baseboard	1.32	239.1.1.131	10001	RTP
2/1.1	SR Fernsehen HD	A/HL	39	11053 MHz	9750 MHz	22000 kSym	Off	10378	Baseboard	1.33	239.1.1.132	10001	RTP
2/1.1	Radio Bremen Fernsehen HD	A/HL	39	11053 MHz	9750 MHz	22000 kSym	Off	10379	Baseboard	1.34	239.1.1.133	10001	RTP
2/1.1	Bayern 3	A/HL	39	11053 MHz	9750 MHz	22000 kSym	Off	10402	Baseboard	1.35	239.1.1.134	10001	RTP
2/1.1	NDR 2 NDS	A/HL	39	11053 MHz	9750 MHz	22000 kSym	Off	10412	Baseboard	1.36	239.1.1.135	10001	RTP
2/1.1	SWR 1 BW	A/HL	39	11053 MHz	9750 MHz	22000 kSym	Off	10440	Baseboard	1.37	239.1.1.136	10001	RTP
2/1.1	WDR 3	A/HL	39	11053 MHz	9750 MHz	22000 kSym	Off	10453	Baseboard	1.38	239.1.1.137	10001	RTP
2/2.1	Eurosport 1 Germany	AHH	91	12226 MHz	10600 MHz	27500 kSym	Off	31200	Baseboard	1.39	239.1.1.138	10001	RTP
2/2.1	HSE Extra	AHH	91	12226 MHz	10600 MHz	27500 kSym	Off	31210	Baseboard	1.40	239.1.1.139	10001	RTP
2/2.1	EuroNews Deutschland	AHH	91	12226 MHz	10600 MHz	27500 kSym	Off	31230	Baseboard	1.41	239.1.1.140	10001	RTP
2/3.1	Sonnenklar TV	A/VH	104	12480 MHz	10600 MHz	27500 kSym	Off	32	Baseboard	1.42	239.1.1.141	10001	RTP
2/3.1	HSE	A/VH	104	12480 MHz	10600 MHz	27500 kSym	Off	40	Baseboard	1.43	239.1.1.142	10001	RTP
2/3.1	Tele 5	A/VH	104	12480 MHz	10600 MHz	27500 kSym	Off	51	Baseboard	1.44	239.1.1.143	10001	RTP
2/3.1	DMAX Deutschland	A/VH	104	12480 MHz	10600 MHz	27500 kSym	Off	63	Baseboard	1.45	239.1.1.144	10001	RTP
2/3.1	Astro TV	A/VH	104	12480 MHz	10600 MHz	27500 kSym	Off	661	Baseboard	1.46	239.1.1.145	10001	RTP
2/3.1	Sport 1	A/VH	104	12480 MHz	10600 MHz	27500 kSym	Off	900	Baseboard	1.47	239.1.1.146	10001	RTP
2/4.1	N24 Doku	AHH	103	12460 MHz	10600 MHz	27500 kSym	Off	48	Baseboard	1.48	239.1.1.147	10001	RTP
2/4.1	1-2-3 TV	AHH	103	12460 MHz	10600 MHz	27500 kSym	Off	662	Baseboard	1.49	239.1.1.148	10001	RTP
2/4.1	Anixe + HD	AHH	103	12460 MHz	10600 MHz	27500 kSym	Off	764	Baseboard	1.50	239.1.1.149	10001	RTP
2/4.1	Sixx Deutschland	AHH	103	12460 MHz	10600 MHz	27500 kSym	Off	776	Baseboard	1.51	239.1.1.150	10001	RTP
2/4.1	Disney Channel Deutschland	AHH	103	12460 MHz	10600 MHz	27500 kSym	Off	1793	Baseboard	1.52	239.1.1.151	10001	RTP
2/4.1	QVC Deutschland	AHH	103	12460 MHz	10600 MHz	27500 kSym	Off	1794	Baseboard	1.53	239.1.1.152	10001	RTP
2/5.1	Anixe HD Serie	AHL	53	10773 MHz	9750 MHz	22000 kSym	Off	21100	Baseboard	1.54	239.1.1.153	10001	RTP
2/5.1	QVC Deutschland HD	AHL	53	10773 MHz	9750 MHz	22000 kSym	Off	21103	Baseboard	1.55	239.1.1.154	10001	RTP
2/5.1	HSE HD	AHL	53	10773 MHz	9750 MHz	22000 kSym	Off	21104	Baseboard	1.56	239.1.1.155	10001	RTP
2/5.1	Genius Plus TV	AHL	53	10773 MHz	9750 MHz	22000 kSym	Off	21113	Baseboard	1.57	239.1.1.156	10001	RTP
2/6.1	HSE Extra HD	AHL	55	10803 MHz	9750 MHz	22000 kSym	Off	5501	Baseboard	1.58	239.1.1.157	10001	RTP
2/6.1	1-2-3 TV HD	AHL	55	10803 MHz	9750 MHz	22000 kSym	Off	5502	Baseboard	1.59	239.1.1.158	10001	RTP
2/6.1	QVC Zwei HD	AHL	55	10803 MHz	9750 MHz	22000 kSym	Off	5504	Baseboard	1.60	239.1.1.159	10001	RTP
2/7.1	Comedy Central Deutschland	A/VH	78	11973 MHz	10600 MHz	27500 kSym	Off	28676	Baseboard	1.61	239.1.1.160	10001	RTP
2/7.1	Nickelodeon Deutschland	A/VH	78	11973 MHz	10600 MHz	27500 kSym	Off	28680	Baseboard	1.62	239.1.1.161	10001	RTP
2/8.1	Sonnenklar TV HD	AHH	109	12574 MHz	10600 MHz	22000 kSym	Off	5400	Baseboard	1.63	239.1.1.162	10001	RTP
2/8.1	Juwelo HD	AHH	109	12574 MHz	10600 MHz	22000 kSym	Off	5403	Baseboard	1.64	239.1.1.163	10001	RTP
2/8.1	Pearl TV HD	AHH	109	12574 MHz	10600 MHz	22000 kSym	Off	5404	Baseboard	1.65	239.1.1.164	10001	RTP

## 8.2 Programmierung des DVB-S/S2-Empfangsmodules mit CI MPM 4502 (Single-Slot-Modul)

Das MPM 4502 ist ein 4-Kanal-DVB-S/S2-Empfangsmodul mit 2 HF-Eingängen für 4 SAT-Eingangssignale. Es verfügt über 2 CI-Slots, auf welche die Services unabhängig verteilt werden können. Das Modul unterstützt verschiedene Schaltsignale (13/18 V, 22 kHz sowie DiSEqC1.0 /DiSEqC1.1) zur Vorschaltung von Multischaltern als Eingangsverteiler. Das Modul verfügt über einen direkten IP-Ausgang (CBR).

### Hinweis

**Sollen die IP-Ausgangstransportströme als VBR-Signal übertragen werden, ist das Routing über das Baseboard nötig. Die direkt am Modul vorhandenen IP-Transportströme unterstützen nur den CBR-Mode.**

Durch Anklicken des Modules in der Modulliste erfolgt die Weiterleitung zur Programmieroberfläche des angewählten Moduls. In diesem Menü erfolgt die Einstellung der systemspezifischen Parameter des MPM 4502. Durch Anwahl der Registerkarten „CI“, „Biss“, „Basic Setting“, „Service Configuration“, „IP Output“ und „System“ können diese Einstellungen gemäß der Anwendung vorgenommen werden.

In der Registerkarte „Status“ erfolgt die Anzeige des Lock-Status sowie der Performance der Eingangs-Transportströme gemäß den vorgenommenen Einstellungen.

Channel	Locked Status	Total Bitrate(Mbps)	Effective Bitrate(Mbps)	PER	RF Level	CNR(dB)	Link Margin(dB)	FEC Code Rate	Modulation	TS Analysis	Service List
1.1	Unlocked	0.000	0.000	0.00000000	-	0.000	0	1/2	QPSK	<b>1</b>	<b>2</b>
1.2	Unlocked	0.000	0.000	0.00000000	-	0.000	0	1/2	QPSK		
2.1	Locked	49.187	45.836	0.00000000	-35dBm (73dBpV)	17.000	10	9/10	QPSK		
2.2	Locked	59.882	53.905	0.00000000	-36dBm (72dBpV)	18.100	10	3/4	8PSK		

PER Packet Error Rate

RF Level SAT-Eingangsspeigel des Moduls

Link Margin (dB) Pegelreserve am Eingang

### 1 TS-Analysis

Nach Betätigen des Buttons „Reset Counter“ startet die Aufnahme von Continuity Count Errors neu.

Im Suchfeld kann gezielt nach Themen wie PID, Service, Typ, etc. gesucht werden.

PID	Bitrate(Mbps)	Bandwidth(%)	Continuity Count Error	Type	Service
0x1a77(6775)	0.000	0.000	0	Other	
0x1a82(6786)	0.006	0.012	0	ECM	Sky Crime HD
0x1a80(6808)	0.006	0.012	0	ECM	Sky Nature HD
0x1a9e(6814)	0.000	0.000	0	Other	
0x1ab6(6839)	0.006	0.012	0	ECM	Sky Cinema Premieren HD
0x1aba(6842)	0.006	0.012	0	ECM	Sky Sport Top Event HD
0x1abc(6844)	0.006	0.012	0	ECM	
0x1ad7(6871)	0.000	0.000	0	Other	Discovery HD
0x1b01(6912)	0.000	0.000	0	Other	

## 2 Service List

Nach Klick auf Service List werden alle Kanäle mit den empfangenen Services angezeigt. Nach Anwahl eines Services werden die Service Informationen dargestellt.

#	Service
1	[13] Sky Crime HD
2	[118] Sky Nature HD
3	[129] Sky Sport Top Event HD
4	[130] Discovery HD
5	[131] Sky Cinema Premieren...
6	[516] Sky Cinema Classics HD

Type	PID	Bitrate(Mbps)
PCR	1535(0x5ff)	8.540
PMT	101(0x65)	0.015
StreamType:27-Video(H264)	1535(0x5ff)	8.540
StreamType:6-Private Data/AC3	1539(0x603)	0.393
StreamType:6-Private Data/AC3	1540(0x604)	0.197
ECM	7040(0x1b82)	0.006
ECM	6796(0x1a82)	0.006
ECM	7296(0x1c82)	0.006
ECM	8066(0x1f82)	0.006

In der Registerkarte „CI“ werden die Informationen zu den gesteckten CA-Modulen und Karten angezeigt. Bei Notwendigkeit kann ein automatisches Reset der CAMs programmiert werden. Ebenso sind der Aufruf des internen CA-Menüs und damit erweiterte Einstellungen möglich (sofern dies vom CAM unterstützt wird).

CAM Card Name	CA System ID	Reset
Videoguard CA-SMIT	2444	<input type="button" value="Reset"/>

Service Information	PID	Descrambling Status
3.1 [13] Sky Crime HD	1535(Video)	Descrambling Success
3.1 [13] Sky Crime HD	1539(Audio)	Descrambling Success
3.1 [13] Sky Crime HD	1540(Audio)	Descrambling Success

Nach Betätigen des Buttons „Apply“ werden die Einstellungen übernommen.

In der Registerkarte „**Biss**“ kann eine Biss-ID inklusive der zugehörigen Parameter (Mode, Key und Injected ID) erstellt werden. Anschließend kann in der Serviceliste die Biss ID aktiviert werden.

Biss ID	Mode	Key	Injected ID
No Data			

Service Information		Biss ID
[2.1][13] Sky Crime HD		Biss-Off
[2.1][118] Sky Nature HD		Biss-Off
[2.1][129] Sky Sport Top Event HD		Biss-Off
[2.1][130] Discovery HD		Biss-Off
[2.1][131] Sky Cinema Promiceron HD		Biss-Off
[2.1][516] Sky Cinema Classics HD		Biss-Off
[2.2][113] HISTORY Channel HD		Biss-Off
[2.2][125] CNBC HD		Biss-Off
[2.2][135] Sky Cinema Promiceron +24 HD		Biss-Off
[2.2][136] Warner TV Comedy HD		Biss-Off
[2.2][142] Sky Showcase HD		Biss-Off
[2.2][168] Motorvision TV		Biss-Off
[2.2][4011] Jukebox		Biss-Off

Nach Betätigen des Buttons „**Apply**“ werden die Einstellungen übernommen.

In der Registerkarte „**Basic Setting**“ werden die SAT-Eingangsparameter programmiert. Es wird die Sendefrequenz, die Symbolrate und die Lokaloszillatorfrequenz des LNB eingestellt. Zur Versorgung des LNB mit Spannung/Schaltsignalen können die Einstellungen LNB Power, LNB 22 kHz, DiSEqC Level und DiSEqC Port vorgenommen und damit auch Multischalter zur SAT-Signalzuführung genutzt werden.

Channel	Satellite Frequency(MHz)	SymbolRate(KBaud)	LNB Frequency(MHz)	LNB Power	LNB 22kHz	DiSEqC Level	DiSEqC Port	DiSEqC Bytes(Hex)	Reboot Tuner
1.1	11494	22000	9750	off	off	Disable	1	FFFFFFFFFFFF	<b>Reboot</b>
1.2	11362	22000	9750	off	off	Disable	1	FFFFFFFFFFFF	<b>Reboot</b>
2.1	11914	27500	10600	off	off	Disable	1	FFFFFFFFFFFF	<b>Reboot</b>
2.2	12382	27500	10600						<b>Reboot</b>

<b>Satellite Frequency (MHz)</b>	950~14500
<b>Symbol Rate (KBaud)</b>	1000~45000
<b>LNB Frequency (MHz)</b>	0~13550
<b>LNB Power</b>	Off/13V/18V
<b>LNB 22KHz</b>	Off/22kHz
<b>DiSEqC Level</b>	1.0, 1.1, 1.1+1.0, Manually Defined, Disable
<b>DiSEqC Port</b>	1,2,3,4
<b>DiSEqC Bytes</b>	In HEX

Für die „**LNB-Frequency**“ bitte die entsprechende LOF (Lokal-Oszillator-Frequenz) des LNBs eintragen.

Über den „**Reboot**“-Button kann manuell ein Neustart des ausgewählten Tuners erfolgen.

Nach Betätigen des Buttons „**Apply**“ werden die Einstellungen übernommen.

Die Registerkarte „**Service Configuration**“ dient der Zuordnung der vorhandenen Eingangskanäle oder Services zu einem Ausgangsmodul und den darin vorhandenen Ausgangstransportströmen.  
 Nach Anklicken des gewünschten Kanals öffnet sich das Menü zur Zuordnung des Kanals zu einem Ausgangsmodul und den darin verfügbaren Multiplex oder zur Aktivierung im Bypass-Mode.  
 Das gezielte Zuordnen einzelner Services zu einem Ausgangsmodul und Ausgangstransportstrom erfolgt durch Anklicken von direkt hinter dem gewünschten Service.

Nach Betätigen des Buttons „**Apply**“ werden die Einstellungen übernommen.

#### Zuordnung eines Kanals (gesamter Transportstrom)

Nach Betätigen des Buttons „**OK**“ werden die Einstellungen übernommen.

#### Zuordnung eines Services

Nach Betätigen des Buttons „**OK**“ werden die Einstellungen übernommen.

## Achtung

Sollen die Programme als SPTS übertragen werden, muss jedem Programm ein eigener Multiplex auf dem Baseboard zugewiesen werden.

## Scanning Time

Die Scandauer kann im Bereich 1000 ... 12000 ms eingestellt werden. Diese sollte erhöht werden, wenn der Servicename nach einem Programm-Scan nicht angezeigt wird.

## SI Search Time

Die Scandauer für die SI-Daten kann im Bereich von 5000 ... 12000 ms eingestellt werden. Diese sollte erhöht werden, wenn die SI-Daten nach einem Scanvorgang nicht angezeigt werden.

In der Registerkarte „**IP Output**“ erfolgt die Einstellung der IP-Ausgangsdaten des MPM 4502. Es können bis zu 60 Transportströme (SPTS oder MPTS) angelegt werden. Durch Anwahl der Registerkarten „Setting“ und „Service Configuration“ können diese Einstellungen gemäß der Anwendung vorgenommen werden. In der Registerkarte „Status“ erfolgt die Anzeige der Transportströme gemäß den vorgenommenen Einstellungen.

In der Registerkarte „**Status**“ können pro Transportstrom die Bitrate, die IP-Adresse und der Port sowie die effektive Bitrate kontrolliert werden. Der Button „**TS-Analysis**“ zeigt die Ergebnisse einer TS-Analyse pro Transportstrom an und der Button „**Service List**“ listet die Services aus dem angewählten Transportstrom auf.

### 1 TS-Analysis

Nach Betätigen des Buttons „**Reset Counter**“ startet die Aufnahme von Continuity Count Errors neu. Im Suchfeld kann gezielt nach Themen wie Bitrate, Service, Bandbreite, etc. gesucht werden.

### 2 Service List

Nach Anklicken eines Services werden alle servicespezifischen Daten angezeigt.

In der Registerkarte „**Setting**“ werden die IP-Ausgangsparameter programmiert. Die Kanäle müssen durch Anklicken der Auswahlbox „Enable“ gezielt aktiviert werden.

Channel	Enable	Source Port	Destination IP Address	Destination Port	Protocol	Pkt Length	Bitrate(Mbps)	Enable Destination MAC	Destination MAC
1.1	<input checked="" type="checkbox"/>	1234	239.1.1.2	1234	RTP	7	50	Disable	01:00:5E:01:01:02
1.2	<input checked="" type="checkbox"/>	1234	239.1.1.5	1234	RTP	7	25	Disable	01:00:5E:01:01:05
1.3	<input checked="" type="checkbox"/>	1234	239.1.1.8	1234	RTP	7	30	Disable	01:00:5E:01:01:08
1.4	<input type="checkbox"/>	1234	227.10.30.4	1234	RTP	7	50	Disable	01:00:5E:0A:1E:04
1.5	<input type="checkbox"/>	1234	227.10.30.5	1234	RTP	7	25	Disable	00:00:00:00:00:00
1.6	<input type="checkbox"/>	1234	227.10.30.6	1234	RTP	7	25	Disable	00:00:00:00:00:00

Nach Betätigen des Buttons „**Apply**“ werden die Einstellungen übernommen.

### Hinweis

Es ist darauf zu achten, dass IP-Konflikte zwischen Baseboard, den Modulen und anderen Geräten vermieden werden.

Die Aktivierung von „**Destination MAC**“ ist nur in bestimmten Fällen, in denen ein Unicast-Stream aus unbekannten Gründen nicht empfangen werden kann, nötig. Zur Abhilfe kann die Ziel-MAC aktiviert und die richtige Empfänger-MAC eingegeben werden. Diese wird an Stelle der Unicast-IP-Adresse verwendet.

Die Registerkarte „**Service Configuration**“ dient der Einstellung der Servicedaten (TS-Daten, NIT) für die zugeordneten Programme. Bei Bedarf kann hier eine Anpassung der Service-PIDs erfolgen.

Nach Anklicken des gewünschten Transportstromes öffnet sich das Menü zur Einstellung der folgenden Daten:

- Original Network ID (automatische Übernahme vom ersten Service bei MUX)
- TS ID (automatische Übernahme vom ersten Service bei MUX)
- Service ID (automatische Übernahme aus Transportstrom)
- Service Name (automatische Übernahme aus Transportstrom)
- Service Provider (automatische Übernahme aus Transportstrom)

NO.	Service ID	Service Name	Service Provider
1	118	Sky Nature HD	SKY

Nach Anwahl wird das Menü zur Anpassung der NIT geöffnet.

Tag	Data	Length	Operation
0x40	PolyNet	7	X

ONID	TS ID	Descriptor	Operation
		No Data	

Network ID
0

Nach Anklicken eines Services werden alle servicespezifischen Daten angezeigt.

Service ID	118
Service Name	Sky Nature HD
Service Provider	SKY
Service Type	25
PCR PID	511
PMT PID	97
Video(H264)	511
Private Data/AC3	515
Private Data/AC3	516

OK Cancel

Alle Einstellungen müssen durch Betätigen des Buttons „**Apply**“ oder „**OK**“ in jedem Untermenü bestätigt werden. Danach erfolgt die Übernahme der eingestellten Konfigurationen.

Die Registerkarte „**System**“ ermöglicht die folgenden allgemeinen System-Einstellungen:

- Program Auto Scan (Aktivierung der automatischen Scan-Funktion)
  - EIT MUX (Aktivierung EIT-Multiplexing)
  - License (Sicherung und Laden von Lizenzdateien)
  - SNMP MIB (Möglichkeit des MIB Exports)
  - Logs (Anzeige und Sicherung von Log-Daten)
  - Others (Reboot = Neustart des Grundgerätes)
- Reset to Defaults = Laden der Werkseinstellungen)

Product ID	DE10143390137
Import License	<input type="text"/> <a href="#">Browse</a> <a href="#">Upload</a>
Export License	<a href="#">Export</a>
Export MIB	<a href="#">Export</a>
Logs	<a href="#">Open</a>
Others	<a href="#">Reboot</a> <a href="#">Reset to Defaults</a>

## Grundeinstellungen MPM4502

### Modul 1

Modul	Service Name	Reception	Transponder	SAT Frequency	LNB Frequency	SymbolRate	LNB Power	SID	Destination	Channel Baseboard	Destination IP	Destination Port	Protocol
1/1.1	Das Erste HD	A/HL	19	11494 MHz	9750 MHz	22000 kSym	Off	10301	Baseboard	1.1	239.1.1.100	10001	RTP
1/1.1	Arte HD	A/HL	19	11494 MHz	9750 MHz	22000 kSym	Off	10302	Baseboard	1.2	239.1.1.101	10001	RTP
1/1.1	SWR BW HD	A/HL	19	11494 MHz	9750 MHz	22000 kSym	Off	10303	Baseboard	1.3	239.1.1.102	10001	RTP
1/2.1	ZDF HD	A/HL	11	11362 MHz	9750 MHz	22000 kSym	Off	11110	Baseboard	1.4	239.1.1.103	10001	RTP
1/2.1	ZDF Neo	A/HL	11	11362 MHz	9750 MHz	22000 kSym	Off	11130	Baseboard	1.5	239.1.1.104	10001	RTP
2/1.1	Sat.1 Deutschland	A/HH	107	12545 MHz	10600 MHz	22000 kSym	Off	17500	Baseboard	1.6	239.1.1.105	10001	RTP
2/1.1	Pro 7 Deutschland	A/HH	107	12545 MHz	10600 MHz	22000 kSym	Off	17501	Baseboard	1.7	239.1.1.106	10001	RTP
2/1.1	Kabel 1 Deutschland	A/HH	107	12545 MHz	10600 MHz	22000 kSym	Off	17502	Baseboard	1.8	239.1.1.107	10001	RTP
2/1.1	Welt	A/HH	107	12545 MHz	10600 MHz	22000 kSym	Off	17503	Baseboard	1.9	239.1.1.108	10001	RTP
2/1.1	Kabel 1 Doku Deutschland	A/HH	107	12545 MHz	10600 MHz	22000 kSym	Off	17509	Baseboard	1.10	239.1.1.109	10001	RTP
2/2.1	RTL Deutschland	A/HH	89	12188 MHz	10600 MHz	27500 kSym	Off	12003	Baseboard	1.11	239.1.1.110	10001	RTP
2/2.1	RTL 2 Deutschland	A/HH	89	12188 MHz	10600 MHz	27500 kSym	Off	12020	Baseboard	1.12	239.1.1.111	10001	RTP
2/2.1	Toggo Plus	A/HH	89	12188 MHz	10600 MHz	27500 kSym	Off	12030	Baseboard	1.13	239.1.1.112	10001	RTP
2/2.1	Super RTL	A/HH	89	12188 MHz	10600 MHz	27500 kSym	Off	12040	Baseboard	1.14	239.1.1.113	10001	RTP
2/2.1	VOX	A/HH	89	12188 MHz	10600 MHz	27500 kSym	Off	12060	Baseboard	1.15	239.1.1.114	10001	RTP
2/2.1	N-TV	A/HH	89	12188 MHz	10600 MHz	27500 kSym	Off	12090	Baseboard	1.16	239.1.1.115	10001	RTP

## 8.3 Programmierung des DVB-C-Empfangsmodules mit CI MPM 4702 (Single-Slot-Modul)

Das MPM 4702 ist ein 4-Kanal-DVB-C-Empfangsmodul mit einem HF-Eingang für 4 DVB-C-Eingangssignale. Es verfügt über 2 CI-Slots, auf welche die Services unabhängig verteilt werden können.

Durch Anklicken des Moduls in der Modulliste erfolgt die Weiterleitung zur Programmieroberfläche des angewählten Moduls. In diesem Menü erfolgt die Einstellung der systemspezifischen Parameter des MPM 4702. Durch Anwahl der Registerkarten „CI“, „Basic Setting“, „Service Configuration“ und „System“ können diese Einstellungen gemäß der Anwendung vorgenommen werden.

In der Registerkarte „Status“ erfolgt die Anzeige des Lock-Status sowie der Performance der Eingangs-Transportströme gemäß den vorgenommenen Einstellungen.

Channel	Locked Status	Total Bitrate(Mbps)	Effective Bitrate(Mbps)	PER	RF Level	TS Analysis	Service List
1.1	Locked	50.871	48.108	0.00000000	-22dBm (8dBfV)		<b>1</b>
1.2	Locked	37.153	26.985	0.998970368	-25dBm (8dBfV)		<b>2</b>
1.3	Locked	29.727	28.826	0.986919808	-26dBm (8dBfV)		
1.4	Unlocked	0.000	0.000	0.00000000	-		

PER  
RF Level  
Packet Error Rate  
HF-Eingangsspegl des Transportstroms

### 1 TS-Analyse

Nach Betätigen des Buttons „Reset Counter“ startet die Aufnahme von Continuity Count Errors neu.  
Im Suchfeld kann gezielt nach Themen wie PID, Service, Typ, etc. gesucht werden.

PID	Bitrate(Mbps)	Bandwidth(%)	Continuity Count Error	Type	Service
0x119(503)	0.000	0.000	0	Other	
0x1fa(506)	0.469	0.922	0	PCR, Video	rbb Brandenburg, rbb Berlin
0x259(601)	5.785	11.372	0	Other	rbb Brandenburg, rbb Berlin
0x25a(602)	0.203	0.399	0	Audio	rbb Brandenburg, rbb Berlin
0x25b(603)	0.203	0.399	0	Audio	rbb Brandenburg, rbb Berlin
0x25c(604)	0.263	0.517	0	Audio	rbb Brandenburg, rbb Berlin
0x29e(670)	0.010	0.020	0	AIT	rbb Brandenburg, rbb Berlin
0x321(801)	2.961	5.621	0	Other	rbb Brandenburg, rbb Berlin
0x322(802)	0.203	0.399	0	Other	

### 2 Service List

Nach Klick auf Service List werden alle Kanäle mit den empfangenen Services angezeigt. Nach Anwahl eines Services werden die Service Informationen dargestellt.

Type	PID	Bitrate(Mbps)
PCR	6120(0x17de)	0.000
PIR	6120(0x17de)	0.000
StreamType:21_Video(0x054)	6110(0x11de)	0.000
StreamType:3_Audio	6120(0x17ab)	0.000
StreamType:3_Audio	6121(0x17ea)	0.000
StreamType:6_Private Data(AC3)	6122(0x17ea)	0.000
StreamType:3_Audio	6123(0x17ab)	0.000
StreamType:6_Private Data(AC3)	6130(0x172)	0.000
StreamType:6_Private Data(AC3)	6131(0x177)	0.000
AIT	6170(0x181a)	0.000

In der Registerkarte „**CI**“ werden die Informationen zu den gesteckten CA-Modulen und Karten angezeigt. Bei Notwendigkeit kann ein automatisches Reset der CAMs programmiert werden. Ebenso sind der Aufruf des internen CA-Menüs und damit erweiterte Einstellungen möglich (sofern dies vom CAM unterstützt wird).

CAM Max Bitrate: 104 Mbps

CAM1 Auto Reset: Disable    CAM2 Auto Reset: Disable

CAM1 (Not inserted)

**CAM2 (Initialize Success)**

CAM Card Name: Videoguard CA-SMIT  
CA System ID: 2444

**Service Information**

	PID	Descrambling Status
3.1 [19] Sky Crime HD	1535(Video)	Descrambling Success
3.1 [19] Sky Crime HD	1539(Audio)	Descrambling Success
3.1 [19] Sky Crime HD	1540(Audio)	Descrambling Success

**MMI Setting**

**Apply**

**CAM2 CMD List**

CA Diagnostics, Page 2:

- MENU
- ESC
- CA status: 00 00 00 00 00 00 00 00
- Time since boot, min: 31440
- ...
- Back...

**Apply**

In der Pulldown-Liste „**CAM Max Bitrate**“ kann die maximale CAM-Bitrate von 48 Mbit/s bis 104 Mbit/s in Abhängigkeit von der gesamten effektiven Bitrate der zu entschlüsselnden Dienste ausgewählt werden.

Nach Betätigen des Buttons „**Apply**“ werden die Einstellungen übernommen.

In der Registerkarte „**Basic Setting**“ werden die HF-Eingangsparameter programmiert. Es wird die Empfangsfrequenz pro Tuner eingestellt.

**Basic Setting**

**Reboot Tuner**

Reboot

**Name Range**

Name	Range
Frequency (KHz)	47000~862000
Symbol Rate(KSym/s)	3600~6950

**Apply**

Über den „**Reboot**“-Button kann manuell ein Neustart des ausgewählten Tuners erfolgen.

Nach Betätigen des Buttons „**Apply**“ werden die Einstellungen übernommen.

Die Registerkarte „**Service Configuration**“ dient der Zuordnung der vorhandenen Eingangskanäle oder Services zu einem Ausgangsmodul und den darin vorhandenen Ausgangstransportströmen.  
 Nach Anklicken des gewünschten Kanals öffnet sich das Menü zur Zuordnung des Kanals zu einem Ausgangsmodul und den darin verfügbaren Multiplex oder zur Aktivierung im Bypass-Mode.  
 Das gezielte Zuordnen einzelner Services zu einem Ausgangsmodul und Ausgangstransportstrom erfolgt durch Anklicken von direkt hinter dem gewünschten Service.

Nach Betätigen des Buttons „**Apply**“ werden die Einstellungen übernommen.

#### Zuordnung eines Kanals (gesamter Transportstrom)

Nach Betätigen des Buttons „**OK**“ werden die Einstellungen übernommen.

#### Zuordnung eines Services

Nach Betätigen des Buttons „**OK**“ werden die Einstellungen übernommen.

## Achtung

Sollen die Programme als SPTS übertragen werden, muss jedem Programm ein eigener Multiplex auf dem Baseboard zugewiesen werden.

## Scanning Time

Die Scandauer kann im Bereich 1000 ... 12000 ms eingestellt werden. Diese sollte erhöht werden, wenn der Servicename nach einem Programm-Scan nicht angezeigt wird.

## SI Search Time

Die Scandauer für die SI-Daten kann im Bereich von 5000 ... 12000 ms eingestellt werden. Diese sollte erhöht werden, wenn die SI-Daten nach einem Scanvorgang nicht angezeigt werden.

Die Registerkarte „**System**“ ermöglicht die folgenden allgemeinen System-Einstellungen:

- Program Auto Scan (Aktivierung der automatischen Scan-Funktion)
- License (Sicherung und Laden von Lizenzdateien)
- SNMP MIB (Möglichkeit des MIB Exports)
- Logs (Anzeige und Sicherung von Log-Daten)
- Others (Reboot = Neustart des Grundgerätes  
Reset to Defaults = Laden der Werkseinstellungen)

## Grundeinstellungen MPM4702

Modul	Reception	Frequency	Destination	Channel Baseboard	Destination IP	Destination Port	Protocol
1/1.1	DVB-C	322000 kHz	Baseboard	1.1	239.1.1.100	10001	RTP
1/1.2	DVB-C	330000 kHz	Baseboard	1.2	239.1.1.101	10001	RTP
1/1.3	DVB-C	338000 kHz	Baseboard	1.3	239.1.1.102	10001	RTP
1/1.4	DVB-C	346000 kHz	Baseboard	1.4	239.1.1.103	10001	RTP

## 8.4 Programmierung des DVB-T/-T2-Empfangsmodules mit CI MPM 4802 (Single-Slot-Modul)

Das MPM 4802 ist ein 4-Kanal-DVB-T/-T2-Empfangsmodul mit einem HF-Eingang für 4 DVB-T/T2-Eingangssignale. Es verfügt über 2 CI-Slots, auf welche die Services unabhängig verteilt werden können.

Durch Anklicken des Moduls in der Modulliste erfolgt die Weiterleitung zur Programmieroberfläche des angewählten Moduls. In diesem Menü erfolgt die Einstellung der systemspezifischen Parameter des MPM 4802. Durch Anwahl der Registerkarten „CI“, „Basic Setting“, „Service Configuration“ und „System“ können diese Einstellungen gemäß der Anwendung vorgenommen werden.

In der Registerkarte „Status“ erfolgt die Anzeige des Lock-Status sowie der Performance der Eingangs-Transportströme gemäß den vorgenommenen Einstellungen.

Channel	Locked Status	Total Bitrate(Mbps)	Effective Bitrate(Mbps)	RF Level	TS Analysis	Service List
1.1	Locked	30.160	14.020	-60dBm (48dBuV)		
1.2	Locked	30.160	12.464	-59dBm (49dBuV)		
1.3	Unlocked	0.000	0.000	-		
1.4	Unlocked	0.000	0.000	-		

### 1 TS-Analysis

Nach Betätigen des Buttons „Reset Counter“ startet die Aufnahme von Continuity Count Errors neu. Im Suchfeld kann gezielt nach Themen wie PID, Service, Typ, etc. gesucht werden.

PID	Bitrate(Mbps)	Bandwidth(%)	Continuity Count Error	Type	Service
0x0(0)	0.009	0.030	0	PAT	
0x1(1)	0.015	0.050	0	Other	
0x10(16)	0.003	0.010	0	Other	
0x11(17)	0.004	0.013	0	SDT	
0x12(18)	0.132	0.438	0	Other	
0x14(20)	0.000	0.000	0	Other	
0x61(97)	0.006	0.020	0	PMT	Sky One HD
0x6a(106)	0.006	0.020	0	PMT	Heimatkanal

### 2 Service List

Nach Klick auf Service List werden alle Kanäle mit den empfangenen Services angezeigt. Nach Anwahl eines Services werden die Service Informationen dargestellt.

Channel	Locked Status	Total Bitrate(Mbps)	Effective Bitrate(Mbps)	RF Level	TS Analysis	Service List
1.1	Locked	30.161	11.609	-60dBm (48dBuV)		
1.2	Locked	30.161	13.458	-59dBm (49dBuV)		
1.3	Unlocked	0.000	0.000	-		
1.4	Unlocked	0.000	0.000	-		

Channel : 1.1	Channel : 1.2	Channel : 1.3	Channel : 1.4
# Service	# Service	# Service	# Service
1 [22] Heimatkanal	1 [13001] ORF1	No Data	No Data
2 [147] Sky One HD	2 [13002] ORF2		

[13001] ORF1

Type	PID	Bitrate(Mbps)
PCR	160(0xa0)	5.449
PMT	100(0x3e0)	0.005
StreamType:2-Video(MPEG2)	160(0xa0)	5.449
StreamType:3-Audio	161(0xa1)	0.173
StreamType:3-Audio	162(0xa2)	0.173
StreamType:6-Private Data/AC3	163(0xa3)	0.469
StreamType:6-Private Data/AC3	165(0xe5)	0.263
AII	7310(0x1c8e)	0.002
ECM	101(0x65)	0.005
ECM	103(0x67)	0.005
ECM	25(0x1b)	0.009
ECM	253(0xf1d)	0.005

Close

In der Registerkarte „**CI**“ werden die Informationen zu den gesteckten CA-Modulen und Karten angezeigt. Bei Notwendigkeit kann ein automatisches Reset der CAMs programmiert werden. Ebenso sind der Aufruf des internen CA-Menüs und damit erweiterte Einstellungen möglich (sofern dies vom CAM unterstützt wird).

CAM Max Bitrate: 72 Mbps

CAM1 Auto Reset: Disable    CAM2 Auto Reset: Disable

**CAM1 (Initialize Success)**

CAM Card Name CA System ID	Irdeto Access-SMIT 1616	Reset
Service Information	PID	Descrambling Status
2.1[13001]0RF1	1600[Video]	Descrambling Success
2.1[13001]0RF1	161[Audio]	Descrambling Success
2.1[13001]0RF1	162[Audio]	Descrambling Success
2.1[13001]0RF1	163[Audio]	Descrambling Success
2.1[13001]0RF1	165[Audio]	Descrambling Success
2.1[13002]0RF2	500[Video]	Descrambling Success
2.1[13002]0RF2	501[Video]	Descrambling Success
2.1[13002]0RF2	502[Audio]	Descrambling Success
2.1[13002]0RF2	503[Audio]	Descrambling Success
2.1[13002]0RF2	505[Audio]	Descrambling Success

**CAM2 (Initialize Success)**

CAM Card Name CA System ID	Videoguard CA-SMIT 2444	Reset
Service Information	PID	Descrambling Status
1.1[22] Heimatkanal	2815[Video]	Descrambling Failed
1.1[22] Heimatkanal	2816[Audio]	Descrambling Failed
1.1[147] Sky One HD	511[Video]	Descrambling Success
1.1[147] Sky One HD	515[Audio]	Descrambling Success
1.1[147] Sky One HD	516[Audio]	Descrambling Success

**CAM 1 CMD List**

- MENU
- ESC
- (28)Please wait: initializing your viewing card...

Pin:

Back    Apply

In der Pulldown-Liste „**CAM Max Bitrate**“ kann die maximale CAM-Bitrate von 48 Mbit/s bis 104 Mbit/s in Abhängigkeit von der gesamten effektiven Bitrate der zu entschlüsselnden Dienste ausgewählt werden.

Nach Betätigen des Buttons „**Apply**“ werden die Einstellungen übernommen.

In der Registerkarte „**Basic Setting**“ werden die HF-Eingangsparameter programmiert. Es wird die Empfangsfrequenz und Bandbreite sowie die PLP ID (DVB-T2) pro Tuner eingestellt.

T2 MI: □

Channel	Frequency(KHz)	Bandwidth(MHz)	PLP ID	Reboot Tuner
1.1	306000	8	0	<input type="button" value="Reboot"/>
1.2	314000	8	0	<input type="button" value="Reboot"/>
1.3	322000	8	0	<input type="button" value="Reboot"/>
1.4	330000	8	0	<input type="button" value="Reboot"/>


**Apply**

Name	Range
Frequency (KHz)	47000~862000
Bandwidth (MHz)	6/7/8

Über den „**Reboot**“-Button kann manuell ein Neustart des ausgewählten Tuners erfolgen.


Nach Betätigen des Buttons „**Apply**“ werden die Einstellungen übernommen.

Die Registerkarte „**Service Configuration**“ dient der Zuordnung der vorhandenen Eingangskanäle oder Services zu einem Ausgangsmodul und den darin vorhandenen Ausgangstransportströmen.  
 Nach Anklicken des gewünschten Kanals öffnet sich das Menü zur Zuordnung des Kanals zu einem Ausgangsmodul und den darin verfügbaren Multiplex oder zur Aktivierung im Bypass-Mode.  
 Das gezielte Zuordnen einzelner Services zu einem Ausgangsmodul und Ausgangstransportstrom erfolgt durch Anklicken von direkt hinter dem gewünschten Service.

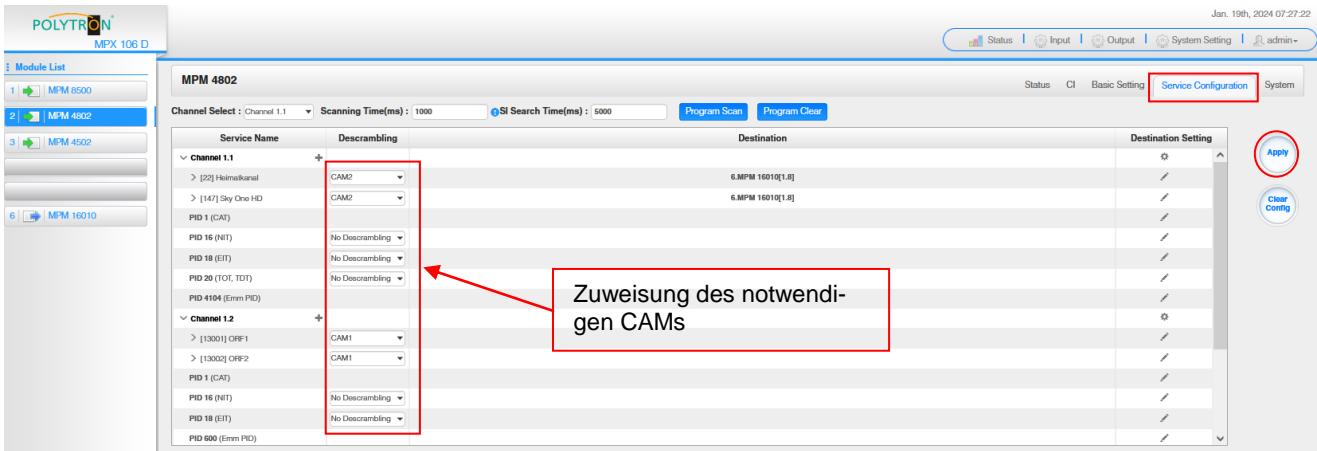


Nach Betätigen des Buttons „**Apply**“ werden die Einstellungen übernommen.

#### Zuordnung eines Kanals (gesamter Transportstrom)

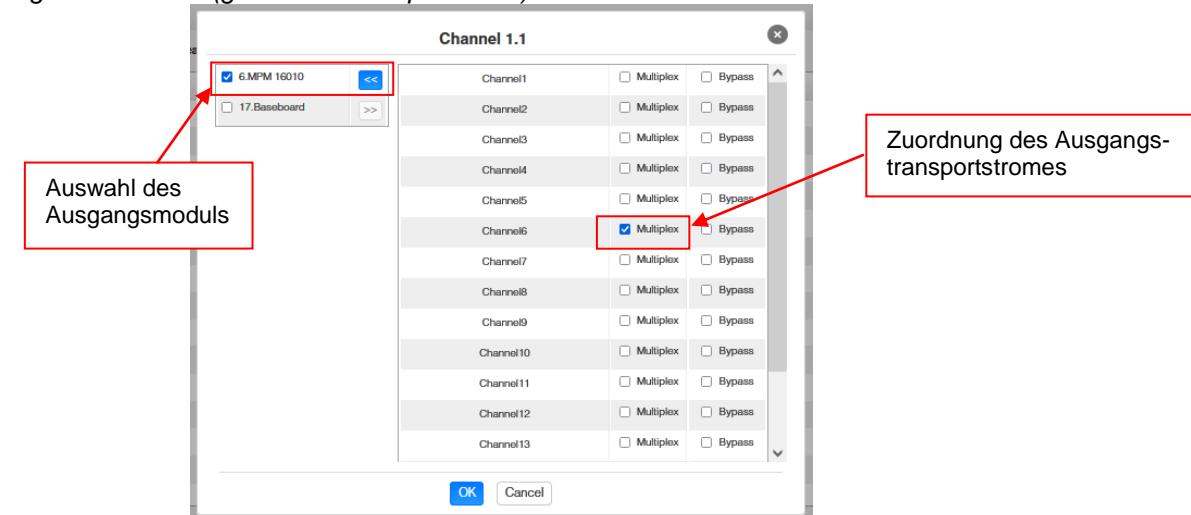

Nach Betätigen des Buttons „**OK**“ werden die Einstellungen übernommen.

#### Zuordnung eines Services

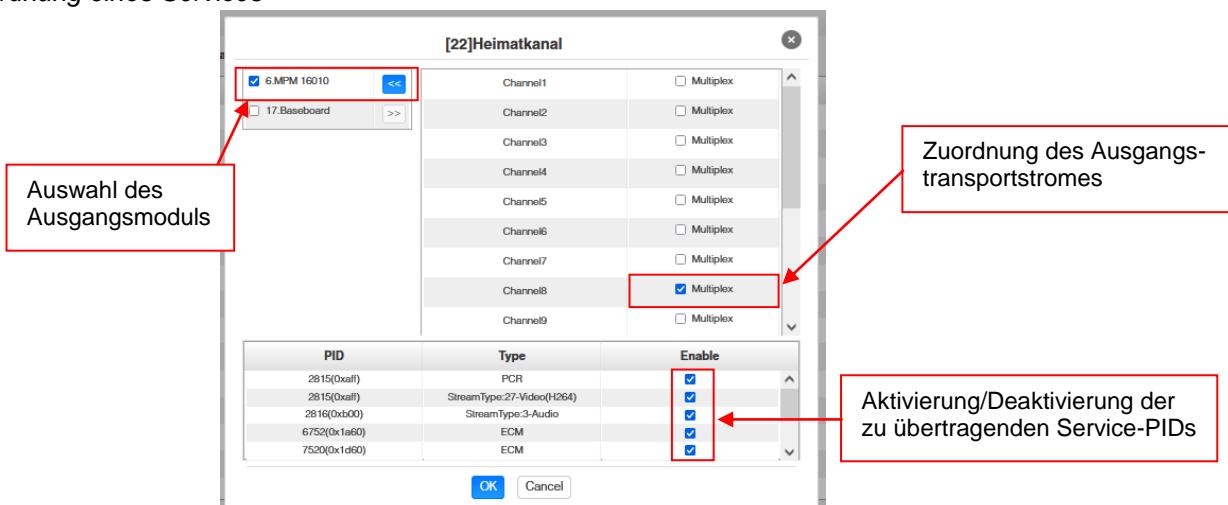

Nach Betätigen des Buttons „**OK**“ werden die Einstellungen übernommen.

## Achtung

Sollen die Programme als SPTS übertragen werden, muss jedem Programm ein eigener Multiplex auf dem Baseboard zugewiesen werden.

## Scanning Time

Die Scandauer kann im Bereich 1000 ... 12000 ms eingestellt werden. Diese sollte erhöht werden, wenn der Servicename nach einem Programm-Scan nicht angezeigt wird.

## SI Search Time

Die Scandauer für die SI-Daten kann im Bereich von 5000 ... 12000 ms eingestellt werden. Diese sollte erhöht werden, wenn die SI-Daten nach einem Scanvorgang nicht angezeigt werden.

Die Registerkarte „**System**“ ermöglicht die folgenden allgemeinen System-Einstellungen:

- License (Sicherung und Laden von Lizenzdateien)
- SNMP MIB (Möglichkeit des MIB Exports)
- Advanced Settings (Aktivierung des Programm-Auto-Scans)
- Logs (Anzeige und Sicherung von Log-Daten)
- Others (Reboot = Neustart des Grundgerätes  
Reset to Defaults = Laden der Werkseinstellungen)

## Grundeinstellungen MPM4802

Modul	Frequency	Bandwidth	PLP ID	Destination	Channel Baseboard	Destination IP	Destination Port	Protocol
1/1.1	322000 kHz	8 MHz	0	Baseboard	1.1	239.1.1.100	10001	RTP
1/1.2	330000 kHz	8 MHz	0	Baseboard	1.2	239.1.1.101	10001	RTP
1/1.3	338000 kHz	8 MHz	0	Baseboard	1.3	239.1.1.102	10001	RTP
1/1.4	346000 kHz	8 MHz	0	Baseboard	1.4	239.1.1.103	10001	RTP

## 8.5 Programmierung des DVB-C-Ausgangsmodules MPM 16010 (Single-Slot-Modul)

Das MPM 16010 ist ein Ausgangsmodul zur Modulation von 16 DVB-C Ausgangssignalen aus dem internen DVB-IP-Transportstrom. Das Ausgangsmodul verfügt über einen HF-Ausgang. Die 16 Ausgangskanäle (QAM) können unabhängig voneinander im Frequenzraster positioniert werden. Der Ethernet-Anschluss ist für zukünftige Applikationen vorbereitet. Das MPM 16010 unterstützt die automatische Generierung einer NIT. Weiterhin kann eine Programmierung via LCN vorgenommen werden. Das Modul belegt einen Single-Slot in der Grundeinheit MPX 106 D (pro).

### Hinweis

**Die Zuordnung/das Routing der Programme zum gewünschten Ausgangskanal erfolgt in den Eingangsmodulen oder bei der Programmierung der IP-Signale des Baseboards.**

Durch Anklicken des Modules in der Modulliste erfolgt die Weiterleitung zur Programmieroberfläche des angewählten Modules. In diesem Menü erfolgt die Einstellung der systemspezifischen Parameter des MPM 16010. Durch Anwahl der Registerkarten „Basic Setting“, „Output“, „PSIP“ und „System“ können diese Einstellungen gemäß der Anwendung vorgenommen werden.

In der Registerkarte „**Status**“ erfolgt die Anzeige der Ausgangsbitrate der DVB-C-Kanäle sowie eine Bewertung dieser gemäß den vorgenommenen Einstellungen.

Channel	Effective Bitrate(Mbps)	Total Bitrate(Mbps)	Bitrate	TS Analysis	Service List
1.1	41.576	50.871	Normal	1	2
1.2	31.806	50.871	Normal		
1.3	29.953	50.869	Normal		
1.4	34.879	50.869	Normal		
1.5	41.823	50.869	Normal		
1.6	42.157	50.869	Normal		
1.7	42.393	50.869	Normal		
1.8	19.273	50.869	Normal		
1.9	42.486	50.871	Normal		
1.10	30.111	50.871	Normal		
1.11	36.738	50.871	Normal		
1.12	34.041	50.871	Normal		
1.13	44.559	50.871	Normal		
1.14	47.266	50.871	Normal		

### 1 TS-Analysis

Nach Betätigen des Buttons „**Reset Counter**“ startet die Aufnahme von Continuity Count Errors neu. Im Suchfeld kann gezielt nach Themen wie PID, Service, Typ, etc. gesucht werden.

PID	Bitrate(Mbps)	Bandwidth(%)	Continuity Count Error	Type	Service
0x19e6(6630)	0.296	0.582	0	Audio	KIKA HD
0x19e7(6631)	0.022	0.043	0	Audio	KIKA HD
0xa10a(6670)	0.009	0.018	0	Video	KIKA HD
0xa2e2(6700)	0.013	0.026	0	PMT	ZDFInfo HD
0xa1a6(6710)	14.033	27.585	0	PCR, Video	ZDFInfo HD
0xa1a4(6720)	0.263	0.517	0	Audio	ZDFInfo HD
0xa1a4(6721)	0.201	0.395	0	Audio	ZDFInfo HD
0xa3a2(6722)	0.461	0.906	0	Audio	ZDFInfo HD

### 2 Service List

Nach Klick auf Service List werden alle empfangenen Services des angewählten Kanals angezeigt. Nach Anwahl eines Services werden die Service Informationen dargestellt.

#	Service	Type	PID
1	[10301] Das Erste HD	PCR PID	5101
2	[10302] arte HD	PMT PID	5100
		Video PID	5101[Video(0x054)]
		Audio PID	5100[Audio]
		Audio PID	5100[Audio]
		Audio PID	5101[Audio]
		Audio PID	5104[Private Data/AC3]
		Audio PID	5106[Private Data/AC3]
		Video PID	1170[Private Data]
		Video PID	1170[User Private]
		Video PID	231[Private]
		Video PID	5105[Private Data/AC3]
		Audio PID	5108[Private Data/AC3]
		Video PID	5122[User Private]

In der Registerkarte „**Basic Setting**“ werden die DVB-C-Ausgangsparameter programmiert. Es werden die Ausgangsfrequenz, die Bandbreite, die Konstellation und die Symbolrate eingestellt. Die Ausgangsfrequenzen können frei im Frequenzband belegt werden. Die Zuordnung der Bandbreite, Konstellation und Symbolrate erfolgt im Achter-Paket.

Channel	Enable	Frequency(KHz)	Bandwidth(MHz)	Constellation	SymbolRate(Kbaud)
1.1	<input checked="" type="checkbox"/>	306000	8	QAM64	6875
1.2	<input checked="" type="checkbox"/>	314000	8	QAM64	6875
1.3	<input checked="" type="checkbox"/>	322000	8	QAM64	6875
1.4	<input checked="" type="checkbox"/>	330000	8	QAM64	6875
1.5	<input checked="" type="checkbox"/>	338000	8	QAM64	6875
1.6	<input checked="" type="checkbox"/>	346000	8	QAM64	6875
1.7	<input checked="" type="checkbox"/>	354000	8	QAM64	6875
1.8	<input checked="" type="checkbox"/>	362000	8	QAM64	6875
1.9	<input checked="" type="checkbox"/>	370000	8	QAM256	6900
1.10	<input checked="" type="checkbox"/>	378000	8	QAM256	6900
1.11	<input checked="" type="checkbox"/>	386000	8	QAM256	6900
1.12	<input checked="" type="checkbox"/>	394000	8	QAM256	6900
1.13	<input checked="" type="checkbox"/>	402000	8	QAM256	6900
1.14	<input checked="" type="checkbox"/>	410000	8	QAM256	6900
1.15	<input checked="" type="checkbox"/>	418000	8	QAM256	6900
1.16	<input checked="" type="checkbox"/>	426000	8	QAM256	6900

RF Level:Einstellung des Ausgangspegels 15-45 dBmV (75-105 dB $\mu$ V)

Nach Betätigen des Buttons „**Apply**“ werden die Einstellungen übernommen.

Die Registerkarte „**Output**“ bietet eine Übersicht zu den vorhandenen Transportströmen und den darin enthaltenen Services. Weiterhin erfolgt hier die Erstellung der Kabel-NIT, die Zuordnung einer LCN oder die Anpassung der TOT (Time Offset Table).

NO.	Service ID	Service Name	Service Provider
1	10301	Das Erste HD	ARD
2	10302	arte HD	ARD
3	10303	SWR BW HD	ARD
4	10304	SWR RP HD	ARD


Nach Anklicken eines Services werden alle servicespezifischen Daten angezeigt.

Service ID	Service Name	Service Provider
17508	SAT.1 NRW	ProSiebenSat.1

## ACHTUNG

Es sollten keine Änderungen an den service-spezifischen PIDs vorgenommen werden! Bitte hierzu Fachpersonal konsultieren.

Nach Anklicken des Konfigurations-Buttons öffnet sich das Menü zur Erstellung der Kabel-NIT. Hier kann ein Netzwerkname und eine Netzwerk-ID für die Kabel-NIT vergeben werden.

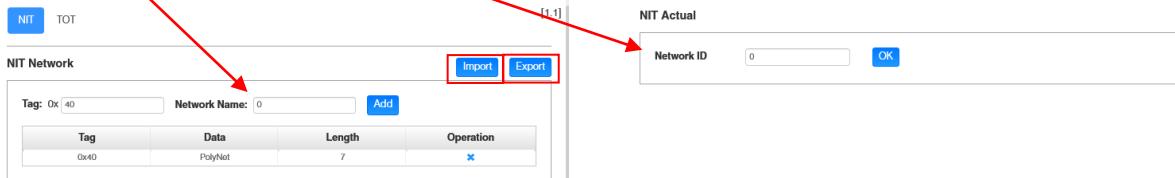

Weiterhin erfolgt über den Button „**Add Descriptor**“ die automatische Erstellung der Kabel-NIT für das gesamte Modul. Via des Buttons „**Export**“ kann die NIT exportiert und via des Buttons „**Import**“ kann eine NIT importiert werden.

**ACHTUNG** durch das Importieren wird die vorhandene NIT überschrieben.

Die Einbindung externer Transportströme in die NIT ist ebenfalls möglich.

ONID	TS ID	Descriptor	Operation
1	1019	[0x44] Cable Delivery System	+Descriptor
1	1011	[0x44] Cable Delivery System	+Descriptor
1	1107	[0x44] Cable Delivery System	+Descriptor
1	1089	[0x44] Cable Delivery System	+Descriptor
1	1010	[0x44] Cable Delivery System	+Descriptor
1	1025	[0x44] Cable Delivery System	+Descriptor
1	1061	[0x44] Cable Delivery System	+Descriptor
1	1021	[0x44] Cable Delivery System	+Descriptor
1	1039	[0x44] Cable Delivery System	+Descriptor
1	1091	[0x44] Cable Delivery System	+Descriptor
133	33	[0x44] Cable Delivery System	+Descriptor
133	5	[0x44] Cable Delivery System	+Descriptor
1	1053	[0x44] Cable Delivery System	+Descriptor
1	1055	[0x44] Cable Delivery System	+Descriptor
1	1078	[0x44] Cable Delivery System	+Descriptor
1	1109	[0x44] Cable Delivery System	+Descriptor

ONID	TS ID	Descriptor	Operation
1	1019	[0x44] Cable Delivery System	+Descriptor
1	1011	[0x44] Cable Delivery System	+Descriptor
1	1107	[0x44] Cable Delivery System	+Descriptor
1	1089	[0x44] Cable Delivery System	+Descriptor
1	1010	[0x44] Cable Delivery System	+Descriptor
1	1025	[0x44] Cable Delivery System	+Descriptor
1	1061	[0x44] Cable Delivery System	+Descriptor
1	1021	[0x44] Cable Delivery System	+Descriptor
1	1039	[0x44] Cable Delivery System	+Descriptor
1	1091	[0x44] Cable Delivery System	+Descriptor
133	33	[0x44] Cable Delivery System	+Descriptor
133	5	[0x44] Cable Delivery System	+Descriptor
1	1053	[0x44] Cable Delivery System	+Descriptor
1	1055	[0x44] Cable Delivery System	+Descriptor
1	1078	[0x44] Cable Delivery System	+Descriptor
1	1109	[0x44] Cable Delivery System	+Descriptor
1	7	[0x44] Cable Delivery System	+Descriptor

Logical Channel Number

- [Cable Delivery System](#)
- [Terrestrial Delivery System](#)
- [Satellite Delivery System](#)
- [Service List](#)

Eintragung der transportstrom-spezifischen Daten des ergänzten Kanals.

**Cable Delivery System**

Frequency(KHz)	474000	[48000,858000]
Symbol Rate(Ksymbol/s)	6900	[0,999000]
Modulation	256-QAM	
FEC Outer	not defined	
FEC Inner	not defined	

**OK** **Close**

ONID	TS ID	Descriptor	Operation
1	1019	[0x44] Cable Delivery System	+Descriptor
1	1011	[0x44] Cable Delivery System	+Descriptor
1	1107	[0x44] Cable Delivery System	+Descriptor
1	1089	[0x44] Cable Delivery System	+Descriptor
1	1010	[0x44] Cable Delivery System	+Descriptor
1	1025	[0x44] Cable Delivery System	+Descriptor
1	1061	[0x44] Cable Delivery System	+Descriptor
1	1021	[0x44] Cable Delivery System	+Descriptor
1	1039	[0x44] Cable Delivery System	+Descriptor
1	1091	[0x44] Cable Delivery System	+Descriptor
133	33	[0x44] Cable Delivery System	+Descriptor
133	5	[0x44] Cable Delivery System	+Descriptor
1	1053	[0x44] Cable Delivery System	+Descriptor
1	1055	[0x44] Cable Delivery System	+Descriptor
1	1078	[0x44] Cable Delivery System	+Descriptor
1	1109	[0x44] Cable Delivery System	+Descriptor
1	7	[0x44] Cable Delivery System	+Descriptor

**Löscht den Descriptor**      **Löscht den NIT-Stream**

**Öffnet das Bearbeitungsfenster für den Descriptor**

Die Vergabe von Programmplätzen ist durch die LCN-Funktion möglich.

Nach Klick auf „**Descriptor**“ öffnet sich das Auswahl-Menü zur NIT-Bearbeitung. Im Auswahl-Menü „**Logical Channel Number**“ wählen und das Konfigurations-Menü für die Vergabe der LCN wird geöffnet. Hier kann für jeden Service ein Programmplatz „LCN“ festgelegt werden.

The screenshot shows two windows side-by-side. On the left is a table titled 'Descriptor' with columns 'ONID', 'TS ID', 'Service', and 'Operation'. One row in this table is highlighted with a red box around the 'Operation' column, which contains the text 'Logical Channel Number'. A red arrow points from this highlighted row to the right window. The right window is titled 'Logical Channel Number' and contains a table with columns 'TS', 'Service ID', 'Service Name', 'LCN [0, 1023]', and 'Visible Service Flag'. The 'LCN [0, 1023]' column has a red box around it. Below the table are two buttons: 'Vergabe LCN' and 'Aktivierung Service für LCN-Übernahme'. At the bottom are 'OK' and 'Close' buttons. The entire 'Logical Channel Number' window is also enclosed in a red box.

Nach Betätigen des Buttons „**OK**“ werden die Einstellungen übernommen.

Nach Anklicken des Buttons „**TOT**“ öffnet sich das Menü zur Programmierung der Daten für die „Time Offset Table“.

The screenshot shows the 'TOT Configuration' window with several input fields: 'Country Code' (CHN), 'Country Region Id' (8), 'Local Time Offset Polarity' (UTC -), 'Time Of Change' (2022/04/04 12:10:00), 'Local Time Offset' (00:00), and 'Next Time Offset' (00:00). Below these fields is an 'OK' button, which is highlighted with a red box.

Nach Betätigen des Buttons „**OK**“ werden die Einstellungen übernommen.

Nach Betätigen des Buttons „**Apply**“ werden die Einstellungen aus dem „**Output**“ - Menü übernommen.

Nach Betätigen des Buttons „**Clear Config**“ werden alle Zuordnungen und Einstellungen aus dem „**Output**“ - Menü gelöscht.


Im Menü „**PSIP**“ ist die gezielte Auswahl der zu übertragenden Tabellen möglich.

The screenshot shows the 'PSIP' configuration window. On the left is a 'Module List' with three modules selected: 'MPM 8500' (x2) and 'MPM 16010' (x1). In the center, there are two tabs: 'Output Channel List' and 'Output Channel [1.1] >> PSIP'. The 'Output Channel List' tab shows a table with rows numbered 1.1 to 1.12, each with a checked checkbox. The 'Output Channel [1.1] >> PSIP' tab shows a list of options with checkboxes: PAT Insert, PMT Insert, SDT Insert, NIT Insert, CAT Insert, TD Insert, and TOT Insert. Most of these checkboxes are checked. Below this list is an 'OK' button, which is highlighted with a red box.

Nach Betätigen des Buttons „**OK**“ werden die Einstellungen übernommen.

Die Registerkarte „System“ ermöglicht die folgenden allgemeinen System-Einstellungen:

- License (Sicherung und Laden von Lizenzdateien)
- SNMP MIB (Möglichkeit des MIB Exports)
- Logs (Anzeige und Sicherung von Log-Daten)
- Others (Reboot = Neustart des Grundgerätes  
Reset to Defaults = Laden der Werkseinstellungen)

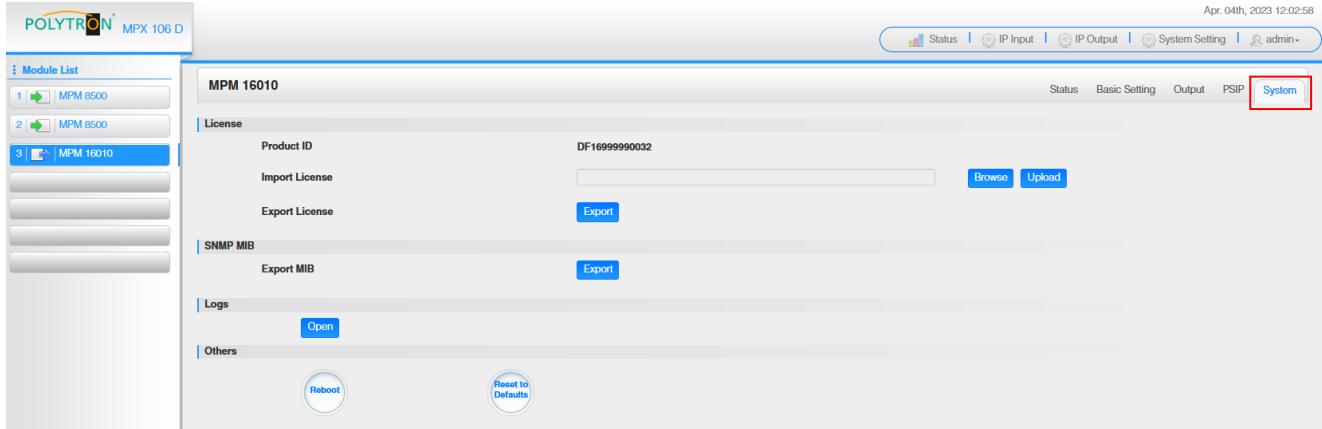

The screenshot shows the web-based configuration interface for the POLYTRON MPX 106 D. The left sidebar lists modules: 1 MPM 8500, 2 MPM 8500, and 3 MPM 16010 (selected). The main content area is titled "MPM 16010". At the top right, there are tabs: Status, Basic Setting, Output, PSIP, and System (which is highlighted with a red box). Below the tabs, there are sections for License, SNMP MIB, Logs, and Others. Under License, there are fields for Product ID (DF16999990032), Import License (with Browse and Upload buttons), and Export License (with an Export button). Under SNMP MIB, there is an Export MIB button. Under Logs, there is an Open button. Under Others, there are two buttons: Reboot and Reset to Defaults.

### Grundeinstellungen MPM16010

Modul	Frequency	Bandwidth	Constellation	SymbolRate (KBaud)	Enable	Source	Channel MPM 8500	Transponder	Name
3/1.1	306 MHz	8 MHz	256 QAM	6900	V	MPM 8500	1/1.1	19	ARD Digital
3/1.2	314 MHz	8 MHz	256 QAM	6900	V	MPM 8500	1/2.1	11	ZDF Vision
3/1.3	322 MHz	8 MHz	256 QAM	6900	V	MPM 8500	1/3.1	107	ProSieben/Sat.1 Media
3/1.4	330 MHz	8 MHz	256 QAM	6900	V	MPM 8500	1/4.1	89	Mediengruppe RTL
3/1.5	338 MHz	8 MHz	256 QAM	6900	V	MPM 8500	1/5.1	10	ZDF Vision
3/1.6	346 MHz	8 MHz	256 QAM	6900	V	MPM 8500	1/6.1	25	ARD Digital
3/1.7	354 MHz	8 MHz	256 QAM	6900	V	MPM 8500	1/7.1	61	ARD Digital
3/1.8	362 MHz	8 MHz	256 QAM	6900	V	MPM 8500	1/8.1	21	ARD Digital
3/1.9	370 MHz	8 MHz	256 QAM	6900	V	MPM 8500	2/1.1	39	ARD Digital
3/1.10	378 MHz	8 MHz	256 QAM	6900	V	MPM 8500	2/2.1	91	SES
3/1.11	386 MHz	8 MHz	256 QAM	6900	V	MPM 8500	2/3.1	104	SES
3/1.12	394 MHz	8 MHz	256 QAM	6900	V	MPM 8500	2/4.1	103	SES
3/1.13	402 MHz	8 MHz	256 QAM	6900	V	MPM 8500	2/5.1	53	SES
3/1.14	410 MHz	8 MHz	256 QAM	6900	V	MPM 8500	2/6.1	55	SES
3/1.15	418 MHz	8 MHz	256 QAM	6900	V	MPM 8500	2/7.1	78	Paramount International Networks
3/1.16	426 MHz	8 MHz	256 QAM	6900	V	MPM 8500	2/8.1	92	SES

## 8.6 Programmierung des DVB-T-Ausgangsmodules MPM 8020 (Single-Slot-Modul)

Das MPM 8020 ist ein Ausgangsmodul zur Modulation von 8 DVB-T Ausgangssignalen aus dem internen DVB-IP-Transportstrom. Das Ausgangsmodul verfügt über einen HF-Ausgang. Die 8 Ausgangskanäle (OFDM) können unabhängig voneinander im Frequenzraster positioniert werden. Das MPM 8020 unterstützt die manuelle Generierung einer NIT. Weiterhin kann eine Programmsortierung via LCN vorgenommen werden. Das Modul belegt einen Single-Slot in der Grundeinheit MPX 106 D (pro).

### Hinweis

**Die Zuordnung/das Routing der Programme zum gewünschten Ausgangskanal erfolgt in den Eingangsmodulen oder bei der Programmierung der IP-Signale des Baseboards.**

Durch Anklicken des Modules in der Modulliste erfolgt die Weiterleitung zur Programmieroberfläche des angewählten Modules. In diesem Menü erfolgt die Einstellung der systemspezifischen Parameter des MPM 8020. Durch Anwahl der Registerkarten „Basic Setting“, „Output“, „PSIP“ und „System“ können diese Einstellungen gemäß der Anwendung vorgenommen werden.

In der Registerkarte „**Status**“ erfolgt die Anzeige der Ausgangsbitrate der DVB-T-Kanäle sowie eine Bewertung dieser gemäß den vorgenommenen Einstellungen.

The screenshot shows the MPM 8020 status interface. On the left, a module list shows 'MPM 8020' selected. The main area displays channel configuration for 8 channels (1.1 to 1.8). Each channel row includes 'Effective Bitrate(Mbps)', 'Total Bitrate(Mbps)', 'Bitrate' (Normal), and two status indicators: 'TS Analysis' (with a counter value of 1) and 'Service List' (with a counter value of 2). A red box highlights the 'Status' tab at the top right. Another red box highlights the 'Service List' indicator for channel 1.3.

### 1 TS-Analysis

Nach Betätigen des Buttons „**Reset Counter**“ startet die Aufnahme von Continuity Count Errors neu. Im Suchfeld kann gezielt nach Themen wie PID, Service, Typ, etc. gesucht werden.

The screenshot shows the 'Channel 1.3 TS Analysis' page. It features a table with columns: PID, Bitrate(Mbps), Bandwidth(%), Continuity Count Error, Type, and Service. The table lists various PID entries with their corresponding error counts and service types (PAT, SDT, PMT, PSCM, PSEM). A red box highlights the 'Reset Counter' button in the top right corner. Another red box highlights the search bar.

### 2 Service List

Nach Klick auf Service List werden alle empfangenen Services des angewählten Kanals angezeigt. Nach Anwahl eines Programmes werden die zugehörigen Service-Informationen dargestellt.

The screenshot shows the MPM 8020 status interface with a detailed view of service information for channel 1.3. The main table shows channel configuration for all 8 channels. For channel 1.3, a red box highlights the 'Service List' indicator. A red arrow points from this indicator to a detailed service list for channel 1.3, which includes a table of services with their respective service numbers and descriptions. Another red arrow points from the service list to a detailed service information window for service [4911] ORF1 HD, showing its PID, type (PCR PID, PMT PID, Video PID, Audio PID), and source (1.1.1).

In der Registerkarte „**Basic Setting**“ werden die DVB-T-Ausgangsparameter programmiert. Es werden die Ausgangsfrequenz, die Bandbreite, der FFT-Mode, das Guard Intervall, der QAM-Mode und die Coderate eingestellt. Die Ausgangsfrequenzen können frei im Frequenzband belegt werden. Die Zuordnung der Bandbreite, FFT-Mode, Guard Interval, QAM-Mode und Coderate erfolgt im Vierer-Paket.

RF Level: Einstellung des Ausgangspegels 15-45 dBmV (75-105 dB $\mu$ V)

Nach Betätigen des Buttons „**Apply**“ werden die Einstellungen übernommen.

Die Registerkarte „**Output**“ bietet eine Übersicht zu den vorhandenen Transportströmen und den darin enthaltenen Services. Weiterhin erfolgt hier die Erstellung der NIT, die Zuordnung einer LCN oder die Anpassung der TOT (Time Offset Table).

Nach Anklicken eines Service werden alle servicespezifischen Daten angezeigt.

#### ACHTUNG

Es sollten keine Änderungen an den service-spezifischen PIDs vorgenommen werden! Bitte hierzu Fachpersonal konsultieren.

Nach Anklicken des Konfigurations-Buttons öffnet sich das Menü zur Erstellung der NIT. Hier kann ein Netzwerkname und eine Netzwerk-ID für die Kabel-NIT vergeben werden.

The screenshot shows the 'NIT Network' configuration screen. It includes a table with columns: Tag, Data, Length, and Operation. A red arrow points from the 'Add' button in the table to a separate 'NIT Actual' dialog box. The dialog box has fields for 'Network ID' (set to 0) and an 'OK' button.

Weiterhin erfolgt hier die Erstellung der NIT für das gesamte Modul.

The screenshot shows the 'NIT Stream' configuration screen. It includes a table with columns: ONID, TS ID, and Descriptor. A red box highlights the 'Descriptor' column. Another red box highlights the 'Logical Channel Number' dropdown menu, which contains options like 'Cable Delivery System', 'Terrestrial Delivery System', and 'Satellite Delivery System'. A third red box highlights the 'Terrestrial Delivery System' option in the menu. A fourth red box highlights the 'Service List' option in the same menu.

1. Original Network ID und TS ID für den Transportstrom eintragen
2. Button „Add“ betätigen → Hinzufügen des Transportstromes in den NIT-Stream
3. Link „Descriptor“ betätigen
4. Auswahl von „Terrestrial Delivery System“, um die NIT-Daten zu ergänzen
5. Eingabe der transportstrom-spezifischen Daten in das Untermenü


The screenshot shows the 'Terrestrial Delivery System' configuration dialog box. It includes fields for 'Centre Frequency' (set to 1 [1,4234967295](10Hz)) and 'Bandwidth' (set to 8MHz). A red box highlights the 'Advanced Parameters' section, which contains various parameters like Priority, Time Slicing Indicator, MPE-FEC Indicator, Constellation, Hierarchy Information, Code Rate HP Stream, Code Rate LP Stream, Guard Interval, Transmission Mode, and Other Frequency Flag. A red box highlights the 'OK' button at the bottom left. A callout box with the number 5 points to the 'Centre Frequency' field. A callout box with the text 'Achtung! Die Frequenzeingabe des TS muss in Hz erfolgen.' points to the 'Centre Frequency' field. A callout box with the text 'Die erweiterten Parameter müssen gemäß den Transportstrom-Einstellungen angepasst werden.' points to the 'Advanced Parameters' section. A callout box with the text 'Mit „OK“ die Übernahme der Daten bestätigen.' points to the 'OK' button.

6. Nachdem alle TS in die NIT eingetragen wurden, kann diese via des Buttons „Export“ exportiert und via des Buttons „Import“ importiert werden. **ACHTUNG** durch das Importieren wird die vorhandene NIT überschrieben.

Es wird empfohlen eine einheitliche NIT für jeden Transportstrom zu erstellen. Dies ist mithilfe der Export/Import-Funktion möglich.

Die Einbindung externer Transportströme in die NIT ist nach dem selben Vorgehen möglich.

### Beispiel NIT

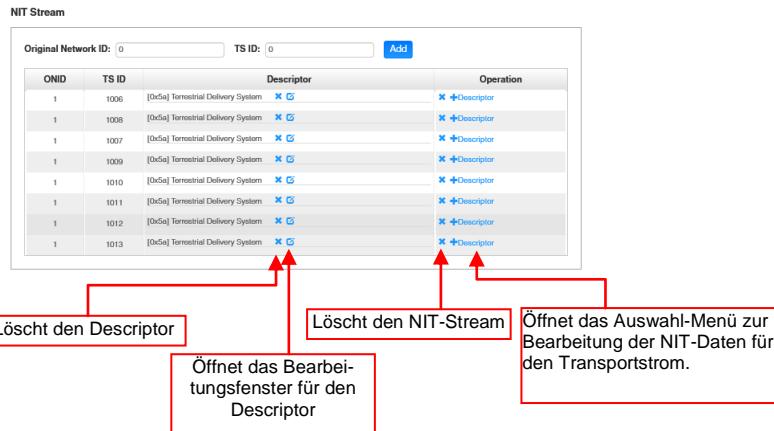

Die Vergabe von Programmplätzen ist durch die LCN-Funktion möglich.

Nach Klick auf „**Descriptor**“ öffnet sich das Auswahl-Menü zur NIT-Bearbeitung. Im Auswahl-Menü „**Logical Channel Number**“ wählen und das Konfigurations-Menü für die Vergabe der LCN wird geöffnet. Hier kann für jeden Service ein Programmplatz „LCN“ festgelegt werden.

TS	Service ID	Service Name	LCN [0, 1023]	Visible Service Flag
1.1	4913	ServusTV HD Österreich	1	Visible
1.2	4911	ORF1 HD	2	Visible
1.3	4912	ORF2W HD	3	Visible
1.4	4914	DF1 HD	4	Visible
1.5	4916	ORF2N HD	5	Visible
1.6	4920	OR3.	6	Visible
1.7	4930	RIC	7	Visible

Nach Betätigen des Buttons „**OK**“ werden die Einstellungen übernommen.

Nach Anklicken des Buttons „**TOT**“ öffnet sich das Menü zur Programmierung der Daten für die „Time Offset Table“.

Nach Betätigen des Buttons „**OK**“ werden die Einstellungen übernommen.

Nach Betätigen des Buttons „**Apply**“ werden die Einstellungen aus dem „**Output**“ - Menü übernommen.

Nach Betätigen des Buttons „**Clear Config**“ werden alle Zuordnungen und Einstellungen aus dem „**Output**“ - Menü gelöscht.

Im Menü „PSIP“ ist die gezielte Auswahl der zu übertragenden Tabellen möglich.

The screenshot shows the 'MPM 8020' configuration page. On the left, there's a 'Module List' with several entries. The second entry, 'MPM 8020', is selected and highlighted in blue. The main area contains a table titled 'Batch Setting' with columns for 'Channel' (1.1 to 1.7) and various 'Insert' options like 'PAT Insert', 'PMT Insert', etc. Each row has a 'Select All' checkbox at the top. The 'PSIP' tab is active, indicated by a red box. In the bottom right corner of the main area, there is a red circle around the 'Apply' button.

Nach Betätigen des Buttons „Apply“ werden die Einstellungen übernommen.

Die Registerkarte „System“ ermöglicht die folgenden allgemeinen System-Einstellungen:

- License (Sicherung und Laden von Lizenzdateien)
- SNMP MIB (Möglichkeit des MIB Exports)
- Logs (Anzeige und Sicherung von Log-Daten)
- Others (Reboot = Neustart des Grundgerätes  
Reset to Defaults = Laden der Werkseinstellungen)

The screenshot shows the 'System' configuration page for the MPM 8020 module. It includes sections for 'License' (Product ID: EC20143210001, Import License, Export License), 'SNMP MIB' (Export MIB), 'Logs' (Open), and 'Others'. At the bottom are 'Reboot' and 'Reset to Defaults' buttons. The 'System' tab is active, indicated by a red box. In the 'License' section, there is a red circle around the 'Export' button.

### Werkseinstellungen MPM 8020

Modul	Frequency	Bandwidth	Constellation	FFT Mode	Enable	Guard Interval	Coderate	Ausgangspegel	RF Level Gain
1.1	474 MHz	8 MHz	64 QAM	2K	X	1/32	7/8	45 dBmV	0 dBµV
1.2	482 MHz	8 MHz	64 QAM	2K	X	1/32	7/8	45 dBmV	0 dBµV
1.3	490 MHz	8 MHz	64 QAM	2K	X	1/32	7/8	45 dBmV	0 dBµV
1.4	498 MHz	8 MHz	64 QAM	2K	X	1/32	7/8	45 dBmV	0 dBµV
1.5	578 MHz	8 MHz	64 QAM	2K	X	1/32	7/8	45 dBmV	0 dBµV
1.6	586 MHz	8 MHz	64 QAM	2K	X	1/32	7/8	45 dBmV	0 dBµV
1.7	594 MHz	8 MHz	64 QAM	2K	X	1/32	7/8	45 dBmV	0 dBµV
1.8	602 MHz	8 MHz	64 QAM	2K	X	1/32	7/8	45 dBmV	0 dBµV

## 8.7 Programmierung des Transcoder-Processing-Modules MPM 1333 (Single-Slot-Modul)

Das MPM 1333 ist ein Transcodermodul, das die Transcodierung zwischen verschiedenen Video-Komprimierungsstandards wie H.265, H.264 und MPEG-2 unterstützt. Das Modul verfügt über zwei GbE-Ports zur Ein- und Ausgabe von IP-Streams. Zur Installation des Betriebssystems ist das Modul mit zwei USB-Anschlüssen und ein HDMI-Anschluss ausgerüstet. Das Transcoder-Modul ermöglicht die Anpassung der Eingangs-Streams an den gewünschten Ausgangs-Codec und damit an vorhandene Empfangsgeräte im Netzwerk.

### Achtung

Da die Leistungsaufnahme des Transcodermoduls von der Anzahl der transcodierten Service und den Transcodierungsparametern abhängig ist, darf das Modul nur mit der Grundeinheit MPX 106 D pro verwendet werden.

Durch Anklicken des Modules in der Modulliste erfolgt die Weiterleitung zur Programmieroberfläche des angewählten Modules. In diesem Menü erfolgt die Einstellung der systemspezifischen Parameter des MPM 1333. Durch Anwahl der Registerkarten „Input“ und „Engine“ können diese Einstellungen gemäß der Anwendung vorgenommen werden. Die Registerkarten „System“, „Alarm“ und „About“ liefern Statusinformationen sowie Informationen zur Hard- und Software.

In der Registerkarte „**Status**“ erfolgt die Anzeige des aktuellen Status sowie der Medieninformationen der Eingangs- und Ausgangs-Transportströme gemäß den vorgenommenen Einstellungen. Via des Buttons „**Advanced Settings**“ können die anzuzeigenden Statusinformationen vorausgewählt werden.

The screenshot shows the software interface for the POLYTRON MPX 106 D. On the left, there's a 'Module List' pane with four entries: MPM 8500 (selected), MPM 1333 (highlighted with a red box and number 1), MPM 4502, and MPM 16010. The main area is titled 'MPM 1333' and contains a table with two tabs: 'Advanced Setting >' (selected) and 'Status'. The 'Advanced Setting >' tab has three numbered callouts: 1 points to the 'Advanced Setting >' button; 2 points to the 'View' column header; 3 points to a preview thumbnail. The table columns include Engine, Status, Run Time, Input Source, Service, View, Output URL, Preview, Encoding Format, Resolution, Frame Rate, Total Bitrate(Mbps), Video Bitrate(Mbps), and Audio 1 Codec. The table rows show various stream configurations with engines 1 through 11.

Engine	Zeigt die Kanalzahl an (die Kanalzahl ist lizenzbabhängig).
Status	Zeigt den Status des Streams an (grün = okay; rot = Fehler; grau = deaktiviert).
Run Time	Zeigt die Transcodierungszeit seit Start der Transcodierung an.
Input Source intern/extern).	Zeigt Informationen zum Eingangstransportstrom (Protokoll, IP-Adresse, Port, Ethernet
Service	Zeigt das transcodierte Programm an.
View	Zeigt detaillierte Informationen des transcodierten Programms an.
Output URL	Zeigt Informationen zum Ausgangstransportstrom (Protokoll, IP-Adresse, Port).
Preview	Vorschau der Transcodierung, zum Vergrößern das Bild anklicken
Encoding Format	Zeigt das Format des Ausgangstransportstromes an.
Resolution	Zeigt die Auflösung des Ausgangstransportstromes an.
Frame Rate	Zeigt die Bildfrequenz des Ausgangstransportstromes an.
Total Bitrate	Zeigt die Gesamt-Bitrate des Ausgangstransportstromes an.
Video Bitrate	Zeigt die Video-Bitrate des Ausgangstransportstromes an.
Audio Bitrate 1-4	Zeigt die Audio-Bitrate des Audio-Kanals 1-4 des Ausgangstransportstromes an.
Audio Codec 1-4	Zeigt den Audio-Codec des Audio-Kanals 1-4 des Ausgangstransportstromes an.
Audio Sample Rate 1-4	Zeigt die Audio-Abtastfrequenz des Audio-Kanals 1-4 des Ausgangstransportstromes.


### 1 Advanced Settings

Nach Klick auf „**Advanced Settings**“ kann eine Vorauswahl der anzuzeigenden Statusinformationen erfolgen.

The screenshot shows the 'Advanced Settings' configuration page for the MPM 1333. It features a top navigation bar with tabs: Status, Input, Engine, System, Alarm, About. The status bar indicates CPU: 45%, GPU: 74%, Memory: 44.7%. Below the tabs, there are two sections: 'Video Parameter' and 'Audio Parameter'. Under 'Video Parameter', there are checkboxes for Encoding Format, Resolution, Frame Rate, and Total Bitrate. Under 'Audio Parameter', there are checkboxes for Audio 1 Codec, Audio 2 Bitrate, Audio 3 Bitrate, Audio 4 Bitrate, and so on for all four audio channels.

## 2 View

Nach Klick auf „View“ werden alle Transportstrominformationen der jeweils gewählten Eingangsquelle angezeigt.

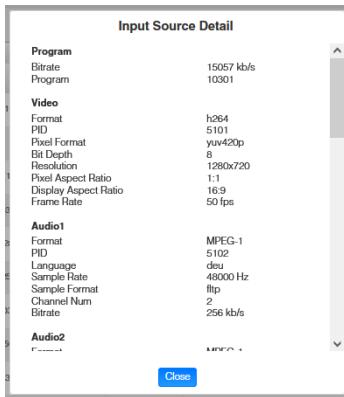

## 3 Preview

Nach Klick auf „Preview“ des gewünschten Programms wird das Transcodierte Programm angezeigt.

In der Registerkarte „Input“ werden die IP-Eingangsdaten der zu transcodierenden Programme festgelegt.

The screenshot shows the MPX 106 D software interface with the 'Input' tab selected. On the left, a 'Module List' shows 'MPM 1333' selected. The main area displays a table for 'MPM 1333' with 18 rows, each representing an input port. The columns are: Engine, Status, Enable, Network Port, Protocol, IP Address, Port, VLAN, VLAN ID, and Action. The 'Action' column contains a red box around the 'Apply' button. A red arrow points from the 'Apply' button to a smaller window titled 'Channel : 6' which shows a service entry. The 'Status' column has a red box around the green status indicator for row 1. The 'Enable' column has a red box around the checked checkbox for row 1. The 'Network Port' column has a red box around the 'Internal' dropdown for row 1. The 'Protocol' column has a red box around the 'RTP' dropdown for row 1. The 'IP Address' column has a red box around the '239.1.1.101' input field for row 1. The 'Port' column has a red box around the '10001' input field for row 1. The 'VLAN' column has a red box around the 'Disable' dropdown for row 1. The 'VLAN ID' column has a red box around the 'None' dropdown for row 1. The 'Action' column has a red box around the 'Apply' button for row 1.

Engine  
Status  
Enable  
Network Port

Zeigt die Kanalzahl an (die Kanalzahl ist lizenzbabhängig)

Zeigt den Status des Streams an (grün = Empfang okay; rot = Empfangsfehler)

Aktivierung  /Deaktivierung  des jeweiligen Eingangs

Auswahl des entsprechenden Eingang-Ports

(DATA1/DATA2 = extern, Internal = Datenport MPX-Baseboard)

Auswahl UDP/RTP

Programmierung der Quell-IP-Adresse

Programmierung des Ports der Quelle

Aktivierung  /Deaktivierung  des V-LANs, Filterung eingehen-

Protocol  
IP Address  
Port  
V-LAN  
der

Streams für VLAN-Tags

V-LAN ID  
Action

Auswahl der V-LAN ID

Zeigt den programmierten Service mit zugehöriger S-ID an

Nach Betätigen des Buttons „Apply“ werden die Einstellungen übernommen.

In der Registerkarte „**Engine**“ werden die Trancodierungs-Parameter je Programm festgelegt. Via des Buttons „**Advanced Settings**“ können die anzuzeigenden Parameter vorausgewählt werden.

Channel	Enable	Select Service	Network Port	Protocol	IP Address	Port	Total Bitrate(Mbps)	Encoding Format	Output	Video Bitrate(Mbps)	Resolution	Frame Rate	Data Table Standard
1	<input type="checkbox"/>	IP[239.1.1.101:1000][10201:Das Em]	Internal	RTP	239.2.1.101	10001	6.00	MPEG-2	5.00	720 x 576	25Hz Interlaced	DVB	
2	<input checked="" type="checkbox"/>	IP[239.1.1.102:1000][11110:ZDF HD]	Internal	RTP	239.2.1.102	10001	6.00	MPEG-2	5.00	720 x 576	25Hz Interlaced	DVB	
3	<input checked="" type="checkbox"/>	IP[239.1.1.103:1000][10203:]	Internal	RTP	239.2.1.103	10001	6.00	MPEG-2	5.00	720 x 576	25Hz Interlaced	DVB	
4	<input type="checkbox"/>	None	Internal	RTP	239.2.1.112	10001	6.00	MPEG-2	5.00	720 x 576	25Hz Interlaced	DVB	
5	<input type="checkbox"/>	None	Internal	RTP	239.2.1.113	10001	6.00	MPEG-2	5.00	720 x 576	25Hz Interlaced	DVB	
6	<input checked="" type="checkbox"/>	IP[239.1.1.114:1000][10325:BR DE]	Internal	RTP	239.2.1.114	10001	6.00	MPEG-2	5.00	720 x 576	25Hz Interlaced	DVB	
7	<input checked="" type="checkbox"/>	IP[239.1.1.115:1000][10327:NDR DE]	Internal	RTP	239.2.1.115	10001	6.00	MPEG-2	5.00	720 x 576	25Hz Interlaced	DVB	
8	<input checked="" type="checkbox"/>	IP[239.1.1.116:1000][10360:rbb DE]	Internal	RTP	239.2.1.116	10001	6.00	MPEG-2	5.00	720 x 576	25Hz Interlaced	DVB	
9	<input checked="" type="checkbox"/>	IP[239.1.1.117:1000][10362:MDR DE]	Internal	RTP	239.2.1.117	10001	6.00	MPEG-2	5.00	720 x 576	25Hz Interlaced	DVB	
10	<input checked="" type="checkbox"/>	IP[10239.1.1.118:1000][10365:hr DE]	Internal	RTP	239.2.1.118	10001	6.00	MPEG-2	5.00	720 x 576	25Hz Interlaced	DVB	
11	<input type="checkbox"/>	IP[10239.1.1.119:1000][10378:SR DE]	Internal	RTP	239.2.1.119	10001	6.00	MPEG-2	5.00	720 x 576	25Hz Interlaced	DVB	
12	<input checked="" type="checkbox"/>	IP[10239.1.1.123:1000][11130:zdf DE]	Internal	RTP	239.2.1.123	10001	6.00	MPEG-2	5.00	720 x 576	25Hz Interlaced	DVB	
13	<input checked="" type="checkbox"/>	IP[10239.1.1.125:1000][11170:ZDF DE]	Internal	RTP	239.2.1.124	10001	6.00	MPEG-2	5.00	720 x 576	25Hz Interlaced	DVB	
14	<input checked="" type="checkbox"/>	IP[10239.1.1.125:1000][11150:3sat DE]	Internal	RTP	239.2.1.125	10001	6.00	MPEG-2	5.00	720 x 576	25Hz Interlaced	DVB	
15	<input checked="" type="checkbox"/>	IP[10239.1.1.126:1000][10331:phono DE]	Internal	RTP	239.2.1.126	10001	6.00	MPEG-2	5.00	720 x 576	25Hz Interlaced	DVB	
16	<input checked="" type="checkbox"/>	IP[10239.1.1.127:1000][10376:ONE DE]	Internal	RTP	239.2.1.127	10001	6.00	MPEG-2	5.00	720 x 576	25Hz Interlaced	DVB	

Channel	Zeigt die Kanalzahl an (die Kanalzahl ist lizenzbabhängig)
Enable	Aktivierung <input checked="" type="checkbox"/> /Deaktivierung <input type="checkbox"/> des jeweiligen Eingangs
Select Service	Auswahl des gewünschten Services aus der Drop-Down-Liste
Network Port	Auswahl des entsprechenden Ausgang-Ports (DATA1/DATA2 = extern, Internal = Datenport MPX-Baseboard)
Protocol	Auswahl des IP-Protokolls des Ausgangstransportstromes (UDP/RTP/RTP mit SDP)
IP Address	Programmierung der Ausgangs-IP-Adresse (Multicast: 224.0.0.0...239.255.255.255/Unicast: Endgeräte IP-Adresse)
Port	Programmierung des Ports (1...65535)
Total Bitrate	Festlegung der Gesamt-Bitrate des Ausgangstransportstromes (0...30 Mbit/s – höher als die Video-Bitrate wählen)
Service Type	Festlegung des Servicetyps (TV oder Radio)
Encoding Format	Programmierung des Formats des Ausgangstransportstromes (MPEG-2/H.264/H.265 Lizenz nötig)
Video Bitrate	Programmierung der Video-Bitrate des Ausgangstransportstromes (0,48...20 Mbit/s)
Resolution	Programmierung der Auflösung des Ausgangstransportstromes (1920x1080/ 1280x720/720x576/720x480/Auto-folgt dem Eingang)
Frame Rate	Programmierung der Bildfrequenz des Ausgangstransportstromes (25p/29.97p/30p/50p/59.94p/60p/25i/29.97i/30i/50i/59.94i/60i/Auto-folgt dem Eingang)
Data Table Standard	Programmierung des Standards der TS-Tabellen (DVB/ATSC)
Data Table Mode	Programmierung der Übernahme der TS-Tabellen in den Ausgangstransportstrom (Disable/Pass-Through/Generate)
Closed Caption Decoder	Aktivierung <input type="button" value="Enable"/> /Deaktivierung <input type="button" value="Disable"/> Closed Caption Auswahl der zu nutzenden Engine (Intel GPU/CPU) <i>Nutzungsempfehlung: Intel GPU</i>
Encoder	Auswahl der zu nutzenden Engine (Intel GPU/CPU) <i>Nutzungsempfehlung: Intel GPU</i>
Audio Codec 1-4	Programmierung des Audio-Codec Audiokanal 1-4 des Ausgangstransportstromes (Pass-Through/AAC-Main/AAV-LC/MPEG-1/L2)
Audio Bitrate 1-4	Programmierung der Audio-Bitrate Audiokanal 1-4 des Ausgangstransportstromes (0...384 kbps)
Audio Channels 1-4	Festlegung der Ton-Betriebsart Audiokanal 1-4 des Ausgangstransportstromes (Mono/Stereo/Dual Mono)
Audio Sample Rate 1-4	Programmierung der Abtastrate Audiokanal 1-4 des Ausgangstransportstromes (44.1 kHz/48 kHz)
Audio Selection 1-4	Auswahl der gewünschten Audio-PID aus der Drop-Down-Liste
Audio Loudness	Anpassung der Audio-Lautstärke
Subtitle Codec 1-4	Aktivierung von Untertiteln (None/Pass-Through)
Subtitle Input ID 1-4	Auswahl der gewünschten Untertitel-PID aus der Drop-Down-Liste

## 1 Advanced Settings

Nach Klick auf „**Advanced Settings**“ kann eine Vorauswahl der anzulegenden Parameter erfolgen.

The screenshot shows the 'Advanced Setting' tab selected in the top navigation bar. The interface is divided into several sections: Video Parameter, Audio Parameter, and Subtitle Parameter. Each section contains multiple checkboxes for various settings like Total Bitrate, Frame Rate, Encoding Format, etc. An 'Apply' button is located in the top right corner of the main content area.

Nach Betätigen des Buttons „**Apply**“ werden die Einstellungen übernommen.

Die Registerkarte „**System**“ ermöglicht die folgenden allgemeinen System-Einstellungen:

- |                           |  |
|---------------------------|--|
| → Network                 | (Einrichtung der Schnittstellenparameter)  |
| → VLAN                    | (Aktivierung VLANs)  |
| → Firmware Version Update | (Update des Moduls)  |
| → Software License        | (Sicherung und Laden von Lizenzdateien)  |
| → System Resource         | (Anzeige der genutzten Systemressourcen)   |
| → Profile                 | (Sicherung und Laden der Konfigurationen)  |
| → SNMP                    | (Möglichkeit des MIB Exports)  |
| → System Restart          | (Reboot = Neustart des Grundgerätes<br>Reset to Defaults = Laden der Werkseinstellungen) |
| → Logs                    | (Anzeige und Sicherung von Log-Daten)  |

## ➤ Network und VLAN

The screenshot shows the 'Network' tab selected in the top navigation bar. It displays network settings for three interfaces: Data 1 (Eih 0), Data 2 (Eih 1), and Internal (Eih 2). The 'Link Status' column indicates connection status (red dot for no connection, green dot for 1000Mbps). An 'Apply' button is located at the bottom right of the table.

### Network

Das MPM 1333 verfügt über zwei externe Datenports und einen internen Port, welcher als IP-Ein-/Ausgang genutzt werden kann. Der Link Status zeigt an, ob eine Verbindung zum Datenport hergestellt wurde (grün = Verbindung aktiv / rot = keine Verbindung).

### VLAN

Das MPM 1333 bietet die Möglichkeit VLANs für die Schnittstellen einzurichten. Um ein VLAN einzurichten muss der Button **+ VLAN** betätigt werden. Danach erweitert sich die Eingabemaske und das VLAN kann eingerichtet werden. Via „**Save**“ werden die Daten gespeichert und via „**Delete**“ wird das VLAN aus der Liste gelöscht.

The screenshot shows the 'VLAN' tab selected in the top navigation bar. It displays a table with columns: Network, VLAN ID, VLAN IP, and Operation. The 'Operation' column contains 'Save' and 'Delete' buttons, both of which are highlighted with red boxes.

#### Network

Auswahl der gewünschten Schnittstelle (NIC)  
(Data1/Data2/Internal)

#### VLAN ID

Festlegung des VLAN-Tag, das ausgehenden Streams zugewiesen und für eingehende Streams gefiltert werden soll  
(1...4094)

#### VLAN IP

Festlegung der VLAN IP-Adresse  
(feste IP-Adresse gemäß Netzwerkanforderungen)

## ➤ Firmware Version Update und Software License

### Firmware Version Update

Das MPM 1333 kann bei Bedarf via Webbrowser upgedatet werden. Wird ein Update benötigt dann setzen Sie sich mit unserem Service via [info@polytron.de](mailto:info@polytron.de) in Verbindung.

### Software License

Wird eine Erneuerung oder erneute Aktivierung der Softwarelizenzen benötigt, exportieren Sie das aktuelle Lizenzfile und übersenden dieses an [info@polytron.de](mailto:info@polytron.de). Jedes MPM 1333 Modul hat seine Produktkennung und die Lizenzfiles sind nur einem spezifischen Modul zuordenbar.

## ➤ System Resource

Diese Übersicht zeigt die aktuelle Auslastung der CPU, des Speichers und der GPU. Diese sind abhängig von der Anzahl der zu transcodierenden Kanäle und den Transcodierungsparametern.

## ➤ Profile

Das MPM 1333 ist in der Lage, alle Konfigurationen in mehreren Profilen zu speichern. Profile können lokal oder auf einem externen Speicher gespeichert werden, um sie auf anderen MPM 1333-Modulen zu verwenden oder ein Backup für das aktuelle Modul zu erstellen.

**Backup Profile**

Erstellung eines neuen Profiles aus den aktuellen Parametern in der Profilliste

**Import Profile**

Importieren eines Profiles vom PC in die Profilliste

**Apply**

Bestätigen eines Profiles aus der Profilliste

**Download**

Download eines Profiles aus der Profilliste auf den PC

**Delete**

Löschen eines Profiles aus der Profilliste

## ➤ SNMP, System Restart und Logs

The screenshot shows the software interface for the POLYTRON MPX 106 D. On the left, a sidebar lists modules: MPM 8500 (selected), MPM 1333 (highlighted with a red box), MPM 4502, and MPM 16010. The main area has three tabs: **SNMP**, **System Restart**, and **Logs**.

- SNMP:** Fields for Read-Only Community (public) and Read-Write Community (private) are shown, with an **Apply** button.
- System Restart:** Contains two buttons: **Reboot** (circled in red) and **Reset to Defaults**.
- Logs:** A scrollable list of log entries from January 16, 2024, at 18:30:45. The logs detail various alarm and status messages for the MPM 1333 module. At the bottom of the logs section are buttons for **Clear Log**, **Export Log**, and **Export System Log**.

### SNMP

Das MPM 1333 kann via SNMP-MIB-File gemanaged werden. Alle Einstellungen müssen mit „Apply“ bestätigt werden.

### System Restart

Via des Reboot-Buttons kann ein Neustart für das Modul MPM 1333 erfolgen. Der Button „Reset to Defaults“ setzt das Modul auf die Werkseinstellungen zurück.

### Logs

In diesem Bereich werden alle Log-Daten angezeigt. Die Logs können gelöscht (Clear Log) und exportiert werden.

Die Registerkarte „**Alarm**“ dient der Anzeige von Alarmmeldungen.

The screenshot shows the software interface for the POLYTRON MPX 106 D. The sidebar shows the selected module is MPM 1333 (highlighted with a red box). The main area displays a table of alarms for the MPM 1333 module.

NO.	Location	Alarm Type	Last Changed	Notification	Operation
1	Data 1	The management Data is down	2024/01/09 15:09:45	Check the network connection	<b>Ignore</b>
2	Data 2	The ethernet is not connected to any IP networks	2024/01/09 15:09:45	Check the Data cable connection	<b>Ignore</b>

**Ignore** Verbergen des angezeigten Alarms

Die Registerkarte „**About**“ dient der Anzeige der Software- und Hardwarestände des Modules.

The screenshot shows the software interface for the POLYTRON MPX 106 D. The sidebar shows the selected module is MPM 1333 (highlighted with a red box). The main area displays detailed information about the MPM 1333 module.

Information	
Product ID:	93ee42e49abd5a25016cd96081d7e4e
Firmware Name:	release
Firmware Version:	1.6.0
Hardware Version:	1.0.0.0
Build Version:	10709
Release Date:	2023-10-21 22:45:17
Hardware Fingerprint:	4c30d6e39fcda3ec2b10a1c0ea21d7f

## 8.8 Programmierung des HDMI-Encodermodules MPM 4230 (Single-Slot-Modul)

Das MPM 4230 ist ein 4-Kanal-HDMI-Encodermodul mit vier HDMI 1.4 Eingängen. Das Modul unterstützt H.264 AVC und H.265/HEVC-Video-Formate.

Durch Anklicken des Modules in der Modulliste erfolgt die Weiterleitung zur Programmieroberfläche des angewählten Moduls. In diesem Menü erfolgt die Einstellung der systemspezifischen Parameter des MPM 4230. Durch Anwahl der Registerkarten „Basic Setting“, „Insertion“, „Output“ und „System“ können diese Einstellungen gemäß der Anwendung vorgenommen werden.

In der Registerkarte „Status“ erfolgt die Anzeige des Lock-Status, der Video-Auflösungen am Ein- und Ausgang sowie der Datenrate des Transportstromes gemäß den vorgenommenen Einstellungen.

Program	Signal	HDCP Encryption	Input Video Resolution	Output Video Resolution	Total Bitrate(Mbps)	Effective Bitrate(Mbps)	TS Analysis	Program Name
1	✓	Unencrypted	1280x720_50p	1280x720_50p	10.506	10.506		<b>1</b> Program-01
2	✗	Unencrypted	No_Video	No_Video	0.000	0.000		Program-02
3	✗	Unencrypted	No_Video	No_Video	0.000	0.000		Program-03
4	✗	Unencrypted	No_Video	No_Video	0.000	0.000		Program-04

### 1 TS-Analyse

Nach Betätigen des Buttons „Reset Counter“ startet die Aufnahme von Continuity Count Errors neu. Im Suchfeld kann gezielt nach Themen wie PID, Service, Typ, etc. gesucht werden.

PID	Bitrate(Mbps)	Bandwidth(%)	Continuity Count Error	Type	Service
0x00(0)	0.015	0.143	0	PAT	
0x64(100)	0.015	0.143	0	PMT	Program-01
0x65(101)	0.075	0.713	0	PCR	Program-01
0x66(102)	10.219	97.166	0	Video	Program-01
0x67(103)	0.189	1.797	0	Audio	Program-01

### 2 Program Name

Nach Klick auf den entsprechenden Programm-Name **Program-01** werden die Service Informationen dargestellt.

Type	PID	Bitrate(Mbps)
PCR	101(0x65)	0.074
PMT	100(0x64)	0.015
StreamType:27-Video(H264)	102(0x66)	10.235
StreamType:3-Audio	103(0x67)	0.176

In der Registerkarte „**Basic Setting**“ werden die Parameter der encodierten Programme festgelegt. Über den Button „Advanced Setting“ können die spezifischen Video- und Audioparameter sowie Serviceparameter angewählt und geändert werden.


The screenshot shows two views of the software interface for the MPM 4230 module. The top view displays the 'Basic Setting' tab, where multiple program entries are listed with various configuration parameters like Video Encoding Format (H.264), Video Resolution, GOP Size, and PID values. The bottom view shows the 'Advanced Setting' tab, which provides more detailed configuration options for each program, including checkboxes for Video Encoding Format, Video Resolution, Audio Encoding Format, and Service Parameters like Program Name and Provider Name. Both views include a red arrow pointing from the 'Advanced Setting' tab to the 'Basic Setting' tab, and a red circle around the 'Apply' button at the bottom right of the advanced settings screen.

Name	Wert	Name	Wert
<b>Video Encoder Details</b>			
<b>Video Type</b>	H.264, H.265	<b>Video PID</b>	32~8190
<b>Video Bitrate (Kbps)</b>	600~12000	<b>PCR PID</b>	32~8190
<b>GOP Size</b>	1~60	<b>PMT PID</b>	32~8190
<b>Video Resolution</b>	Auto, Manual <b>Horizontal Pixels:</b> 160~1920, <b>Vertical Pixels:</b> 120~1080, <b>Framerate:</b> 24~60, <b>Scan Type:</b> Progressive	<b>Program Name</b>	Länge 1~31
<b>Video Aspect Ratio</b>	Automatic, 16:9 (SD) , 4:3 (SD)		
<b>Profile</b>	MAIN HIGH		
<b>Audio Encoder Details</b>			
<b>Audio Enable</b>	Enable/Disable	<b>Delay (ms)</b>	-2000~2000
<b>Audio Type</b>	MPEG1_Layer2 AAC AC3	<b>Audio PID</b>	32~8190
<b>Audio Bitrate (Kbps)</b>	32~192(MPEG1_Layer2) 32~192(AAC) - <b>Option</b> 96~192 (AC3) - <b>Option</b>		
<b>Volume(dB)</b>	-20~20		
<b>Extras</b>			
<b>Shelter</b>	Enable/Disable	<b>X</b>	0~1920 (Dual)
<b>Y</b>	0~1080 (Dual)	<b>Width</b>	2~1920 (Dual)
<b>Height</b>	2~1080 (Dual)	<b>Color</b>	White/Black/Blue/Green/Red

Nach Betätigen des Buttons „**Apply**“ werden die Einstellungen übernommen.

Die Registerkarte „**Insertion**“ ermöglicht die Ergänzung von Zusatzinformationen im Bild. Mögliche Ergänzungen sind ein Logo, ein QR-Code oder ein Text, welche dem Bild an der gewünschten Position vorgeblendet werden.

### Logo

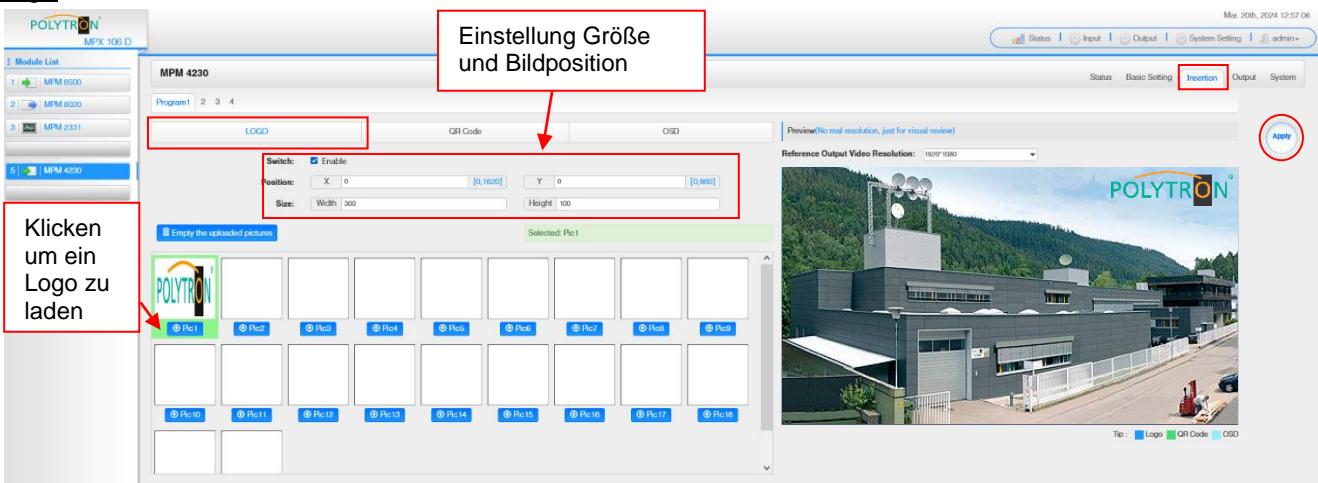


### LOGO Parameter

Werte	Position X	0~1920 (Dual)
Werte	Size width	2~1920 (Dual)

### LOGO Parameter

Werte	Position Y	0~1080 (Dual)
Werte	Size Height	2~1080 (Dual)

### QR-Code

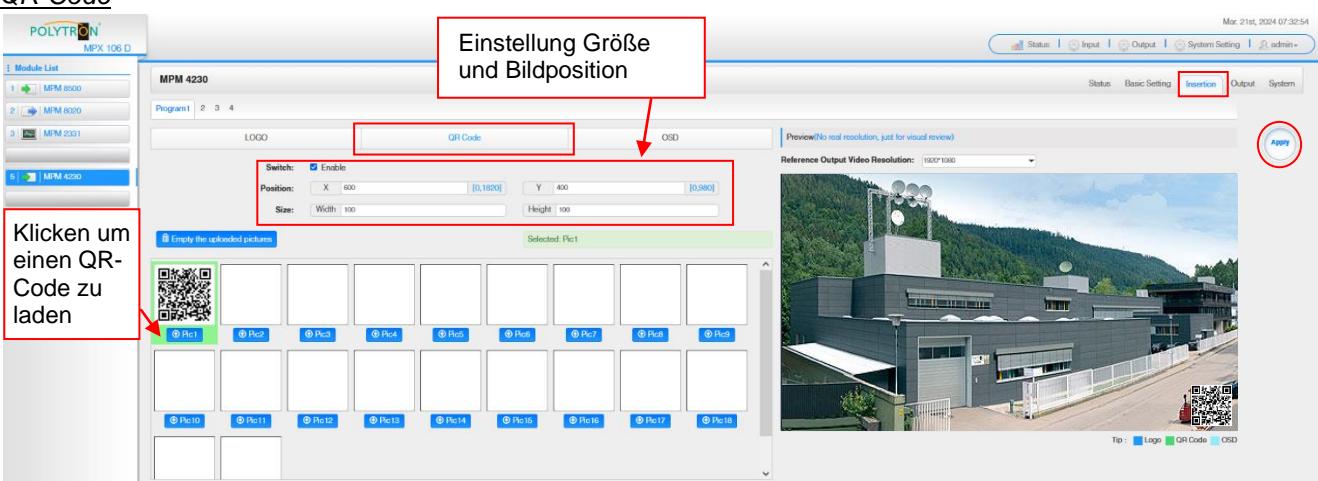


### QR Code Parameter

Werte	Position X	0~1920 (Dual)
Werte	Size width	0~1920 (Dual)

### QR Code Parameter

Werte	Position Y	0~1080 (Dual)
Werte	Size Height	0~1080 (Dual)

### OSD

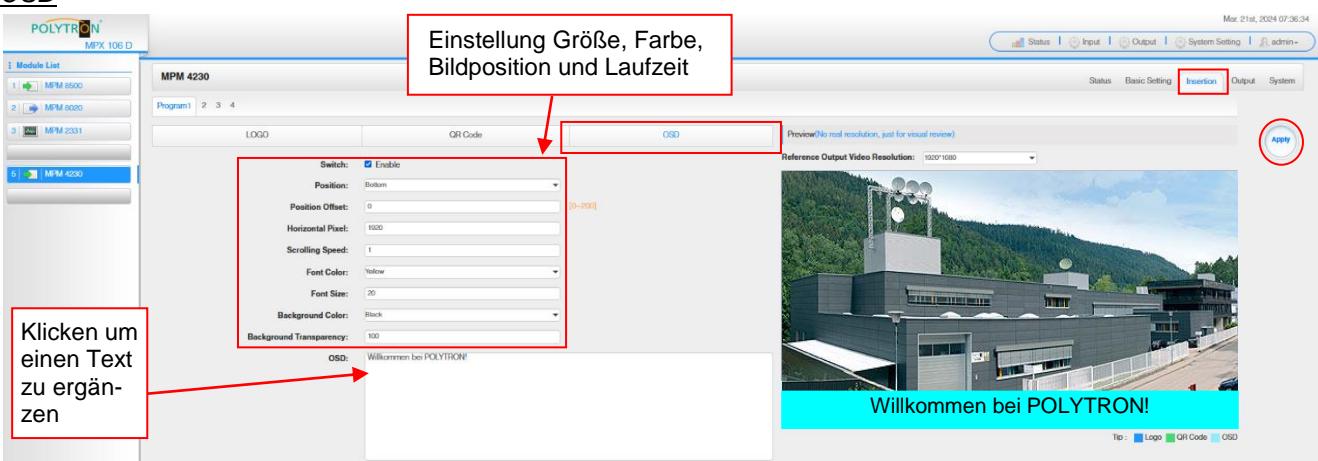


Klicken um einen Text zu ergänzen

Subtitle Parameter	Werte	Subtitle Parameter	Werte
<b>Position</b>	Bottom/Top/Middle	<b>Position Offset</b>	-200~200
<b>Horizontal Pixel</b>	10~1920	<b>Scrolling Speed</b>	1~20
<b>Front Color</b>	White/Black/Blue/Green/ Red/Yellow	<b>Front Size</b>	0~100

Nach Betätigen des Buttons „**Apply**“ werden die Einstellungen übernommen.

Die Registerkarte „**Output**“ dient der Festlegung der IP-Parameter für die direkte IP-Ausgabe sowie der Zuordnung der encodierten Services zu einem Ausgangsmodul oder dem Baseboard.

#### Direct IP Output

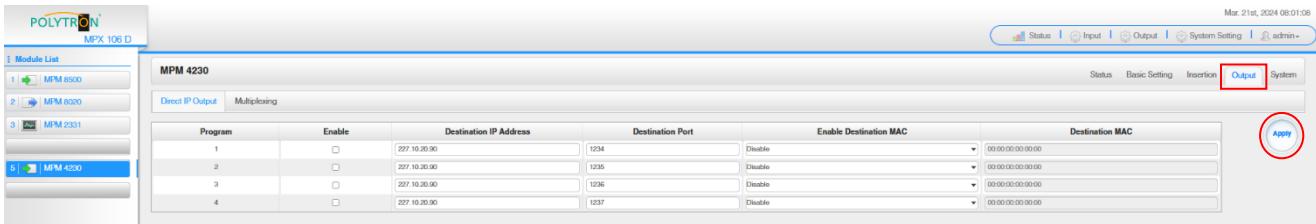

Diese Funktion ist speziell für die direkte IP-Ausgabe vorgesehen. Die Ausgabe auf diese Weise beansprucht keine Baseboard-Multicast-Bandbreite.

#### **Achtung!**


Wenn der IP-Ausgangskanal im Encoder-Modul und im Baseboard-IP-Ausgangsmodul gleichzeitig verwendet werden, müssen Multicast-IP-Adresskonflikte vermieden werden. Sind zwei gleiche IP-Adressen aktiviert, sind alle Multicast-Videos von Störungen betroffen.

Ziel-MAC aktivieren: Im Allgemeinen muss diese Option nicht aktiviert werden. Dies ist für Ausnahmefälle reserviert, in denen der Unicast-Stream nicht mit Unicast-IP-Adressen empfangen werden kann.

Nach Betätigen des Buttons „**Apply**“ werden die Einstellungen übernommen.

#### Multiplexing

Das gezielte Zuordnen des Programmes zu einem Ausgangsmodul und Ausgangstransportstrom oder zum Routing auf das Baseboard erfolgt durch Anklicken von direkt hinter dem gewünschten Programm.

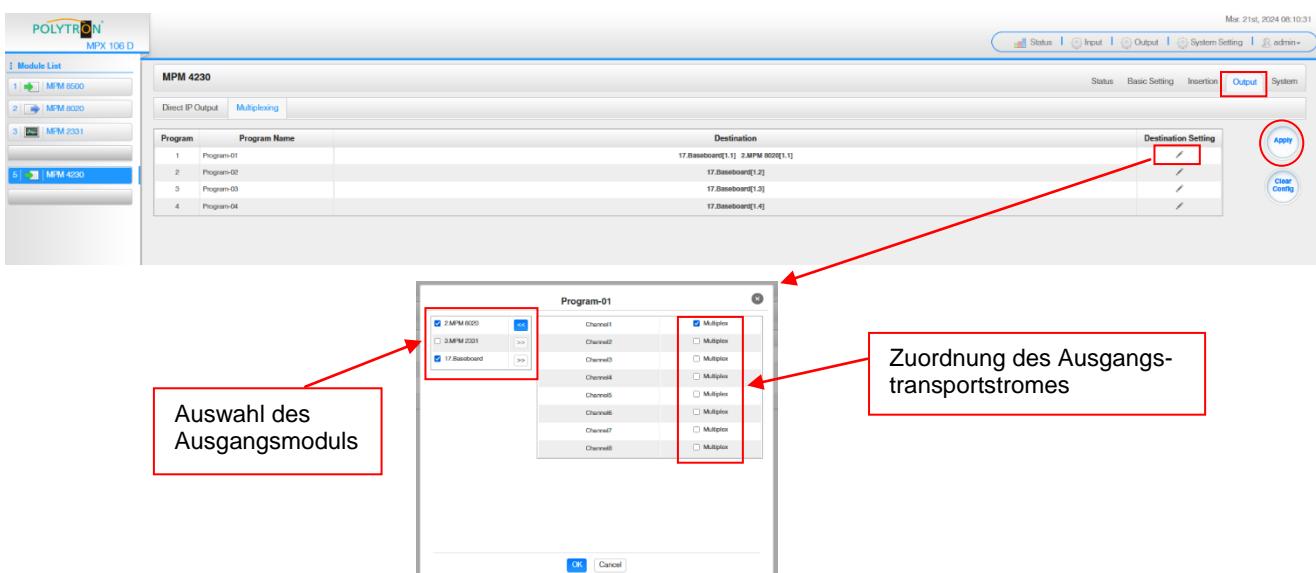


Nach Betätigen des Buttons „**OK**“ werden die Einstellungen übernommen.

Nach Betätigen des Buttons „**Apply**“ werden die Einstellungen übernommen.

Die Registerkarte „System“ ermöglicht die folgenden allgemeinen System-Einstellungen:

- License (Sicherung und Laden von Lizenzdateien)
- SNMP MIB (Möglichkeit des MIB Exports)
- Logs (Anzeige und Sicherung von Log-Daten)
- Others (Reboot = Neustart des Grundgerätes  
Reset to Defaults = Laden der Werkseinstellungen)

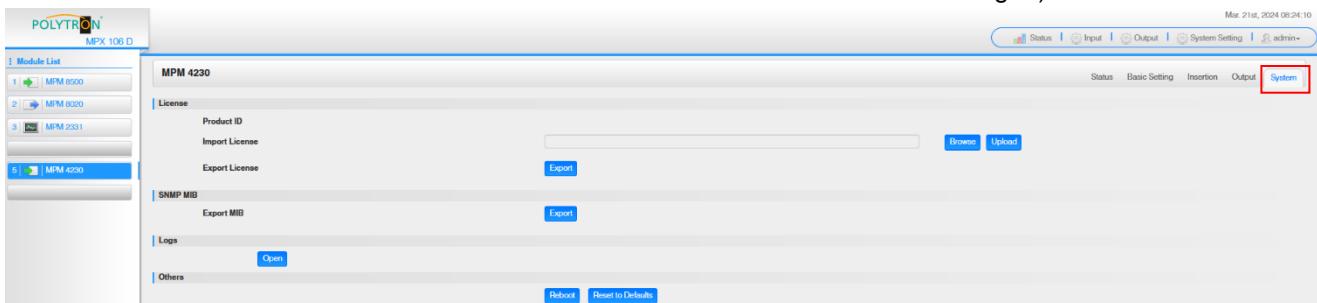

### Grundeinstellungen MPM4230

Modul	Video Encoding Format	Video Bitrate	Video Resolution	Audio Encoding Format	Insertion	Destination	Enable	Destination IP	Destination Port	Destination MAC
1/1.1	H.264	8000 kbps	Auto	MPEG1_Layer2	Nein	Direct IP Output	Nein	227.10.20.90	1234	Disable
1/1.2	H.264	8000 kbps	Auto	MPEG1_Layer2	Nein	Direct IP Output	Nein	227.10.20.90	1235	Disable
1/1.3	H.264	8000 kbps	Auto	MPEG1_Layer2	Nein	Direct IP Output	Nein	227.10.20.90	1236	Disable
1/1.4	H.264	8000 kbps	Auto	MPEG1_Layer2	Nein	Direct IP Output	Nein	227.10.20.90	1237	Disable

## 8.9 Programmierung des CI-Descrambler-Modules MPM 2331 (Single-Slot-Modul)

Das MPM 2331 ist ein CI-Descrambler-Modul mit zwei CI-Schächten zu Entschlüsselung von verschlüsselten Programmen. Das Modul unterstützt verschiedene CAM-Karten-Entschlüsselungssysteme, wobei die Anzahl der zu entschlüsselnden Programme vom genutzten CAM und Karte abhängig sind.

Durch Anklicken des Modules in der Modulliste erfolgt die Weiterleitung zur Programmieroberfläche des angewählten Moduls. In diesem Menü erfolgt die Einstellung der systemspezifischen Parameter des MPM 2331. Durch Anwahl der Registerkarten „CI“, „Service Configuration“ und „System“ können diese Einstellungen gemäß der Anwendung vorgenommen werden.

In der Registerkarte „**Status**“ erfolgt die Anzeige der gesamten und effektiven Bitrate gemäß den vorgenommenen Einstellungen. Voraussetzung für den Empfang von Programmen zur Entschlüsselung ist das Routen dieser aus dem vorhandenen Programmpool. Dies kann von den Receiverkarten oder vom IP-Eingang erfolgen.

### ACHTUNG

Es ist darauf zu achten, dass alle für die Entschlüsselung notwendigen PIDs (EMM, ECM, ...) zum Descrambling-Modul geroutet werden.

The screenshot shows the MPX 106 D software interface. On the left, a 'Module List' pane displays six modules: MPM 8500, MPM 8020, **MPM 2331**, MPM 4230, and MPM 4502. The MPM 2331 module is highlighted with a red box. On the right, the 'Status' tab of the MPM 2331 configuration window is active. It shows two channels: Channel 1.1 with a total bitrate of 20.194 Mbps and effective bitrate of 20.194 Mbps, and Channel 1.2 with a total bitrate of 0.000 Mbps and effective bitrate of 0.000 Mbps. The 'TS Analysis' section contains a button labeled '1' with a red box around it. The 'Service List' section contains a button labeled '2' with a red box around it. The top bar shows the date and time: Mar. 26th, 2024 11:58:51.

### 1 TS-Analysis

Nach Betätigen des Buttons „**Reset Counter**“ startet die Aufnahme von Continuity Count Errors neu. Dies sollte bei jedem Kanalwechsel betägtigt werden, um im Speicher abgelaufene Daten zu löschen. Im Suchfeld kann gezielt nach Themen wie PID, Service, Typ, etc. gesucht werden.

The screenshot shows the 'Channel 1.1 TS Analysis' sub-menu. It includes a note: '(When viewing or switching channels to view TS Analysis for the first time, please click on Reset Counter to refresh the data first)'. A 'Reset Counter' button is at the top right. Below is a search bar and a table with columns: PID, Bitrate(Mbps), Bandwidth(%), Continuity Count Error, Type, and Service. The table lists various PIDs corresponding to different service types like PrivateData, CAT, SDT, PMT, ECM, and ORF1/2 HD.

### 2 Service List

Nach Klick auf Service List werden alle Kanäle mit den empfangenen Services angezeigt. Nach Anwahl eines Services werden die Service Informationen dargestellt.

The screenshot shows the 'Service List' sub-menu for the MPM 2331. It displays two sections: 'Channel : 1.1' and 'Channel : 1.2'. The 'Channel : 1.1' section shows a list of services: [4911] ORF1 HD and [4912] ORF2W HD. The 'Channel : 1.2' section shows 'No Data'. A red arrow points from the 'Service List' button in the main menu to the 'Service List' section. Another red arrow points from the 'Service List' section to a detailed view of the [4911] ORF1 HD service, which is shown in a separate window with a table of stream types, PIDs, and bitrates.

In der Registerkarte „**CI**“ werden die Informationen zu den gesteckten CA-Modulen und Karten angezeigt. Bei Notwendigkeit kann ein automatisches Reset der CAMs programmiert werden. Ebenso ist der Aufruf des internen CA-Menüs und damit erweiterte Einstellungen möglich (sofern dies vom CAM unterstützt wird).

The screenshot shows the 'Module List' on the left with 'MPM 2331' selected. The main window displays 'MPM 2331' information. The 'Status' tab is active. The 'CI' tab is selected, showing 'CAM Max Bitrate: 72Mbps', 'CAM1 Auto Reset: Disable', and 'CAM2 Auto Reset: Disable'. Below this is the 'CAM1 (Initialize Success)' section with tables for 'Service Information' and 'Descrambling Status'. The 'CAM2 (Not inserted)' section is also shown. At the bottom is the 'CAM 1 CMD List' with various options and a 'Pin:' field. A red arrow points from the 'MMI Setting' button to the 'Apply' button, which is circled.

Nach Betätigen des Buttons „**Apply**“ werden die Einstellungen übernommen.

Die Registerkarte „**Service Configuration**“ dient der Zuordnung der vorhandenen Eingangskanäle oder Services zu einem Ausgangsmodul und den darin vorhandenen Ausgangstransportströmen oder zum IP-Ausgang des Basisgerätes.

Nach Anklicken des gewünschten Kanals öffnet sich das Menü zur Zuordnung des Kanals zu einem Ausgangsmodul und den darin verfügbaren Multiplex.

Das gezielte Zuordnen einzelner Services zu einem Ausgangsmodul und Ausgangstransportstrom erfolgt durch Anklicken von direkt hinter dem gewünschten Service.

The screenshot shows the 'Service Configuration' tab. It includes 'Channel Select: Channel 1.1', 'Program Scan', and 'Program Clear' buttons. The 'Service Name' and 'Descrambling' columns show entries for '4|911|ORF1 HD' and '4|912|ORF2W HD'. The 'Destination' column shows '17.Baseboard(1.1)'. The 'Destination Setting' column has three checkboxes. A red box highlights the 'Destination Setting' and another red box highlights the 'Zuordnung der Ausgänge' section, which contains a 'Clear Config' button. A red arrow points from the 'Destination Setting' box to the 'Zuordnung der Ausgänge' box.


Nach Betätigen des Buttons „**Apply**“ werden die Einstellungen übernommen. Der Button „**Clear Config**“ dient dem Löschen aller Einstellungen.

*Zuordnung eines Kanals (gesamter Transportstrom)*

This screenshot shows the 'Channel 1.1' configuration dialog. It lists 'Channel1' through 'Channel8' with 'Multiplex' checkboxes. A red box highlights the 'Auswahl des Ausgangsmoduls' section, which shows '2.MPM 8020' selected. Another red box highlights the 'Zuordnung des Ausgangstransportstromes' section, where 'Multiplex' is checked for Channel 8. Buttons at the bottom include 'OK' and 'Cancel'.

Nach Betätigen des Buttons „OK“ werden die Einstellungen übernommen.

### Zuordnung eines Services

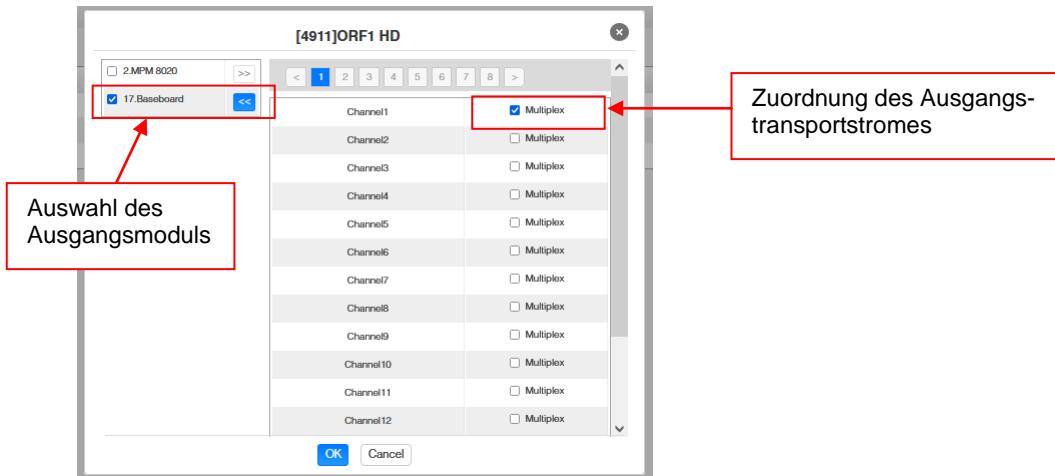

Nach Betätigen des Buttons „OK“ werden die Einstellungen übernommen.

Die Registerkarte „System“ ermöglicht die folgenden allgemeinen System-Einstellungen:

- Program Auto Scan (Aktivierung der automatischen Scan-Funktion)
- License (Sicherung und Laden von Lizenzdateien)
- SNMP MIB (Möglichkeit des MIB Exports)
- Logs (Anzeige und Sicherung von Log-Daten)
- Others (Reboot = Neustart des Grundgerätes)
- Reset to Defaults = Laden der Werkseinstellungen)

The screenshot shows the 'System' configuration page for the MPM 2331 module. It includes sections for 'Program Auto Scan' (Enable), 'License' (Product ID: EG25148910007, Import License, Export License), 'SNMP MIB' (Export MIB), 'Logs' (Open), and 'Others' (Reboot, Reset to Defaults). The top navigation bar shows 'Status', 'CI', 'Service Configuration', and a red-bordered 'System' tab. The date 'Mar. 27th, 2024 08:00:22' is also visible.

### Werkseinstellungen MPM 2331

Das Modul hat in seinen Werkseinstellungen keine Vorkonfigurationen, da das Routing vom bzw. zum Grundgerät oder einer Ein-/Ausgangskarte nötig ist. Daher müssen für die Inbetriebnahme zunächst die Routing-Parameter sowie die Auswahl der zu entschlüsselnden Programme erfolgen.

## Table of Contents

<b>1. Mounting and safety instructions .....</b>	<b>68</b>
<b>2. General information.....</b>	<b>70</b>
<b>3. Scope of delivery .....</b>	<b>70</b>
<b>4. Function and control elements .....</b>	<b>71</b>
<b>5. Mounting instructions .....</b>	<b>72</b>
<b>5.1 Mounting 19" Rack .....</b>	<b>72</b>
<b>5.2 Mains connection and grounding .....</b>	<b>72</b>
<b>6. Programming via the Ethernet interface (NMS).....</b>	<b>73</b>
<b>6.1 Network connection to the computer .....</b>	<b>73</b>
<b>7. Programming of the baseboard .....</b>	<b>74</b>
<b>7.1 Status menu .....</b>	<b>74</b>
<b>7.2 Menu "System Settings" .....</b>	<b>74</b>
<b>7.3 Menu "IP Input" .....</b>	<b>77</b>
<b>7.4 Menu "IP Output" .....</b>	<b>79</b>
<b>7.5 Menu "admin" .....</b>	<b>82</b>
<b>8. Programming of the modules.....</b>	<b>83</b>
<b>8.1 Programming of the DVB-S/S2 receiver module MPM 8500 (Double slot module) .....</b>	<b>83</b>
<b>8.2 Programming of the DVB-S/S2 receiver module with CI MPM 4502 (Single slot module) .....</b>	<b>92</b>
<b>8.3 Programming of the DVB-C receiver module with CI MPM 4702 (Single slot module) .....</b>	<b>100</b>
<b>8.4 Programming of the DVB-T/T2 receiver module with CI MPM 4802 (Single slot module) .....</b>	<b>104</b>
<b>8.5 Programming of the DVB-C output module MPM 16010 (Single slot module).....</b>	<b>108</b>
<b>8.6 Programming of the DVB-T output module MPM 8020 (Single slot module) .....</b>	<b>113</b>
<b>8.7 Programming of the transcoder processing module MPM 1333 (Single slot module) .....</b>	<b>118</b>
<b>8.8 Programming of the HDMI encoder module MPM 4230 (Single slot module) .....</b>	<b>124</b>
<b>8.9 Programming of the CI descrambler module MPM 2331 (Single slot module) .....</b>	<b>129</b>
<b>8.10 Programming of the multi-protocol module MPM 50330 (Single slot module) .....</b>	<b>xx</b>
<b>9. Technical data .....</b>	<b>132</b>

## 1. Mounting and safety instructions

Please observe the following safety instructions in order to prevent any risks for persons and/or damage to the device, as well as to contribute to environmental protection.

### Important instructions

Please read the operating instructions for the device(s) carefully before putting into operation! The instructions contain important information on installation, environmental conditions, service and maintenance. Save the operating instructions for later use. All operating instructions can be found on our website at: <https://polytron.de/index.php/en/services/operating-manuals>



#### Approved use

Use the device only at the permissible operating locations, under the permissible environmental conditions and for the purpose described in the operating instructions. If there is no information about the intended use (e.g. operating location, environmental conditions) or if the operating instructions do not contain any relevant information, you must contact the manufacturer of this device to ensure that the device can be installed. If you do not receive any information from the manufacturer, the device must not be put into operation.



#### Transport

Please check the packaging and the device for damages in shipment immediately upon receipt. Do not put a damaged device into operation.

Transporting the device by the power cord is not permitted as this can damage the power cord or the strain relief. Insulation that serves to protect against mains voltages can be damaged by excessive loads (e.g. fall, shock, vibration).



#### Attention

The rated voltage on the device must correspond with the mains voltage to be used. When operating devices with protection class I, connection to power sockets with a protective conductor connection is mandatory. The instructions for operating the device must be observed.



#### Grounding and potential equalisation

Please establish grounding and perform potential equalisation before initial startup. According to the currently valid version of EN 60728-11, coaxial receiving and distribution systems must meet the safety requirements with regard to earthing, equipotential bonding etc, even if the device is removed. Otherwise, damage to the product, fire, or other dangers can occur. In addition, the earth connection on the device can be used. Other devices within touching distance are to be integrated in the equipotential bonding. Operation without a protective conductor connection, device grounding or equipotential bonding is not permitted. If damaged, the device must be taken out of operation.

The electrical system for powering the device, e.g. house installations must contain protective devices against excessive currents, earth faults and short circuits. Follow all applicable national safety regulations and standards.



#### Connection cables

Always install the connection cables with a loop so that condensed and/or splashing water cannot run into the device.



#### Select installations site

Plan the installation location so that children cannot play with the device and its connections. The device should only be installed on a solid, flat and most of all fire-resistant surface. Observe the operation position of the devices specified in the operating instructions. Avoid strong magnetic fields in the surroundings. Too strong a heat effect or accumulation of heat will have an adverse effect on the durability. Don't mount directly over or near heating systems, open fire sources or the like, where the device is exposed to heat radiation or oil vapours. Mount fan-cooled and passively cooled devices so that the air can be sucked in unhindered through the lower ventilation slots and heat can escape through the upper ventilation slots. Ensure free air circulation, ventilation slots must not be covered. Do not place any objects on the devices. Installation in recesses, alcoves etc and covering the installation site, e.g. through curtains is not allowed. To avoid heat build-up, the correct installation position must be observed and all-round, free ventilation must be ensured in accordance with the information in the operating instructions! When installing the cabinet, sufficient air convection must be possible to ensure that the maximum permissible ambient temperature of the device is maintained.



#### Moisture

The devices have no protection against water and may therefore only be operated and connected in dry rooms. Dripping/splashing water and high humidity damage the device. If there is condensation, wait until the device is completely dry. Select the operating environment according to the specified IP protection class.



#### Heat

Housing parts near cooling fins and cooling fins themselves can get very hot. Therefore, you should not touch these parts.



#### Mounting and service work

The device may only be installed and operated by qualified persons (in accordance with EN 62368-1) or by persons who have been instructed by experts in accordance with the rules of technology. Maintenance work may only be carried out by qualified service personnel. Before starting the service work, switch off the operating voltage and secure it against being switched on again. In the event of service or danger, the mains plug serves as a disconnect device from the mains voltage and must therefore be accessible and usable at all times. In order to guarantee interference immunity, all device covers must be screwed tight again after opening.

Fuses are only to be changed by authorised specialists. Only fuses of the same type may be used.



#### Repairs

Repairs may only be carried out by the manufacturer. Improper repairs can pose significant risks to the user. In the event of malfunctions, the device must be disconnected from the mains and authorised specialist personnel must be consulted. If necessary, the device must be sent to the manufacturer.



#### Thunderstorm

According to EN 60728 part 1 safety requirements, due to increased risk of lightning, maintenance and / or installation work should not be carried out during thunderstorms on the device or the system.

High overvoltages (lightning strikes, overvoltages in the power grid) can damage insulation that serves to protect against mains voltage.

#### Ambient temperature

The permissible ambient temperatures specified in the technical data must be observed for operation and storage, even if the climatic conditions change due to external influences (solar radiation etc.). Overheating the device can damage the insulation that serves to isolate the mains voltage.



#### Termination

Unused coaxial connections should be terminated with 75 Ohm terminating resistors. For DC-supplied connections, DC voltage decoupling must be used or use 75 Ohm terminating resistors with integrated DC decoupling.

#### Attention

This module contains ESD components! (ESD = Electrostatic Sensitive Device).

An electrostatic discharge is an electrical current pulse, which can flow through an electrically insulated material, when triggered by a large voltage difference. To ensure the reliability of ESD components, it is necessary to consider their most important handling rules:

- » Pay attention permanently to potential equalisation (equipotential bonding)!
- » Use wrist straps and approved footwear for personnel grounding!
- » Avoid electrostatically chargeable materials such as normal PE, PVC, polystyrene!
- » Avoid electrostatic fields >100 V/cm!
- » Use only labeled and defined packing and transportation materials!

**Damage caused by faulty connections and/or improper handling are excluded from any liability.**



#### Recycling

All of our packaging materials (packaging, identification sheets, plastic foil and bags) are fully recyclable. The relevant disposal instructions are listed below. The devices are to be disposed of properly according to the current disposal regulations of your district/country/state as electronic scrap. In compliance with the following requirements:

EU

WEEE Directive (2012/19/EU)



WEEE-Reg.-Nr. DE 51035844

Italien

Direttiva RAEE (2012/19/UE)



Raccolta carta



20  
PAP

22  
PAP

Raccolta plastica



04  
LDPE

06  
PS

07  
0



#### Guarantee conditions

The general terms and conditions of Polytron-Vertrieb GmbH apply. The general terms and conditions can be found on our website at: <https://polytron.de/index.php/en/company/general-terms-and-conditions>

## GENERAL INFORMATION ON THE OPERATING INSTRUCTIONS

- All parameter data are examples only.
- User adjustable parameters are freely selectable.
- Menu views can vary slightly depending on the software version; the operability does not change as a result.
- The images in this manual are for illustrative purposes only.

## 2. General information

The MPX 106 D/MPX 106 D pro headend is a modular platform for receiving DVB signals and converting to IP and/or DVB modulation on the output. Depending on the requirements, up to 6 modules slots can be equipped with receiver, encoder or modulator modules in order to meet all satellite reception, decoding, multiplexing, modulation and IP processing requirements.

An integrated high-performance gigabit switch can make the IP signal available in the whole IP network to be used by PCs / Notebooks with the appropriate software, IP compatible TVs or set-top boxes that support the „DVB IPTV standard. At the same time, reception via the cable network can be enabled by plugging in DVB-C modulator modules. Via the web browser user interface, the devices can be programmed easily and quickly. The selected settings can be saved and archived as a backup or transferred to other devices. Due to the compact design, the extensive functions and the low operating costs, the modular MPX headend series is the optimal choice for the installation of cable or IPTV systems in hotels, hospitals or office buildings.

### Note

After a power failure, all data are retained.

## Device variants

MPX 106 D	5530001	1RU Base unit – 6 slots; 120 W
MPX 106 D pro	5530002	1RU Base unit – 6 slots; 400 W; 2x SFP
MPS 16530	5530050	1RU Base unit – 16x SAT FTA into IP (2 slots free)
MPS 16532	5530051	1RU Base unit – 16x SAT with 4x CI into IP (2 slots free)
MPS 16550	5530053	1RU Base unit – 16x SAT FTA into IP/QAM (1 slot free)
MPS 16552	5530052	1RU Base unit – 16x SAT with 4x CI into IP/QAM (1 slot free)

## Module overview

### Receiver modules

MPM 8500	5530010	8x DVB-S/S2 Receiver FTA	- 8 inputs (double slot)
MPM 4502	5530011	4x DVB-S/S2 Receiver 2xCI	- 2 inputs (single slot)
MPM 4702	5530012	4x DVB-C Receiver 2xCI	- 1 input (single slot)
MPM 4802	5530013	4x DVB-T/T2 Receiver 2xCI	- 1 input (single slot)

### Modulator modules

MPM 16010	5530020	16x QAM Modulator	- 1 output (single slot)
MPM 8020	5530025	8x OFDM Modulator	- 1 output (single slot)

### Encoder modules

MPM 4230	5530030	4 channel HDMI Encoder H.264/H.265	- 4 inputs (single slot)
MPM 4430	5530031	4 channel SDI Encoder H.264/H.265	- 4 inputs (single slot)

### Transcoder modules

MPM 1333	5530035	Transcoder module	- single slot
----------	---------	-------------------	---------------

### IP Gateway modules

MPM 50330	5530055	UDP/RTP/HLS/SRT into UDP/RTP/SRT	(single slot)
-----------	---------	----------------------------------	---------------

### Scrambler/Descrambler module


MPM 2331	5530040	CI Scrambler/Descrambler	- 2x CI (single slot)
----------	---------	--------------------------	-----------------------

## 3. Scope of delivery

- 1 x Base unit 1RU
- 1 x Power cord
- 1 x Quick-start guide, mounting and safety instruction
- 1 x Specific modules based on order
- 1 x Mounting accessory

## 4. Function and control elements

### Front view

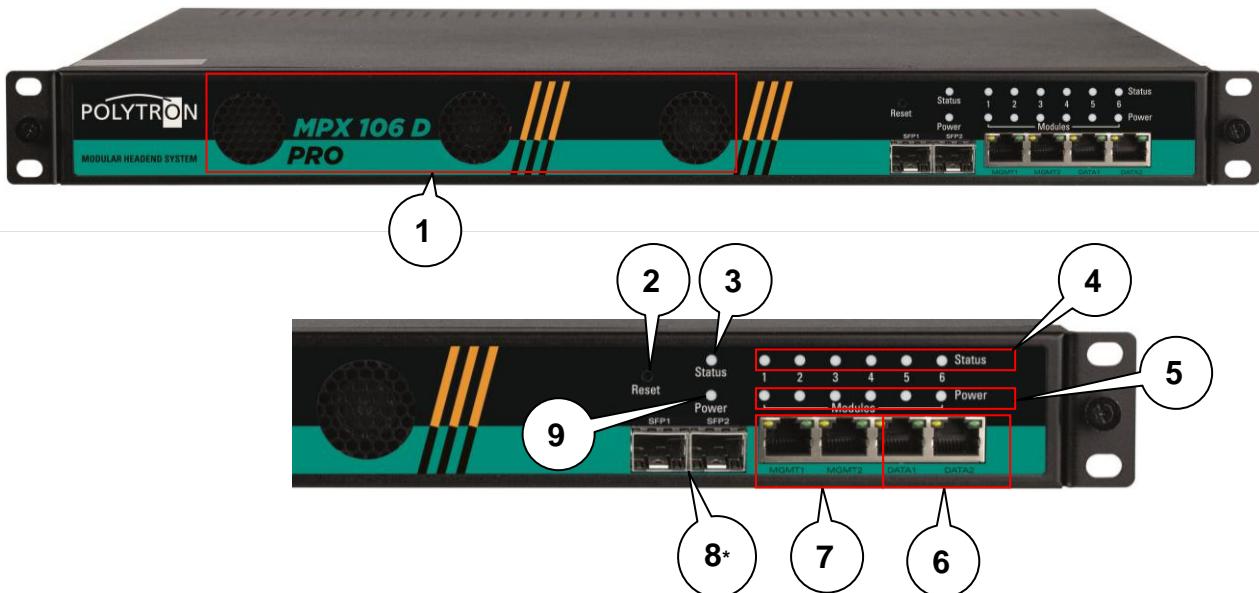

- 1 Ventilation openings (must not be covered during operation!)
- 2 Reset button
- 3 „Status“ indicator base unit
- 4 „Status“ indicator module slots 1-6
- 5 „Power“ indicator module slots 1-6
- 6 IP streaming ports „DATA1“ & „DATA2“
- 7 IP management ports „MGMT1“ & „MGMT2“
- 8\* SFP ports (only MPX 106 D pro)
- 9 „Power“ indicator base unit

### Power base unit

LED green	Device switched on
-----------	--------------------

### Status base unit

LED green	Operation status base unit okay
LED red	Configured IP input no lock status Configured IP output abnormal (e.g. bitrate 0)

### Power module slot 1-6

LED green	Module switched on
-----------	--------------------

### Status module slot 1-6

LED green	Module detected / plugged in / error-free operating status
LED red flashed	Module status loading
LED red	Module error detected Receiver module: input signal no lock CI → descrambling error Encoder module: missing signal input error or interruption during encoding Modulator module: output signal is abnormal (e.g. not output) Bitrate overflow per channel

### IP ports

IP streaming ports	RJ45, Ethernet 1 GBit/s, UDP/RTP
IP management ports	RJ45, Ethernet 1 Gbit/s

## Rear view




- 10 Module slots 1-6 (individual equippable)
- 11 Mains connection (redundancy power supply)
- 12 Grounding connection

## 5. Mounting instructions

### 5.1 Mounting 19“ Rack

The MPX 106 D (pro) is designed for installation in a 19" rack. The space required in the 19" rack is 1 RU. Only modules specified by the manufacturer may be used. Unauthorized replacement of assemblies can result in damage to the device or other hazards. To install the device in the 19" rack, please follow the steps below:

1. Determine the desired position in the 19" rack and insure that all ventilation slots/holes and the exhaust on the back of the devices are not covered. It must be insured that the air can circulate freely through the ventilation holes.
2. Mount the brackets on the desired position in the rack.
3. Insert the rack mount nuts into the desired mounting holes in the 19" rack.

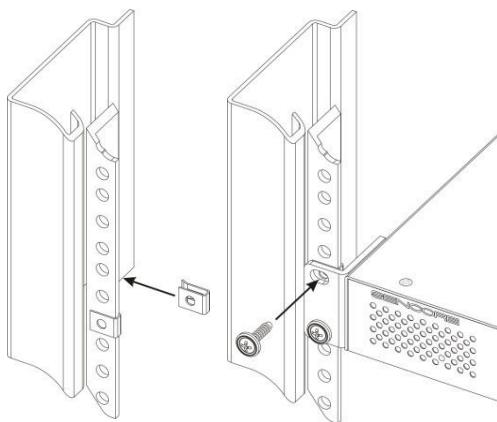

4. Now mount the MPX 106 D (pro) by fastening the device in the 19" rack with the four screws supplied.

#### Note

The device must be acclimatized. To do this, the device must be adjusted to the new ambient conditions for at least 30 minutes. Switching on a device that has not acclimatized can lead to short circuits or other damage to the device!

### 5.2 Mains connection and grounding

Please only use the supplied 3-pin power cord. The mains plug must be pulled out for installation or when working on the wiring.

The device must be grounded in accordance with EN 60728-11.

- Strip approx. 15 mm of the cable insulation of the grounding cable (4mm<sup>2</sup>).
- Push stripped end under the earth screw and tighten the screw.

## 6. Programming via the Ethernet interface (NMS)

If changes to the basic configuration are made via the Ethernet interface, the respective HTML user interface must be accessed via a connected computer. An Internet browser is required as an operating program.

### 6.1 Network connection to the computer

#### System requirements:

- PC/laptop with Ethernet interface 10/100 Mbps
- Internet browser (e.g. Windows Internet Explorer, Mozilla Firefox, or similar)

#### Note on setting up a network connection:

PC and MPX device are connected to the network via an Ethernet cable. For connection acquisition, the IP addresses of the devices must be matched first.

In the delivery state, the **MPX IP address is: 192.168.1.10**. The address of the network connection in the PC must be adapted to the IP address of the MPX (subnet mask: 255.255.255.0, IP address: 192.168.001.xxx). xxx must not exactly match the IP address of the MPX device and the installed modules. Please note that the installed modules have their own IP addresses. The digits 0, 255 or already used IP addresses are not permitted. If a proxy server is used, it must be disabled in the network connections. These settings are made on the PC under "Network connections → LAN connection". After individualization of the IP addresses, the network connection between the devices can be established. If a switch is connected between MPX headend and PC or other devices, this switch should support IGMP V2 and IGMP snooping function. If the switch you are using is not properly configured, it can cause network problems. The internal switch of the base unit is pre-configured with the following values for IGMP:

The screenshot shows the 'Multicast snoop' configuration section with the following settings:

IGMP snooping function	<input checked="" type="radio"/> Enable	<input type="radio"/> Disable
IGMP inquiry	<input checked="" type="radio"/> Enable	<input type="radio"/> Disable
IGMP inquiry interval	125	Second (60-1000)
Group members life time	300	Second (120-5000)

Below this is the 'Static multicast table configuration' section:

	No.	multicast address	VLAN ID	Port number	Type
<input type="checkbox"/>	1	01:00:5E:00:00:FC	2	15	learning
<input type="checkbox"/>	2	01:00:5E:00:00:FB	2	15	learning
<input type="checkbox"/>	3	01:00:5E:00:00:F8	1	13	learning
<input type="checkbox"/>	4	01:00:5E:00:00:FC	1	13	learning
<input type="checkbox"/>	5	01:00:5E:16:96:03	1	13	learning
<input type="checkbox"/>	6	01:00:5E:16:96:0F	2	8	learning
...	...	...	...	...	...

#### Establishing a connection:

Enter the IP address of the device (default IP address: **192.168.1.10**) into the address field of the browser and press the "Enter" confirmation key.

The connection to the device is established and the associated login window is displayed:



Access to the configuration menu is password-protected. The default settings are as follows:

Username: admin

Password: admin

Press the **"Login"** button to confirm the access data.

#### Note

If you do not (or no longer) know your password or username, you can use the reset button on the front of the device to reset it to the delivery status. The device will be set to the factory access data and Ethernet settings. Configurations that have already been customized are retained.


## 7. Programming of the baseboard

If changes of the basic configuration are made, they are made in the baseboard settings.

### 7.1 Status menu


After successful login, the status menu is displayed. It contains the following information:

1. Module List shows the inserted modules
2. Menu bar and time display
3. Status
  - “Device Status”** shows the operational status of the base unit and the modules as well as the fan status
  - “Device Information”** shows the firmware-, software- and hardware version of the base unit and the inserted modules

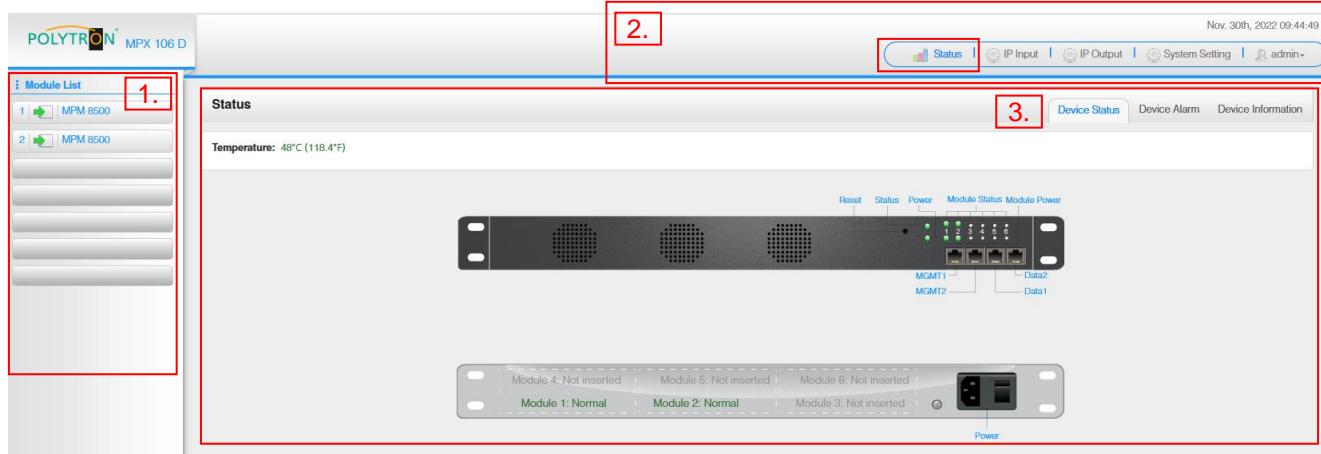


By selecting the tab **“Device Information”** the menu with the device information will be opened.

The device-specific information (firmware, software and hardware version) for the baseboard and the plugged modules is displayed in this menu.

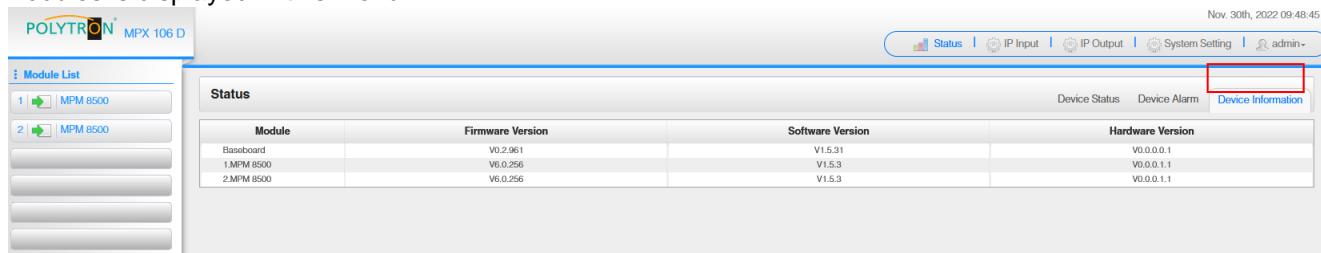

### 7.2 Menu “System Settings”

In this menu the setting of the system specific parameters of the MPX headend can be done. By selecting the tabs “Network”, “System”, “Time”, “User” and “SNMP”, these settings can be made according to the application.

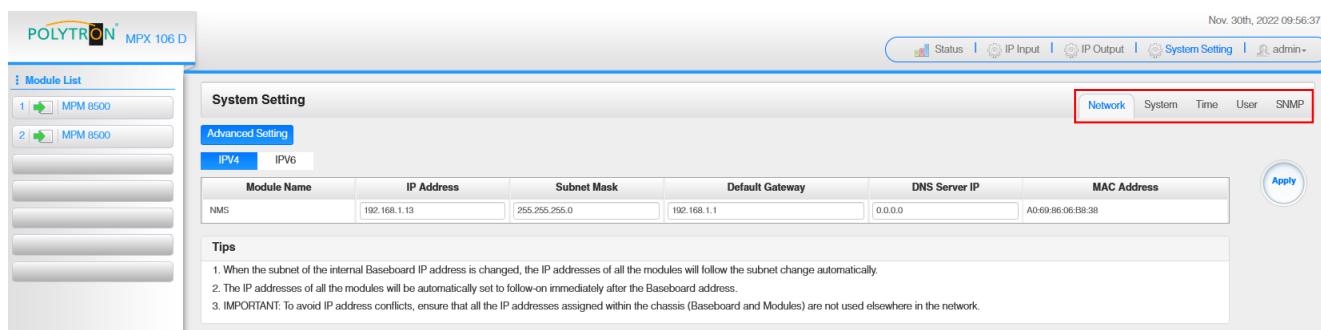

Selecting the “**Network**” tab opens the menu for assigning the network parameters for the base unit. You can choose between allocation according to IPV4 and IPV6. After pressing the button “**Advanced Setting**“ the network parameters of the data board can be set. The internal network parameters for the inserted modules are also displayed.

Module Name	IP Address	Subnet Mask	Default Gateway	DNS Server IP	MAC Address
NMS	192.168.1.13	255.255.255.0	192.168.1.1	0.0.0.0	A0:69:86:06:B8:38
DATA	10.184.55.10	255.255.255.0	10.184.55.254	0.0.0.0	A0:69:86:06:B8:37
1:MPM 8500	10.184.55.11	255.255.255.0	10.184.55.254		A0:69:86:06:B8:2D
2:MPM 8500	10.184.55.12	255.255.255.0	10.184.55.254		A0:69:86:06:B8:64

**Tips**

- When the subnet of the internal Baseboard IP address is changed, the IP addresses of all the modules will follow the subnet change automatically.
- The IP addresses of all the modules will be automatically set to follow-on immediately after the Baseboard address.
- IMPORTANT: To avoid IP address conflicts, ensure that all the IP addresses assigned within the chassis (Baseboard and Modules) are not used elsewhere in the network.

## Note

The IP address assignment for the modules in a basic device is done automatically using the last 3 digits (</> 127) of the IP address of the DATA port.

DATA port: 10.184.55.10 → <127 → Module addresses from 10.184.55.11 ascendant

DATA port: 10.184.55.135 → >127 → Module addresses from 10.184.55.134 descending

After pressing the button “**Apply**” all adjustments will be accepted.

The menu “**System**“ enables the following general system settings:

- Upgrade (Update of the modules and the base board)
  - Configuration (Saving and Loading a Configuration)
  - License (Saving and Loading the license files)
  - Standard (Selecting of the modulation and LCN standards)
  - SNMP MIB (Possibility of MIB export)
  - Logs (Display and backup of Log data)
  - Reboot Subboard (Possibility of reboot the modules)
  - Clear Power Alarm (Clear of power error messages)
  - Others (Reboot = restart of the basic device)
- Reset to Defaults = load the factory settings for the IP input and IP output settings)

**Upgrade**

Select Module: Automatic Detection

**Configuration**

Import Configuration

Export Configuration: Export

**License**

Product ID

Import License

Export License: Export

**Standard**

Select Standard: DVB

Select LCN Standard: International

**SNMP MIB**

Export MIB: Export

**Logs**

Open

**Reboot Subboard**

Reboot Subboard: 1: MPM 8500

**Clear Power Alarm**

Clear

**Others**

Reboot Reset to Defaults

In the menu “**Time**“ the assignment of the time zones as well as the date and time settings can be done.

Nov. 30th, 2022 10:41:37

Module List

System Setting

Network System **Time** User SNMP

System Time: Nov. 30th, 2022 10:41:37

Time Zone: UTC +0 : 00

Mode: Manual

Time: 2022/11/30 10:41:30

**Apply**

After pressing the button “**Apply**” all adjustments will be accepted.

In the menu “**User**“ the password can be assigned and new users can be created.

Nov. 30th, 2022 10:46:41

Module List

System Setting

Network System **User** Time SNMP

**Add User**

Account	Role	Phone	Login Time	Status	Operator
admin	Administrator	-	2022/11/30 09:44:43	Enable	Password

**Add User**

Account: [3-18]

Password: [2-20]

Confirm Password: [2-20]

Phone:

Status: enable

**OK** **Cancel**

After pressing the button “**Add User**“ a new sub menu will be opened and new users can be created.

After the new user has been created, the access authorizations can be set.

Nov. 30th, 2022 10:53:32

Module List

System Setting

Network System **User** Time SNMP

**Add User**

Account	Role	Phone	Login Time	Status	Operator
admin	Administrator	-	2022/11/30 09:44:43	Enable	Password
SWI	Operator	-	-	Enable	<b>Edit</b> <b>Password</b> <b>Disable</b> <b>Delete</b> <b>Authority</b>

**Authority**

Slot	<input checked="" type="checkbox"/> Visible	<input checked="" type="checkbox"/> Modify
Main Board		
Main BoardInput	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Main BoardOutput	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Main BoardSetting	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Main BoardNetwork	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Main BoardSystem	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Main BoardTime	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Main BoardUser	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Main BoardNMS Register	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Main BoardSNMP	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Slot 1	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Slot 2	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Slot 3	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Slot 4	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Slot 5	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

**OK** **Close**

In the menu “**SNMP**“ the SNMP function can be activated and the sending of trap messages can be set.

Nov. 30th, 2022 11:06:10

Status | IP Input | IP Output | System Setting | admin+

Network System Time User **SNMP**

**SNMP:** Enable

Trap IP Address1 (IPv4): 0.0.0.0 Enable:

Trap IP Address1 (IPv6): 2001::c0a8:1af Enable:

Trap IP Address2 (IPv4): 0.0.0.0 Enable:

Trap IP Address2 (IPv6): 2001::c0a8:1ae Enable:

Read-Only Community: public

Read-Write Community: private

**Apply**

After pressing the button “**Apply**” all adjustments will be accepted.

### 7.3 Menu “IP Input“

In this menu the IP input data of the MPX headend can be set. Up to 120 transport streams (SPTS or MPTS) can be created. By selecting the tab “Basic Setting”, “IGMP Setting” or “Service Configuration” these settings can be adapt according the application. In the menu “Status” the transport streams are displayed based on the accepted settings.

The total bit rate and the bit rate for each transport stream, the IP address and the port as well as the effective bit rate can be checked in the “**Status**” menu. The button “**TS-Analysis**“ shows the results of a TS analysis per transport stream and the button “**Service List**“ lists all services from the selected transport stream.

Nov. 30th, 2022 11:36:17

Status | IP Input | IP Output | System Setting | admin+

Total Bitrate : 0.000 Mbps

Channel	IP Address : Port	Effective Bitrate(Mbps)	Total Bitrate(Mbps)	TS Analysis	Service List
1.1	0.0.0.0 : 0	0.000	0.000	<b>1</b>	<b>2</b>
1.2	0.0.0.0 : 0	0.000	0.000		
1.3	0.0.0.0 : 0	0.000	0.000		
1.4	0.0.0.0 : 0	0.000	0.000		
1.5	0.0.0.0 : 0	0.000	0.000		
1.6	0.0.0.0 : 0	0.000	0.000		
1.7	0.0.0.0 : 0	0.000	0.000		
1.8	0.0.0.0 : 0	0.000	0.000		
1.9	0.0.0.0 : 0	0.000	0.000		
1.10	0.0.0.0 : 0	0.000	0.000		

#### 1 TS-Analysis

Channel 1.1 TS Analysis

Reset Counter

Search

PID	Bit Rate(Mbps)	Bandwidth(%)	Continuity Count Error	Type	Service
0x0(0)	0.001	0.085	0	PAT	
0x11(17)	0.001	0.085	0	SDT	
0x102(258)	0.001	0.085	0	Other	
0x103(259)	0.001	0.085	0	Other	
0x201(513)	0.269	22.816	0	Other	
0x202(514)	0.242	20.526	0	Other	
0x294(660)	0.021	1.781	0	Other	
0x296(670)	0.021	1.781	0	Other	

Tips:

After pressing the button “**Reset Counter**“ restarts the recording of continuity count errors.

In the search field, you can search specifically for topics such as bit rate, service, bandwidth, etc.

#### 2 Service List

Channel : 1.1

#	Service
1	[302] CCTV 2
2	[303] CCTV 7

[302] CCTV 2

Type	PID	Bit Rate(Mbps)
PCR	8190	0.044
PMT	258	0.018
Video(MPEG2)	513	4.899
Audio	660	0.256

**Close**

After clicking on a service, all service-specific data will be displayed.

In the menu “**Basic Setting**“ all IP input parameters can be set. The several channels must be activated by clicking the check box “Enable“.

Channel	Enable	Destination IP Address	Destination Port	Protocol	Smoothing Mode	Smoothing Bitrate Value(...)	Pkt Length
1.1	<input type="checkbox"/>	227.20.30.1	1234	UDP	Bilrate Auto Smoothing	--	Auto
1.2	<input type="checkbox"/>	227.20.30.2	1234	UDP	Bilrate Auto Smoothing	--	Auto
1.3	<input type="checkbox"/>	227.20.30.3	1234	UDP	Bilrate Auto Smoothing	--	Auto
1.4	<input type="checkbox"/>	227.20.30.4	1234	UDP	Bilrate Auto Smoothing	--	Auto
1.5	<input type="checkbox"/>	227.20.30.5	1234	UDP	Bilrate Auto Smoothing	--	Auto
1.6	<input type="checkbox"/>	227.20.30.6	1234	UDP	Bilrate Auto Smoothing	--	Auto
1.7	<input type="checkbox"/>	227.20.30.7	1234	UDP	Bilrate Auto Smoothing	--	Auto
1.8	<input type="checkbox"/>	227.20.30.8	1234	UDP	Bilrate Auto Smoothing	--	Auto
1.9	<input type="checkbox"/>	227.20.30.9	1234	UDP	Bilrate Auto Smoothing	--	Auto
1.10	<input type="checkbox"/>	227.20.30.10	1234	UDP	Bilrate Auto Smoothing	--	Auto
1.11	<input type="checkbox"/>	227.20.30.11	1234	UDP	Bilrate Auto Smoothing	--	Auto
1.12	<input type="checkbox"/>	227.20.30.12	1234	UDP	Bilrate Auto Smoothing	--	Auto
1.13	<input type="checkbox"/>	227.20.30.13	1234	UDP	Bilrate Auto Smoothing	--	Auto
1.14	<input type="checkbox"/>	227.20.30.14	1234	UDP	Bilrate Auto Smoothing	--	Auto
1.15	<input type="checkbox"/>	227.20.30.15	1234	UDP	Bilrate Auto Smoothing	--	Auto
1.16	<input type="checkbox"/>	227.20.30.16	1234	UDP	Bilrate Auto Smoothing	--	Auto

After pressing the button “**Apply**” all adjustments will be accepted.

After clicking the button “**Batch Setting**“ multiple channels can be configured at the same time. After that, the following menu will be opened to configure the key data.

Select All	<input type="checkbox"/>	Start Channel-End Channel	1	-	120
<input checked="" type="checkbox"/> Enable	Disable	<input checked="" type="checkbox"/> Destination IP Address	227.10.20.80	Same	<input type="checkbox"/>
<input checked="" type="checkbox"/> Protocol	UDP	<input checked="" type="checkbox"/> Destination Port	1234	Same	<input type="checkbox"/>
<input checked="" type="checkbox"/> Smoothing Mode	Bilrate Auto Smoothin	<input checked="" type="checkbox"/> Smoothing Bitrate Value	50		<input type="checkbox"/>
		<input checked="" type="checkbox"/> Pkt Length	7		<input type="checkbox"/>

After pressing the button “**Apply**” all adjustments will be accepted.

The menu “**SNMP Setting**“ enables the selection of the IGMP version, an auto function for report creation and the report cycle.

IGMP Version:	V2
IGMP Automatic Report:	Enable
IGMP Report Cycle(s):	15

After pressing the button “**Apply**” all adjustments will be accepted.


In the menu “**Service Configuration**“ the IP input transport streams can be assigned to a multiplex. Furthermore, when you select “Bypass”, the output channel is occupied by this stream. The channel is then no longer available for other streams.

Service Name	Destination	Destination Settings
Channel 1.1		<input type="checkbox"/>
[302] CCTV 2		<input type="checkbox"/>
[303] CCTV 7		<input type="checkbox"/>
Channel 1.2		<input type="checkbox"/>
[5] BCE		<input type="checkbox"/>


After pressing the button “**Apply**” all adjustments will be accepted.

If the button “**Clear Config**” will be pressed, all configurations will be deleted.

After selecting on the channel level the following menu will be opened and the channel can be assigned to a multiplex or for use in bypass mode.

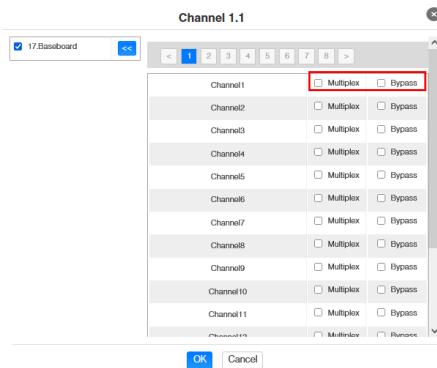

After pressing on the service level, the following menu will be opened and the channel can be assigned to the different output modules or the IP output of the base board.

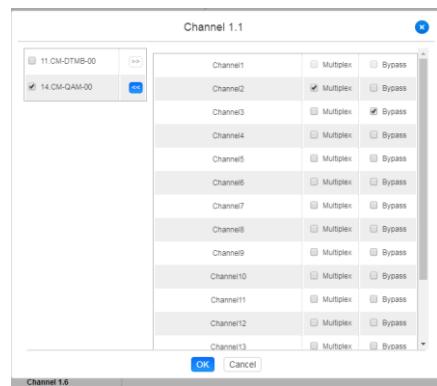

After pressing the button “**Apply**” all adjustments will be accepted.

#### Note

With the button a manual scan of the individual channels for new services can be started. This is recommended if there have been changes in the input transport stream and the automatic update has not yet been performed.

## 7.4 Menu “IP Output“

In this menu the IP output data of the MPX headend can be set. Up to 120 transport streams (SPTS or MPTS) can be created. Via selecting the menus “Basic Setting”, “Service Configuration” or “PSIP”, these settings can be made according to the application. In the “Status” menu, the transport streams are displayed.

In the menu “**Status**“ the total bit rate and the bit rate for each transport stream, the IP address and the port as well as the effective bit rate can be checked. The button “**TS-Analysis**“ shows the results of a TS analysis per transport stream and the button “**Service List**“ list the services from the selected transport stream.

Channel	IP Address : Port	Effective Bitrate(Mbps)	Total Bitrate(Mbps)	Bitrate	TS Analysis	Service List
1.1	239.1.1.100 : 10001	7.204	30.000	Normal		
1.2	239.1.1.101 : 10001	16.094	30.000	Normal		
1.3	239.1.1.102 : 10001	16.986	30.000	Normal		
1.4	239.1.1.103 : 10001	15.537	30.000	Normal		
1.5	239.1.1.104 : 10001	15.521	30.000	Normal		
1.6	239.1.1.105 : 10001	2.574	30.000	Normal		
1.7	239.1.1.106 : 10001	5.415	30.000	Normal		
1.8	239.1.1.107 : 10001	2.311	30.000	Normal		
1.9	239.1.1.108 : 10001	2.698	30.000	Normal		
1.10	239.1.1.109 : 10001	5.354	30.000	Normal		
1.11	239.1.1.110 : 10001	3.341	30.000	Normal		
1.12	239.1.1.111 : 10001	7.256	30.000	Normal		
1.13	239.1.1.112 : 10001	4.675	30.000	Normal		
1.14	239.1.1.113 : 10001	3.860	30.000	Normal		

## 1 TS Analysis

After pressing the button “**Reset Counter**“ the record of the continuity count errors restarts.

In the search field a specific search based on topics such as bit rate, service, bandwidth etc. can be done.

PID	Bitrate(Mbps)	Bandwidth(%)	Continuity Count Error	Type	Service
0x12(18)	0.015	0.050	0	EIT	
0x492(1170)	0.009	0.030	0	PrivateData	Das Erste HD
0x498(1176)	0.010	0.033	0	PrivateData	Das Erste HD
0x57b(2171)	0.150	0.500	0	PrivateData	Das Erste HD
0x13ec(5100)	0.030	0.100	0	PMT	Das Erste HD
0x13ed(5101)	8.873	29.577	0	PCR, Video	Das Erste HD
0x13ef(5102)	0.273	0.910	0	Audio	Das Erste HD
0x13el(5103)	0.270	0.900	0	Audio	Das Erste HD

## 2 Service List

After clicking on a service, all service-specific data will be displayed.

In the menu “**Basic Setting**“ the IP output parameters are programmed. The channels must be specifically activated by clicking the check box “Enable“. In the “Stream Mode“ option between VBR and CBR transport stream can be chosen.

Channel	Enable	Source Port	Destination IP Address	Destination Port	Protocol	Pkt Length	Bitrate(Mbps)	Enable Destination MAC	Destination MAC
1.1	<input checked="" type="checkbox"/>	1000	239.1.1.100	10001	RTP	7	30	Disable	01:00:5E:01:01:64
1.2	<input checked="" type="checkbox"/>	1000	239.1.1.101	10001	RTP	7	30	Disable	01:00:5E:01:01:65
1.3	<input checked="" type="checkbox"/>	1000	239.1.1.102	10001	RTP	7	30	Disable	01:00:5E:01:01:66
1.4	<input checked="" type="checkbox"/>	1000	239.1.1.103	10001	RTP	7	30	Disable	01:00:5E:01:01:67
1.5	<input checked="" type="checkbox"/>	1000	239.1.1.104	10001	RTP	7	30	Disable	01:00:5E:01:01:68
1.6	<input checked="" type="checkbox"/>	1000	239.1.1.105	10001	RTP	7	30	Disable	01:00:5E:01:01:69
1.7	<input checked="" type="checkbox"/>	1000	239.1.1.106	10001	RTP	7	30	Disable	01:00:5E:01:01:6A
1.8	<input checked="" type="checkbox"/>	1000	239.1.1.107	10001	RTP	7	30	Disable	01:00:5E:01:01:6B
1.9	<input checked="" type="checkbox"/>	1000	239.1.1.108	10001	RTP	7	30	Disable	01:00:5E:01:01:6C
1.10	<input checked="" type="checkbox"/>	1000	239.1.1.109	10001	RTP	7	30	Disable	01:00:5E:01:01:6D
1.11	<input checked="" type="checkbox"/>	1000	239.1.1.110	10001	RTP	7	30	Disable	01:00:5E:01:01:6E
1.12	<input checked="" type="checkbox"/>	1000	239.1.1.111	10001	RTP	7	30	Disable	01:00:5E:01:01:6F
1.13	<input checked="" type="checkbox"/>	1000	239.1.1.112	10001	RTP	7	30	Disable	01:00:5E:01:01:70
1.14	<input checked="" type="checkbox"/>	1000	239.1.1.113	10001	RTP	7	30	Disable	01:00:5E:01:01:71
1.15	<input checked="" type="checkbox"/>	1000	239.1.1.114	10001	RTP	7	30	Disable	01:00:5E:01:01:72
1.16	<input checked="" type="checkbox"/>	1000	239.1.1.115	10001	RTP	7	30	Disable	01:00:5E:01:01:73

After pressing the button “**Apply**” all settings will be accepted.

After clicking the button “**Batch Setting**“ multiple channels can be configured at the same time. After that, the following menu will be opened to configure the key data.

After pressing the button “**Apply**” all adjustments will be accepted.

## Note

It is important to avoid IP conflicts between base board, the modules and other devices.

The activation of “**Destination MAC**“ is only necessary in certain cases where a unicast stream cannot be received for unknown reasons. To remedy this, the MAC address of the receiver can be activated and the correct recipient MAC address can be entered. This will be used instead of the unicast IP address.

### Attention

#### **CBR mode**

The constant “**Bitrate**“ of each output channel/TS/port should be manually programmed approx. 2 MBit/s higher than the effective bit rate of the corresponding output channel/TS/port, since the effective bit rate can vary. It must be in mind that zero-packet stuffing will be done for the transport stream.


#### **VBR mode**

After selection VBR mode the “**Bitrate**“ must be also set for monitoring. This can be chosen higher than the effective bit rate in order to rule out data rate overflows. In this mode no zero-packet stuffing will be done.

The “**Service Configuration**“ menu is used to be set the service data (TS data, NIT, TOT, PMT) for the assigned programms. If necessary, the service PIDs can be set here.

After clicking on the desired transport stream, the menu for setting the following data will be opened:


- Original Network ID (automatic transfer from the first service by selecting MUX)
- TS ID (automatic transfer from the first service by selecting MUX)
- Service ID (automatic transfer from the transport stream)
- Service Name (automatic transfer from the transport stream)
- Service Provider (automatic transfer from the transport stream)

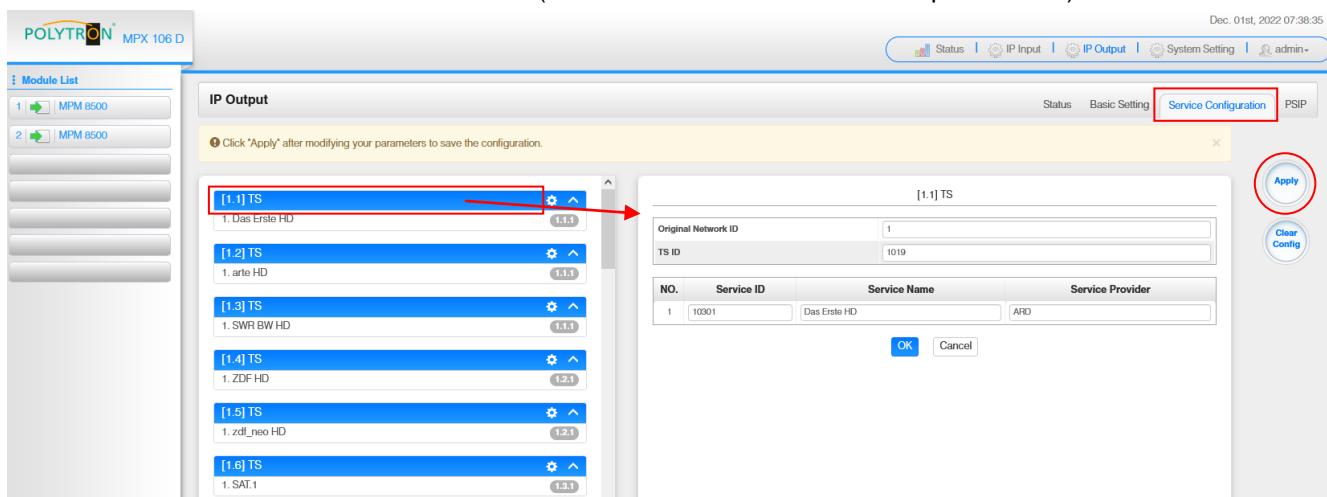

After selecting the menu to adaption the NIT, TOT and PMT will be opened.




After selection of a service all specific data will be displayed.

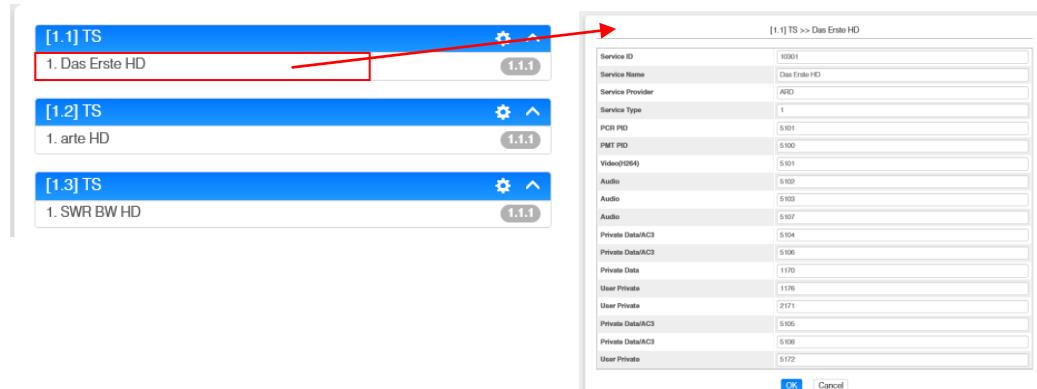

All settings in the submenus must be confirmed by clicking the button “**Apply**” or “**OK**“. After that the settings will be adopted.


In the menu “**PSIP**“ the tables required for the transfer can be specific activated. The selection can be made for all IP output channels via  **Select All** or by individually selecting the desired channels.

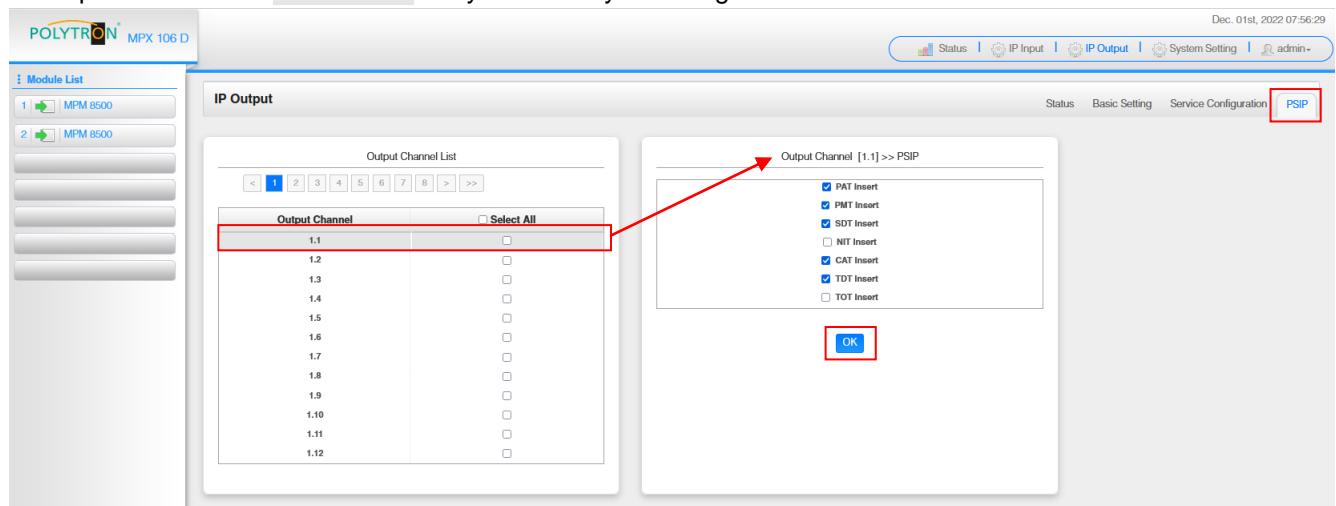

After pressing the button “**OK**” all settings will be accepted.

## 7.5 Menu “admin”

This menu is used to log out of the programming interface of the MPX headend.

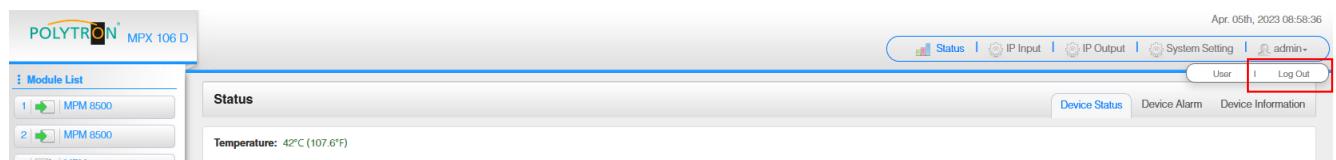

## 8. Programming of the modules

The programming of the module specific data can be done by selecting the relevant module in the module list.

### 8.1 Programming of the DVB-S/S2 receiver module MPM 8500 (Double slot module)

The MPM 8500 is an 8 channel DVB-S/S2 FTA receiver module with 8 RF inputs for 8 SAT input signals which can be independently supplied with power. The module supports different switching signals (13/18 V, 22 kHz as well as DiSEqC1.0 /DiSEqC1.1) to use multi-switches as input splitters. The module provides a direct IP output (CBR).

#### NOTE

If the IP output transport streams are to be transmitted as a VBR signal, routing via the baseboard is necessary. The IP transport streams at direct IP output on the module only support the CBR mode.

After clicking on the module in the module list you will be forwarded to the programming interface of the selected module. In this menu the system-specific parameters of the MPM 8500 can be set. By selecting the menu "Biss", "Basic Setting", "Service Configuration", "IP Output" and "System" these settings can be made according to the application.

In the menu "Status" the lock status and the performance of the input transport streams are displayed.

Channel	Locked Status	Total Bitrate(Mbps)	Effective Bitrate(Mbps)	PER	RF Level	CNR(dB)	Link Margin(dB)	FEC Code Rate	Modulation	TS Analysis	Service List
1.1	Locked	42.584	41.425	0.00000000	-45dBm (63dB <sub>j</sub> V)	17.500	10	2/3	8PSK	<span style="border: 1px solid red; padding: 2px;">1</span>	<span style="border: 1px solid red; padding: 2px;">2</span>
2.1	Locked	42.584	31.787	0.00000000	-47dBm (61dB <sub>j</sub> V)	16.200	9	2/3	8PSK	<span style="border: 1px solid red; padding: 2px;">3</span>	<span style="border: 1px solid red; padding: 2px;">4</span>
3.1	Locked	33.792	30.203	0.00000000	-46dBm (62dB <sub>j</sub> V)	16.900	10	5/6	QPSK	<span style="border: 1px solid red; padding: 2px;">5</span>	<span style="border: 1px solid red; padding: 2px;">6</span>
4.1	Locked	38.014	34.721	0.00000000	-46dBm (62dB <sub>j</sub> V)	17.700	12	3/4	QPSK	<span style="border: 1px solid red; padding: 2px;">7</span>	<span style="border: 1px solid red; padding: 2px;">8</span>
5.1	Locked	42.586	42.417	0.00000000	-20dBm (88dB <sub>j</sub> V)	16.800	9	2/3	8PSK	<span style="border: 1px solid red; padding: 2px;">9</span>	<span style="border: 1px solid red; padding: 2px;">10</span>
6.1	Locked	42.584	42.204	0.00000000	-44dBm (64dB <sub>j</sub> V)	17.900	10	2/3	8PSK	<span style="border: 1px solid red; padding: 2px;">11</span>	<span style="border: 1px solid red; padding: 2px;">12</span>
7.1	Locked	42.586	42.148	0.00000000	-45dBm (63dB <sub>j</sub> V)	16.100	9	2/3	8PSK	<span style="border: 1px solid red; padding: 2px;">13</span>	<span style="border: 1px solid red; padding: 2px;">14</span>
8.1	Locked	42.584	19.274	0.00000000	-40dBm (68dB <sub>j</sub> V)	16.800	9	2/3	8PSK	<span style="border: 1px solid red; padding: 2px;">15</span>	<span style="border: 1px solid red; padding: 2px;">16</span>

PER

Packet Error Rate

RF Level

SAT input level of the module

Link Margin (dB)

Level reserve at the input

#### 1 TS Analysis

After pressing the button "Reset Counter" the record of the continuity count errors restarts.

In the search field a specific search based on topics such as PID, service, type etc. can be done.

PID	Bitrate(Mbps)	Bandwidth(%)	Continuity Count Error	Type	Service
0x0(0)	0.007	0.016	0	PAT	
0x1(1)	0.003	0.007	0	CAT	
0x10(16)	0.001	0.002	0	Other	
0x11(17)	0.013	0.031	0	SDT	
0x12(18)	0.755	1.773	0	Other	
0x14(20)	0.003	0.007	0	Other	
0x492(1170)	0.009	0.021	0	AIT	Das Erste HD
0x498(1176)	0.010	0.023	0	PrivateData	Das Erste HD

## 2 Service List

After clicking on Service List all channels and the received services will be displayed. After selecting a service all service information will be displayed.

Channel	Locked Status	Total Bitrate(Mbps)	Effective Bitrate(Mbps)	PER	RF Level	CNR(dB)	Link Margin(dB)	FEC Code Rate	Modulation	TS Analysis	Service List
1.1	Locked	42.583	41.533	0.00000000	-44dBm (64dBfV)	17.500	10	2/3	8PSK		
2.1	Locked	42.586	31.802	0.00000000	-47dBm (61dBfV)	16.100	9	2/3	8PSK		
3.1	Locked	33.792	30.112	0.00000000	-46dBm (62dBfV)	16.900	10	5/6	QPSK		
4.1	Locked	38.017	34.721	0.00000000	-46dBm (62dBfV)	17.900	12	3/4	QPSK		
5.1	Locked	42.584	42.410	0.00000000	-20dBm (88dBfV)	16.800	9	2/3	8PSK		
6.1	Locked	42.584	42.115	0.00000000	-44dBm (64dBfV)	17.900	10	2/3	8PSK		
7.1	Locked	42.586	42.208	0.00000000	-46dBm (62dBfV)	16.200	9	2/3	8PSK		
8.1	Locked	42.584	19.274	0.00000000	-40dBm (68dBfV)	16.700	9	2/3	8PSK		

**Channel : 1.1**

#	Service
1	[10301] Das Erste HD
2	<b>[10302] arte HD</b>
3	[10303] SWR BW HD
4	[10304] SWR RP HD

**Channel : 2.1**

#	Service
1	[10310] ZDF HD
2	[11130] zdf_neo HD

**Channel : 3.1**

#	Service
1	[17500] SAT.1
2	[17501] ProSieben
3	[17502] kabel eins
4	[17503] WELT
5	[17504] SAT.1 Gold
6	[17505] Pro7 MAXX
7	[17507] SAT.1 Bayern
8	[17508] SAT.1 NRW

**Channel : 4.1**

#	Service
1	[12003] RTL Television
2	[12004] RTL Regional NRW
3	[12005] RTL HB NDS
4	[12006] RTL Bayern
5	[12009] RTL HH SH
6	[12020] RTLZWEI
7	[12030] TOGGO plus
8	[12040] SUPER RTL

**Channel : 5.1**

#	Service
1	[11150] 3sat HD
2	[11160] KUKA HD
3	[11170] ZDFinfo HD

**Channel : 6.1**

#	Service
1	[10325] BR Fernsehen Std ...
2	[10326] BR Fernsehen Nord...
3	[10327] NDR FRS NDS HD

**Channel : 7.1**

#	Service
1	[10350] rbb Brandenburg HD
2	[10361] rbb Berlin HD
3	[10327] NDR Sachsen HD

**Channel : 8.1**

#	Service
1	[28332] WDR HD Köln
2	[28333] WDR HD Aachen
3	[28334] WDR HD Bielefeld

**[10302] arte HD**

Type	PID	Bitrate(Mbps)
PCR	5111(0x137)	7.352
PMT	5110(0x136)	0.008
StreamType:27-Video(t264)	5111(0x137)	7.352
StreamType:3-Audio	5112(0x138)	0.197
StreamType:3-Audio	5113(0x139)	0.196
StreamType:3-Audio	5116(0x13c)	0.199
StreamType:3-Audio	5117(0x13d)	0.199
StreamType:6-Private Data/AC3	5114(0x13a)	0.188
AIT	1270(0x4f6)	0.011
PrivateData	1276(0x4fc)	0.011
StreamType:6-Private Data/AC3	5115(0x13b)	0.033
StreamType:6-Private Data/AC3	5118(0x13e)	0.033
StreamType:6-Private Data/AC3	5119(0x13f)	0.005

**Close**

In the menu “**Biss**“ a Biss ID including the associated parameters (Mode, Key and Injected ID) can be created. Afterwards the Biss ID can be activated in the service list.

Biss ID	Mode	Key	Injected ID
Biss-1	<input type="button" value="▼"/>	<input type="text" value="Key"/>	<input type="button" value="+"/>
No Data			

Service Information		Biss ID
[1.1][10301]	Das Erste HD	Biss-Off
[1.1][10302]	arte HD	Biss-Off
[1.1][10303]	SWR BW HD	Biss-Off
[2.1][11110]	ZDF HD	Biss-Off
[2.1][11130]	zdf_neo HD	Biss-Off
[3.1][17500]	SAT.1	Biss-Off
[3.1][17501]	ProSieben	Biss-Off
[3.1][17502]	kabel eins	Biss-Off
[3.1][17503]	WELT	Biss-Off
[3.1][17504]	SAT.1 Gold	Biss-Off
[3.1][17505]	Pro7 MAXX	Biss-Off
[3.1][17507]	SAT.1 Bayern	Biss-Off

After pressing the button “**Apply**” all settings will be accepted.

In the menu “**Basic Setting**“ the SAT inut parameters can be programmed. The receiving frequency, the symbol rate and the local oscillator frequency of the LNB are set. To supply the LNB with voltage/switching signals, the settings LNB Power, LNB 22 kHz, DiSEqC Level and DiSEqC Port can be made and thus multi-switches can be used for SAT signal distribution.

Channel	Satellite Frequency(MHz)	SymbolRate(KBaud)	LNB Frequency(MHz)	LNB Power	LNB 22KHz	DiSEqC Level	DiSEqC Port	DiSEqC Bytes(Hex)	Reboot Tuner
1.1	11494	22000	9750	off	off	Disable	1	FFFFFFF	<span style="border: 1px solid red; padding: 2px;">Reboot</span>
2.1	11362	22000	9750	off	off	Disable	1	FFFFFFF	<span style="border: 1px solid red; padding: 2px;">Reboot</span>
3.1	12545	22000	10600	off	off	Disable	1	FFFFFFF	<span style="border: 1px solid red; padding: 2px;">Reboot</span>
4.1	12188	27500	10600	off	off	Disable	1	FFFFFFF	<span style="border: 1px solid red; padding: 2px;">Reboot</span>
5.1	11347	22000	9750	off	off	Disable	1	FFFFFFF	<span style="border: 1px solid red; padding: 2px;">Reboot</span>
6.1	11582	22000	9750	off	off	Disable	1	FFFFFFF	<span style="border: 1px solid red; padding: 2px;">Reboot</span>
7.1	10891	22000	9750	off	off	Disable	1	FFFFFFF	<span style="border: 1px solid red; padding: 2px;">Reboot</span>
8.1	11523	22000	9750	off	off	Disable	1	FFFFFFF	<span style="border: 1px solid red; padding: 2px;">Reboot</span>

Name	Range
<b>Satellite Frequency (MHz)</b>	950~14500
<b>Symbol Rate(KBaud)</b>	1000~45000
<b>LNB Frequency(MHz)</b>	0~13550
<b>LNB Power</b>	Off/13V/18V
<b>LNB 22KHz</b>	Off/22kHz
<b>DiSEqC Level</b>	1.0, 1.1, 1.1+1.0, Manually Defined, Disable
<b>DiSEqC Port</b>	1,2,3,4
<b>DiSEqC Bytes</b>	In HEX

For “**LNB-Frequency**“ enter the corresponding LOF (local oscillator frequency) of the LNB.

Via the “**Reboot**“ button a restart of the selected tuner can be manually started.

After pressing the button “**Apply**” all settings will be accepted.


In the menu “**Service Configuration**“ the input signals or services can be assigned to an output module and the output transport streams contained therein. After clicking on the desired channel the menu for assigning the channel to an output module and the available multiplexes in this channel will be opened. There you can also select the channel for bypass mode. Furthermore, when you select “Bypass”, the output channel is occupied by this stream. The channel is then no longer available for other streams.

The assignment of individual services to an output module and output transport stream is done by clicking directly behind the desired service .

Service Name	Destination	Destination Setting
Channel 1.1	17.Baseboard[1.1], 17.Baseboard[1.2], 17.Baseboard[1.3]	⊕
Channel 2.1	17.Baseboard[1.4], 17.Baseboard[1.5]	⊕
Channel 3.1	17.Baseboard[1.6], 17.Baseboard[1.7], 17.Baseboard[1.8]	⊕


After pressing the button “**Apply**” all settings will be accepted.

### Assignment of a channel (fully transport stream)

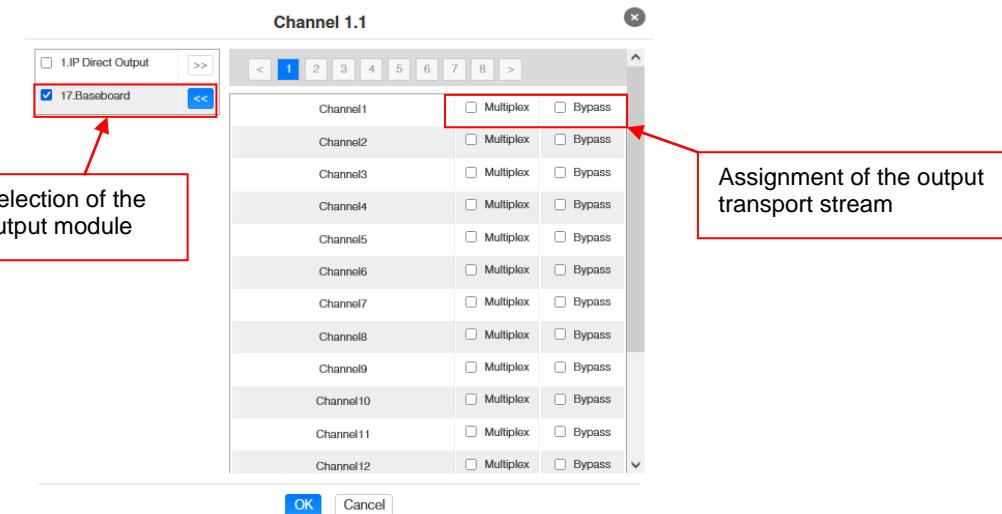

After pressing the button “**OK**” all settings will be accepted.

### Assignment of a service

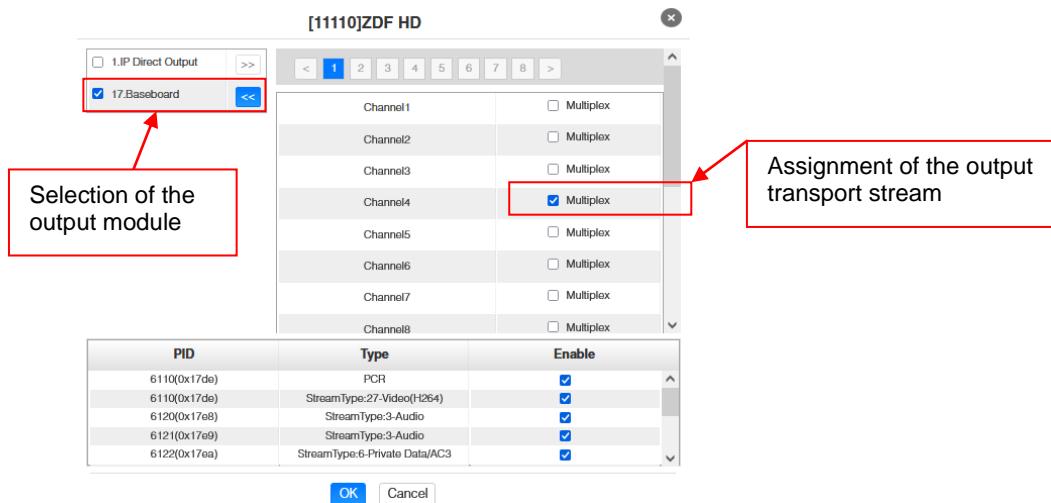

After pressing the button “**OK**” all settings will be accepted.

### Attention

If the programs are to be transmitted as SPTS, each program must be assigned to an own multiplex on the base board.

### Scanning Time

The “**Scanning Time**” can be set in the range 1000 ... 12000 ms. These should be increased if the service name is not displayed after a program scan.

A screenshot of a software interface titled 'Program Scan'. It has three input fields: 'Channel Select : Channel 1.1', 'Scanning Time(ms) : 1000', and 'SI Search Time(ms) : 5000'. The 'Scanning Time(ms)' field is highlighted with a red box. At the bottom right is a blue 'Program Scan' button.

### SI Search Time

The “**SI Search Time**” for the SI data can be set in the range 5000 ... 12000 ms. These should be increased if the SI data are not displayed after the scan.

A screenshot of a software interface titled 'Program Scan'. It has three input fields: 'Channel Select : Channel 1.1', 'Scanning Time(ms) : 1000', and 'SI Search Time(ms) : 5000'. The 'SI Search Time(ms)' field is highlighted with a red box. At the bottom right is a blue 'Program Scan' button.

In the menu “**IP Output**“ the IP output data of the MPM 8500 can be set. Up to 64 transport streams (SPTS or MPTS) can be created. Via selecting the menus “Setting“ and “Service Configuration“ the settings according to the application can be made. In the “Status“ menu the transport stream are displayed.

In the menu “**Status**“ the bit rate, the IP address and the port as well as the effective bit rate for each transport stream can be checked. The button “**TS-Analysis**“ shows the results of a TS analysis per transport stream and the button “**Service List**“ list the services from the selected transport stream.

Channel	IP Address : Port	Effective Bitrate(Mbps)	Total Bitrate(Mbps)	Bitrate	TS Analysis	Service List
1.1	227.10.30.1 : 1234	24.396	40.000	Normal	1	2
1.2	0.0.0.0 : 0	0.000	0.000	Normal		
1.3	0.0.0.0 : 0	0.000	0.000	Normal		
1.4	0.0.0.0 : 0	0.000	0.000	Normal		
1.5	0.0.0.0 : 0	0.000	0.000	Normal		
1.6	0.0.0.0 : 0	0.000	0.000	Normal		
1.7	0.0.0.0 : 0	0.000	0.000	Normal		
1.8	0.0.0.0 : 0	0.000	0.000	Normal		
1.9	0.0.0.0 : 0	0.000	0.000	Normal		
1.10	0.0.0.0 : 0	0.000	0.000	Normal		
1.11	0.0.0.0 : 0	0.000	0.000	Normal		
1.12	0.0.0.0 : 0	0.000	0.000	Normal		
1.13	0.0.0.0 : 0	0.000	0.000	Normal		
1.14	0.0.0.0 : 0	0.000	0.000	Normal		

## 1 TS Analysis

After pressing the button “**Reset Counter**“ the record of the continuity count errors restarts.

In the search field a specific search based on topics such as bit rate, service, bandwidth etc. can be done.

PID	Bitrate(Mbps)	Bandwidth(%)	Continuity Count Error	Type	Service
0x0(0)	0.015	0.037	0	PAT	
0x1(17)	0.015	0.037	0	SDT	
0x402(1170)	0.010	0.025	0	Video	Das Erste HD
0x498(1176)	0.009	0.022	0	Video	Das Erste HD
0x4f0(1270)	0.010	0.025	0	Video	arte HD
0x4fc(1276)	0.009	0.022	0	Video	arte HD
0x87b(2171)	0.150	0.375	0	Video	Das Erste HD
0x13ec(5100)	0.030	0.075	0	PMT	Das Erste HD

## 2 Service List

After clicking on a service, all service-specific data will be displayed.

#	Service
1	[10301] Das Erste HD
2	[10302] arte HD


[10302] arte HD	
Type	PID
PCR PID	5111
PMT PID	5110
Video PID	5111\Video(H264)
Audio PID	5112(Audio)
Audio PID	5116(Audio)
Audio PID	5117(Audio)
Audio PID	5114/Private Data/AC3
Video PID	1270/Private Data
Video PID	1276/User Private
Audio PID	5115/Private Data/AC3
Audio PID	5119/Private Data/AC3
Audio PID	5110/Private Data/AC3

In the menu “**Setting**“ the IP output parameters can be programmed. The channels must be specifically activated by clicking the check box “Enable“.

Channel	Enable	Source Port	Destination IP Address	Destination Port	Protocol	Pkt Length	Bitrate(Mbps)	Enable Destination MAC	Destination MAC
1.1	<input checked="" type="checkbox"/>	1000	227.10.30.1	1234	UDP	7	40	Disable	01:00:5E:0A:1E:01
1.2	<input type="checkbox"/>	1000	227.10.30.2	1234	UDP	7	25	Disable	00:00:00:00:00:00
1.3	<input type="checkbox"/>	1000	227.10.30.3	1234	UDP	7	25	Disable	00:00:00:00:00:00
1.4	<input type="checkbox"/>	1000	227.10.30.4	1234	UDP	7	25	Disable	00:00:00:00:00:00

After pressing the button “**Apply**“ all settings will be accepted.

After clicking the button “**Batch Setting**“ multiple channels can be configured at the same time. After that, the following menu will be opened to configure the key data.

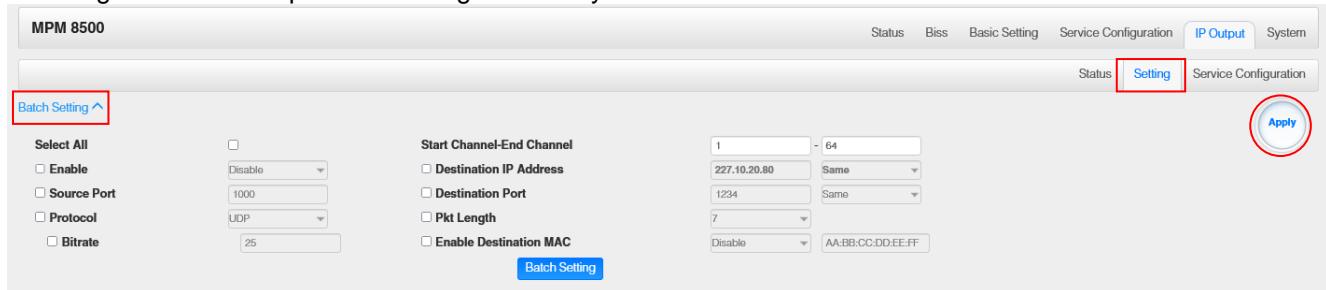

After pressing the button “**Apply**” all adjustments will be accepted.

#### Note


It is important to avoid IP conflicts between base board, the modules and other devices.

The activation of “**Destination MAC**“ is only necessary in certain cases where a unicast stream cannot be received for unknown reasons. To remedy this, the MAC address of the receiver can be activated and the correct recipient MAC address can be entered. This will be used instead of the unicast IP address.

The “**Service Configuration**“ menu is used to be set the service data (TS data, NIT) for the assigned programms. If necessary, the service PIDs can be set here.

After clicking on the desired transport stream, the menu for setting the following data will be opened:


- Original Network ID (automatic transfer from the first service by selecting MUX)
- TS ID (automatic transfer from the first service by selecting MUX)
- Service ID (automatic transfer from the transport stream)
- Service Name (automatic transfer from the transport stream)
- Service Provider (automatic transfer from the transport stream)

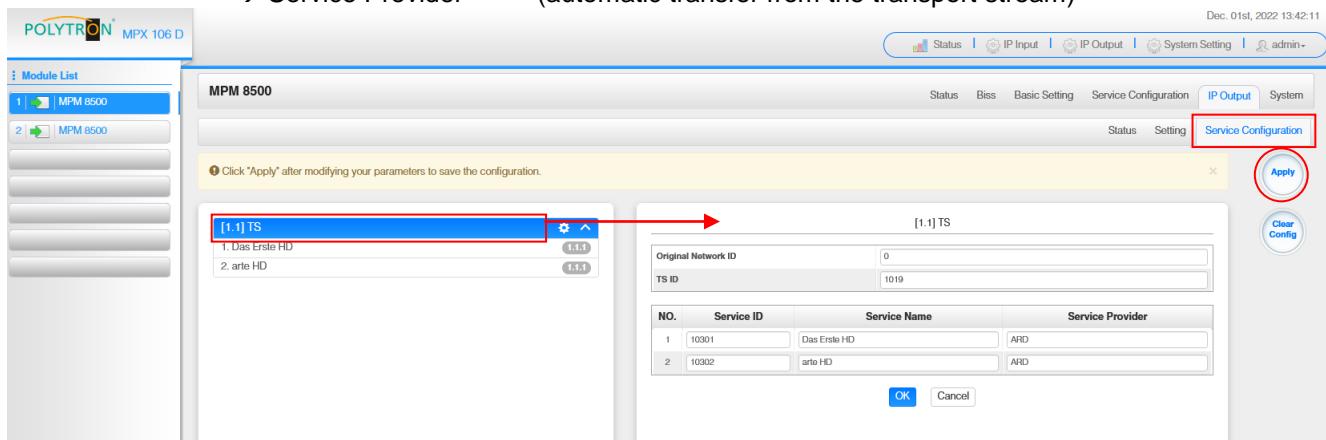

After selecting the menu to adaption the NIT will be opened.



After selection of a service all specific data will be displayed.

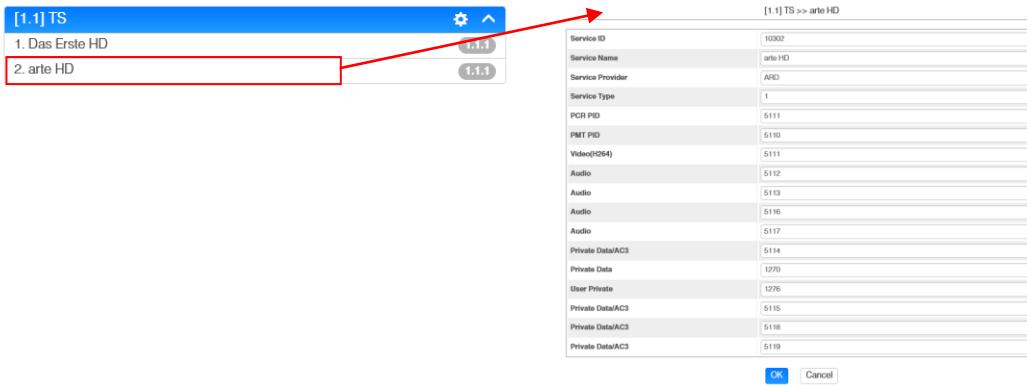


[1.1] TS >> arte HD	
Service ID	10002
Service Name	arte HD
Service Provider	ARD
Service Type	1
PCR PID	5111
PMT PID	5110
Video@Q54)	5111
Audio	5112
Audio	5113
Audio	5116
Audio	5117
Private Data/AC3	5114
Private Data	1270
User Private	1276
Private Data/AC3	5115
Private Data/AC3	5118
Private Data/AC3	5119

OK Cancel

All settings in the submenus must be confirmed by clicking the button “**Apply**” or “**OK**”. After that the settings will be adopted.

In the menu “**System**“ the following common system adjustment can be done:

- Program Auto Scan (Activation of the automatically scan function)
- License (Saving and Loading the license files)
- SNMP MIB (Possibility of MIB export)
- Logs (Display and backup of Log data)
- Others (Reboot = restart of the basic device)  
Reset to Defaults = load of the factory settings)

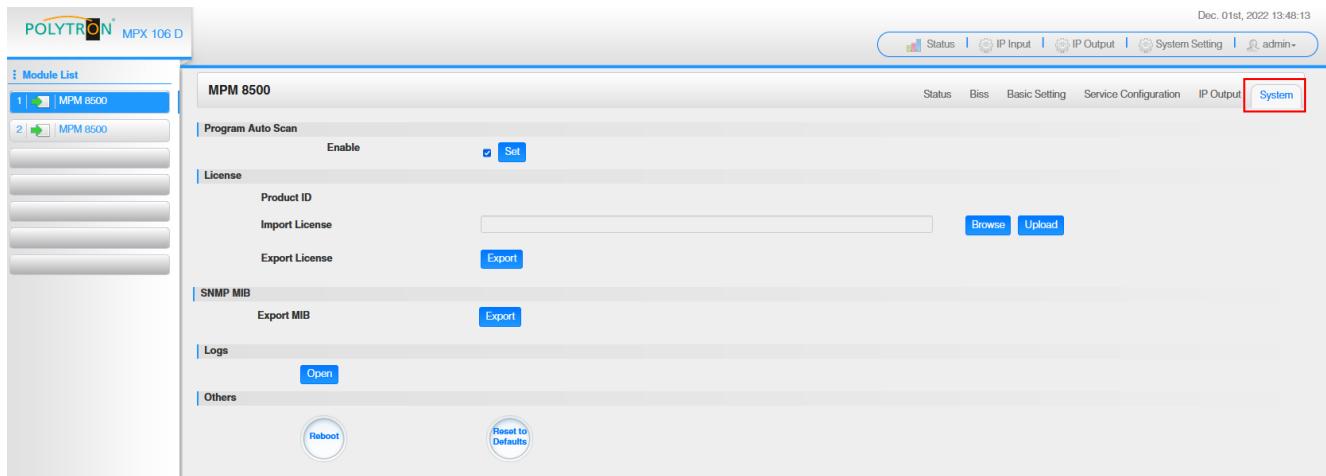

## Basic settings MPM8500

### Module 1

Module	Service Name	Reception	Transponder	SAT Frequency	LNB Frequency	SymbolRate	LNB Power	SID	Destination	Channel Baseboard	Destination IP	Destination Port	Protocol
1/1.1	Das Erste HD	A/HL	19	11494 MHz	9750 MHz	22000 kSym	Off	10301	Baseboard	1.1	239.1.1.100	10001	RTP
1/1.1	Arte HD	A/HL	19	11494 MHz	9750 MHz	22000 kSym	Off	10302	Baseboard	1.2	239.1.1.101	10001	RTP
1/1.1	SWR BW HD	A/HL	19	11494 MHz	9750 MHz	22000 kSym	Off	10303	Baseboard	1.3	239.1.1.102	10001	RTP
1/2.1	ZDF HD	A/HL	11	11362 MHz	9750 MHz	22000 kSym	Off	11110	Baseboard	1.4	239.1.1.103	10001	RTP
1/2.1	ZDF Neo	A/HL	11	11362 MHz	9750 MHz	22000 kSym	Off	11130	Baseboard	1.5	239.1.1.104	10001	RTP
1/3.1	Sat.1 Deutschland	A/HH	107	12545 MHz	10600 MHz	22000 kSym	Off	17500	Baseboard	1.6	239.1.1.105	10001	RTP
1/3.1	Pro 7 Deutschland	A/HH	107	12545 MHz	10600 MHz	22000 kSym	Off	17501	Baseboard	1.7	239.1.1.106	10001	RTP
1/3.1	Kabel 1 Deutschland	A/HH	107	12545 MHz	10600 MHz	22000 kSym	Off	17502	Baseboard	1.8	239.1.1.107	10001	RTP
1/3.1	Welt	A/HH	107	12545 MHz	10600 MHz	22000 kSym	Off	17503	Baseboard	1.9	239.1.1.108	10001	RTP
1/3.1	Kabel 1 Doku Deutschland	A/HH	107	12545 MHz	10600 MHz	22000 kSym	Off	17509	Baseboard	1.10	239.1.1.109	10001	RTP
1/4.1	RTL Deutschland	A/HH	89	12188 MHz	10600 MHz	27500 kSym	Off	12003	Baseboard	1.11	239.1.1.110	10001	RTP
1/4.1	RTL 2 Deutschland	A/HH	89	12188 MHz	10600 MHz	27500 kSym	Off	12020	Baseboard	1.12	239.1.1.111	10001	RTP
1/4.1	Toggo Plus	A/HH	89	12188 MHz	10600 MHz	27500 kSym	Off	12030	Baseboard	1.13	239.1.1.112	10001	RTP
1/4.1	Super RTL	A/HH	89	12188 MHz	10600 MHz	27500 kSym	Off	12040	Baseboard	1.14	239.1.1.113	10001	RTP
1/4.1	VOX	A/HH	89	12188 MHz	10600 MHz	27500 kSym	Off	12060	Baseboard	1.15	239.1.1.114	10001	RTP
1/4.1	N-TV	A/HH	89	12188 MHz	10600 MHz	27500 kSym	Off	12090	Baseboard	1.16	239.1.1.115	10001	RTP
1/5.1	3sat HD	A/VL	10	11347 MHz	9750 MHz	22000 kSym	Off	11150	Baseboard	1.17	239.1.1.116	10001	RTP
1/5.1	KIKA HD	A/VL	10	11347 MHz	9750 MHz	22000 kSym	Off	11160	Baseboard	1.18	239.1.1.117	10001	RTP
1/5.1	ZDF Info HD	A/VL	10	11347 MHz	9750 MHz	22000 kSym	Off	11170	Baseboard	1.19	239.1.1.118	10001	RTP
1/6.1	Bayerisches Fernsehen Süd HD	A/HL	25	11582 MHz	9750 MHz	22000 kSym	Off	10325	Baseboard	1.20	239.1.1.119	10001	RTP
1/6.1	NDR Fernsehen NDS HD	A/HL	25	11582 MHz	9750 MHz	22000 kSym	Off	10327	Baseboard	1.21	239.1.1.120	10001	RTP
1/6.1	Phoenix HD	A/HL	25	11582 MHz	9750 MHz	22000 kSym	Off	10331	Baseboard	1.22	239.1.1.121	10001	RTP
1/7.1	RBB Berlin HD	A/HL	61	10891 MHz	9750 MHz	22000 kSym	Off	10351	Baseboard	1.23	239.1.1.122	10001	RTP
1/7.1	MDR Fernsehen SA HD	A/HL	61	10891 MHz	9750 MHz	22000 kSym	Off	10353	Baseboard	1.24	239.1.1.123	10001	RTP
1/7.1	HR Fernsehen HD	A/HL	61	10891 MHz	9750 MHz	22000 kSym	Off	10355	Baseboard	1.25	239.1.1.124	10001	RTP
1/7.1	HR 3	A/HL	61	10891 MHz	9750 MHz	22000 kSym	Off	10467	Baseboard	1.26	239.1.1.125	10001	RTP
1/7.1	MDR Jump	A/HL	61	10891 MHz	9750 MHz	22000 kSym	Off	10478	Baseboard	1.27	239.1.1.126	10001	RTP
1/7.1	Radio Eins	A/HL	61	10891 MHz	9750 MHz	22000 kSym	Off	10488	Baseboard	1.28	239.1.1.127	10001	RTP
1/8.1	WDR Fernsehen Köln HD	A/HL	21	11523 MHz	9750 MHz	22000 kSym	Off	28332	Baseboard	1.29	239.1.1.128	10001	RTP

**Module 2 (for MPS 16530 only)**

Module	Service Name	Reception	Transponder	SAT Frequency	LNB Frequency	SymbolRate	LNB Power	SID	Destination	Channel Baseboard	Destination IP	Destination Port	Protocol
2/1.1	Tagesschau 24 HD	A/HL	39	11053 MHz	9750 MHz	22000 kSym	Off	10375	Baseboard	1.30	239.1.1.129	10001	RTP
2/1.1	One HD	A/HL	39	11053 MHz	9750 MHz	22000 kSym	Off	10376	Baseboard	1.31	239.1.1.130	10001	RTP
2/1.1	ARD Alpha HD	A/HL	39	11053 MHz	9750 MHz	22000 kSym	Off	10377	Baseboard	1.32	239.1.1.131	10001	RTP
2/1.1	SR Fernsehen HD	A/HL	39	11053 MHz	9750 MHz	22000 kSym	Off	10378	Baseboard	1.33	239.1.1.132	10001	RTP
2/1.1	Radio Bremen Fernsehen HD	A/HL	39	11053 MHz	9750 MHz	22000 kSym	Off	10379	Baseboard	1.34	239.1.1.133	10001	RTP
2/1.1	Bayern 3	A/HL	39	11053 MHz	9750 MHz	22000 kSym	Off	10402	Baseboard	1.35	239.1.1.134	10001	RTP
2/1.1	NDR 2 NDS	A/HL	39	11053 MHz	9750 MHz	22000 kSym	Off	10412	Baseboard	1.36	239.1.1.135	10001	RTP
2/1.1	SWR 1 BW	A/HL	39	11053 MHz	9750 MHz	22000 kSym	Off	10440	Baseboard	1.37	239.1.1.136	10001	RTP
2/1.1	WDR 3	A/HL	39	11053 MHz	9750 MHz	22000 kSym	Off	10453	Baseboard	1.38	239.1.1.137	10001	RTP
2/2.1	Eurosport 1 Germany	AHH	91	12226 MHz	10600 MHz	27500 kSym	Off	31200	Baseboard	1.39	239.1.1.138	10001	RTP
2/2.1	HSE Extra	AHH	91	12226 MHz	10600 MHz	27500 kSym	Off	31210	Baseboard	1.40	239.1.1.139	10001	RTP
2/2.1	EuroNews Deutschland	AHH	91	12226 MHz	10600 MHz	27500 kSym	Off	31230	Baseboard	1.41	239.1.1.140	10001	RTP
2/3.1	Sonnenklar TV	A/VH	104	12480 MHz	10600 MHz	27500 kSym	Off	32	Baseboard	1.42	239.1.1.141	10001	RTP
2/3.1	HSE	A/VH	104	12480 MHz	10600 MHz	27500 kSym	Off	40	Baseboard	1.43	239.1.1.142	10001	RTP
2/3.1	Tele 5	A/VH	104	12480 MHz	10600 MHz	27500 kSym	Off	51	Baseboard	1.44	239.1.1.143	10001	RTP
2/3.1	DMAX Deutschland	A/VH	104	12480 MHz	10600 MHz	27500 kSym	Off	63	Baseboard	1.45	239.1.1.144	10001	RTP
2/3.1	Astro TV	A/VH	104	12480 MHz	10600 MHz	27500 kSym	Off	661	Baseboard	1.46	239.1.1.145	10001	RTP
2/3.1	Sport 1	A/VH	104	12480 MHz	10600 MHz	27500 kSym	Off	900	Baseboard	1.47	239.1.1.146	10001	RTP
2/4.1	N24 Doku	AHH	103	12460 MHz	10600 MHz	27500 kSym	Off	48	Baseboard	1.48	239.1.1.147	10001	RTP
2/4.1	1-2-3 TV	AHH	103	12460 MHz	10600 MHz	27500 kSym	Off	662	Baseboard	1.49	239.1.1.148	10001	RTP
2/4.1	Anixe + HD	AHH	103	12460 MHz	10600 MHz	27500 kSym	Off	764	Baseboard	1.50	239.1.1.149	10001	RTP
2/4.1	Sixx Deutschland	AHH	103	12460 MHz	10600 MHz	27500 kSym	Off	776	Baseboard	1.51	239.1.1.150	10001	RTP
2/4.1	Disney Channel Deutschland	AHH	103	12460 MHz	10600 MHz	27500 kSym	Off	1793	Baseboard	1.52	239.1.1.151	10001	RTP
2/4.1	QVC Deutschland	AHH	103	12460 MHz	10600 MHz	27500 kSym	Off	1794	Baseboard	1.53	239.1.1.152	10001	RTP
2/5.1	Anixe HD Serie	AHL	53	10773 MHz	9750 MHz	22000 kSym	Off	21100	Baseboard	1.54	239.1.1.153	10001	RTP
2/5.1	QVC Deutschland HD	AHL	53	10773 MHz	9750 MHz	22000 kSym	Off	21103	Baseboard	1.55	239.1.1.154	10001	RTP
2/5.1	HSE HD	AHL	53	10773 MHz	9750 MHz	22000 kSym	Off	21104	Baseboard	1.56	239.1.1.155	10001	RTP
2/5.1	Genius Plus TV	AHL	53	10773 MHz	9750 MHz	22000 kSym	Off	21113	Baseboard	1.57	239.1.1.156	10001	RTP
2/6.1	HSE Extra HD	AHL	55	10803 MHz	9750 MHz	22000 kSym	Off	5501	Baseboard	1.58	239.1.1.157	10001	RTP
2/6.1	1-2-3 TV HD	AHL	55	10803 MHz	9750 MHz	22000 kSym	Off	5502	Baseboard	1.59	239.1.1.158	10001	RTP
2/6.1	QVC Zwei HD	AHL	55	10803 MHz	9750 MHz	22000 kSym	Off	5504	Baseboard	1.60	239.1.1.159	10001	RTP
2/7.1	Comedy Central Deutschland	A/VH	78	11973 MHz	10600 MHz	27500 kSym	Off	28676	Baseboard	1.61	239.1.1.160	10001	RTP
2/7.1	Nickelodeon Deutschland	A/VH	78	11973 MHz	10600 MHz	27500 kSym	Off	28680	Baseboard	1.62	239.1.1.161	10001	RTP
2/8.1	Sonnenklar TV HD	AHH	109	12574 MHz	10600 MHz	22000 kSym	Off	5400	Baseboard	1.63	239.1.1.162	10001	RTP
2/8.1	Juwelo HD	AHH	109	12574 MHz	10600 MHz	22000 kSym	Off	5403	Baseboard	1.64	239.1.1.163	10001	RTP
2/8.1	Pearl TV HD	AHH	109	12574 MHz	10600 MHz	22000 kSym	Off	5404	Baseboard	1.65	239.1.1.164	10001	RTP

## 8.2 Programming of the DVB-S/S2 receiver module with CI MPM 4502 (Single slot module)

The MPM 4502 is a 4 channel DVB-S/S2 receiver module with 2 RF inputs for 4 SAT input signals. It has 2 CI slots to which the services can be distributed independently. The module supports different switching signals (13/18 V, 22 kHz as well as DiSEqC1.0 /DiSEqC1.1) to use multi-switches as input splitters. The module provides a direct IP output (CBR).

### Note

If the IP output transport streams are to be transmitted as a VBR signal, routing via the baseboard is necessary. The IP transport streams at direct IP output on the module only support the CBR mode.

After clicking on the module in the module list you will be forwarded to the programming interface of the selected module. In this menu the system-specific parameters of the MPM 4502 can be set. By selecting the menu "CI", "Biss", "Basic Setting", "Service Configuration", "IP Output" and "System" these settings can be made according to the application.

In the menu "**Status**" the lock status and the performance of the input transport streams are displayed.

Channel	Locked Status	Total Bitrate(Mbps)	Effective Bitrate(Mbps)	PER	RF Level	CNR(dB)	Link Margin(dB)	FEC Code Rate	Modulation	TS Analysis	Service List
1.1	Unlocked	0.000	0.000	0.00000000	-	0.000	0	1/2		<b>1</b>	
1.2	Unlocked	0.000	0.000	0.00000000	-	0.000	0	1/2			
2.1	Locked	49.187	45.836	0.00000000	-35dBm (73dBuV)	17.000	10	9/10	QPSK		
2.2	Locked	59.882	53.995	0.00000000	-36dBm (72dBuV)	18.100	10	3/4	8PSK		

PER                    Packet Error Rate

RF Level            SAT input level of the module

Link Margin (dB)    Level reserve at the input

### 1 TS Analysis

After pressing the button "**Reset Counter**" the record of the continuity count errors restarts.

In the search field a specific search based on topics such as PID, service, type etc. can be done.

PID	Bitrate(Mbps)	Bandwidth(%)	Continuity Count Error	Type	Service
0x1a77(6775)	0.000	0.000	0	Other	
0x1ab2(6786)	0.006	0.012	0	ECM	Sky Crime HD
0x1ab9(6808)	0.006	0.012	0	ECM	Sky Nature HD
0x1abe(6814)	0.000	0.000	0	Other	
0x1ab6(6838)	0.006	0.012	0	ECM	Sky Cinema Premieron HD
0x1abc(6842)	0.006	0.012	0	ECM	Sky Sport Top Event HD
0x1abc(6844)	0.006	0.012	0	ECM	Discovery HD
0x1ad7(6871)	0.000	0.000	0	Other	
0x1b01(6913)	0.000	0.000	0	Other	

## 2 Service List

After clicking on Service List all channels and the received services will be displayed. After selecting a service all service information will be displayed.

#	Service
1	[13] Sky Crime HD
2	[118] Sky Nature HD
3	[129] Sky Sport Top Event HD
4	[30] Discovery HD
5	[131] Sky Cinema Premieren...
6	[516] Sky Cinema Classics HD

Type	PID	Bitrate(Mbps)
PCR	1535(0x5ff)	8.540
PMT	101(0x65)	0.015
StreamType:27-Video(H264)	1535(0x5ff)	8.540
StreamType:6-Private Data/AC3	1539(0x603)	0.393
StreamType:6-Private Data/AC3	1540(0x604)	0.197
ECM	7040(0x1b82)	0.006
ECM	6796(0x1a82)	0.006
ECM	7298(0x1c82)	0.006
ECM	8066(0x1f82)	0.006

In the menu „CI“ information about the inserted CA modules and cards will be displayed.

If necessary, an automatic reset of the CAMs can be programmed. It is also possible to open the internal CA menu and thus make advanced settings (if this is supported by the CAM).

CAM Card Name	CA System ID	Reset
Videoguard CA-SMIT	2444	<input type="button" value="Reset"/>

Service Information	PID	Descrambling Status
3.1 [13] Sky Crime HD	1535(Video)	Descrambling Success
3.1 [13] Sky Crime HD	1539(Audio)	Descrambling Success
3.1 [13] Sky Crime HD	1540(Audio)	Descrambling Success

After pressing the button “**Apply**” all settings will be accepted.

In the menu “**Biss**“ a Biss ID including the associated parameters (Mode, Key and Injected ID) can be created. Afterwards the Biss ID can be activated in the service list.

The screenshot shows the software interface for the MPX 106 D device. On the left, there's a module list with entries for MPM 106 D, MPM 16010, and MPM 4230. The main window is titled "MPM 4502" and has tabs for Status, CI, Biss (which is selected), Basic Setting, Service Configuration, IP Output, and System. The "Biss" tab contains fields for "Biss-1" and "Key". Below this is a table with columns: Biss ID, Mode, Key, and Injected ID. A note says "No Data". To the right is a "Service List" table with columns: Service Information and Biss ID. It lists various TV channels with their corresponding Biss IDs. At the bottom right of the main window is a red circle around the "Apply" button.

After pressing the button “**Apply**” all settings will be accepted.

In the menu „**Basic Setting**“ the SAT input parameters can be programmed. The receiving frequency, the symbol rate and the local oscillator frequency of the LNB are set. To supply the LNB with voltage/switching signals, the settings LNB Power, LNB 22 kHz, DiSEqC Level and DiSEqC Port can be made and thus multi-switches can be used for SAT signal distribution.

The screenshot shows the "Basic Setting" screen for the MPM 4502 module. It has tabs for Status, CI, Biss, Basic Setting (selected), Service Configuration, IP Output, and System. The main area shows a table with columns: Channel, Satellite Frequency(MHz), SymbolRate(KBaud), LNB Frequency(MHz), LNB Power, LNB 22kHz, DiSEqC Level, DiSEqC Port, DiSEqC Bytes(Hex), and Reboot Tuner. There are four rows of data for tuner pairs 1.1, 1.2, 2.1, and 2.2. Each row has a "Reboot" button. To the right of the table is a red circle around the "Apply" button.

<b>Satellite Frequency (MHz)</b>	950~14500
<b>Symbol Rate(KBaud)</b>	1000~45000
<b>LNB Frequency(MHz)</b>	0~13550
<b>LNB Power</b>	Off/13V/18V
<b>LNB 22KHz</b>	Off/22kHz
<b>DiSEqC Level</b>	1.0, 1.1, 1.1+1.0, Manually Defined, Disable
<b>DiSEqC Port</b>	1,2,3,4
<b>DiSEqC Bytes</b>	In HEX

For “**LNB-Frequency**“ enter the corresponding LOF (local oscillator frequency) of the LNB.

Via the “**Reboot**“ button a restart of the selected tuner can be manually started.

After pressing the button “**Apply**” all settings will be accepted

In the menu “**Service Configuration**“ the input signals or services can be assigned to an output module and the output transport streams contained therein. After clicking on the desired channel the menu for assigning the channel to an output module and the available multiplexes in this channel will be opened. There you can also select the channel for bypass mode. Furthermore, when you select “Bypass”, the output channel is occupied by this stream. The channel is then no longer available for other streams. The assignment of individual services to an output module and output transport stream is done by clicking directly behind the desired service .

After pressing the button “**Apply**” all settings will be accepted.

#### *Assignment of a channel (fully transport stream)*

After pressing the button “**OK**” all settings will be accepted.

#### *Assignment of a service*

PID	Type	Enable
511(0x1ff)	PCR	<input checked="" type="checkbox"/>
511(0x1ff)	StreamType:27-Video(H264)	<input checked="" type="checkbox"/>
515(0x203)	StreamType:6-Private Data/AC3	<input checked="" type="checkbox"/>
516(0x204)	StreamType:6-Private Data/AC3	<input checked="" type="checkbox"/>
6908(0x1a98)	ECM	<input checked="" type="checkbox"/>

After pressing the button “**OK**” all settings will be accepted.

## Attention

If the programs are to be transmitted as SPTS, each program must be assigned to an own multiplex on the base board.

## Scanning Time

The “**Scanning Time**” can be set in the range 1000 ... 12000 ms. These should be increased if the service name is not displayed after a program scan.

## SI Search Time

The “**SI Search Time**” for the SI data can be set in the range 5000 ... 12000 ms. These should be increased if the SI data are not displayed after the scan.

In the menu “**IP Output**“ the IP output data of the MPM 4502 can be set. Up to 60 transport streams (SPTS or MPTS) can be created. Via selecting the menus “Setting“ and “Service Configuration“ the settings according to the application can be made. In the “Status“ menu the transport stream are displayed.

In the menu “**Status**“ the bit rate, the IP address and the port as well as the effective bit rate for each transport stream can be checked. The button “**TS-Analysis**“ shows the results of a TS analysis per transport stream and the button “**Service List**“ list the services from the selected transport stream.

Channel	IP Address : Port	Effective Bitrate(Mbps)	Total Bitrate(Mbps)	Bitrate	TS Analysis	Service List
1.1	239.1.1.2 : 1234	0.000	0.000	Normal	①	②
1.2	239.1.1.5 : 1234	0.000	0.000	Normal	②	②
1.3	239.1.1.8 : 1234	10.013	30.000	Normal	②	②
1.4	0.0.0.0 : 0	0.000	0.000	Normal	②	②
1.5	0.0.0.0 : 0	0.000	0.000	Normal	②	②
1.6	0.0.0.0 : 0	0.000	0.000	Normal	②	②
1.7	0.0.0.0 : 0	0.000	0.000	Normal	②	②
1.8	0.0.0.0 : 0	0.000	0.000	Normal	②	②
1.9	0.0.0.0 : 0	0.000	0.000	Normal	②	②
1.10	0.0.0.0 : 0	0.000	0.000	Normal	②	②
1.11	0.0.0.0 : 0	0.000	0.000	Normal	②	②
1.12	0.0.0.0 : 0	0.000	0.000	Normal	②	②
1.13	0.0.0.0 : 0	0.000	0.000	Normal	②	②
1.14	0.0.0.0 : 0	0.000	0.000	Normal	②	②

### 1 TS Analysis

After pressing the button “**Reset Counter**“ the record of the continuity count errors restarts.

In the search field a specific search based on topics such as bit rate, service, bandwidth etc. can be done.

PID	Bitrate(Mbps)	Bandwidth(%)	Continuity Count Error	Type	Service
0x0(0)	0.015	0.050	0	PAT	
0x11(17)	0.015	0.050	0	SDT	
0x61(97)	0.015	0.050	0	PMT	Sky Nature HD
0x1ff(511)	7.518	25.060	0	PCR, Video	Sky Nature HD
0x203(515)	0.397	1.323	0	Audio	Sky Nature HD
0x204(516)	0.197	0.657	0	Audio	Sky Nature HD
0x1a08(6808)	0.006	0.020	0	PSEC	Sky Nature HD
0x1b08(7064)	0.006	0.020	0	PSEC	Sky Nature HD

### 2 Service List

After clicking on a service, all service-specific data will be displayed.

#	Service
1	[118] Sky Nature HD

[118] Sky Nature HD  
Source : 1.2.1

Type	PID
PCR PID	0x1ff
PMT PID	0x61
Video PID	0x1ff(Video(H264))
Audio PID	0x203/Private Data/AC3
Audio PID	0x204/Private Data/AC3

In the menu “**Setting**“ the IP output parameters can be programmed. The channels must be specifically activated by clicking the check box “Enable“.

Channel	Enable	Source Port	Destination IP Address	Destination Port	Protocol	Pkt Length	Bitrate(Mbps)	Enable Destination MAC	Destination MAC
1.1	<input checked="" type="checkbox"/>	1234	239.1.1.2	1234	RTP	7	50	Disable	01:00:5E:01:01:02
1.2	<input checked="" type="checkbox"/>	1234	239.1.1.5	1234	RTP	7	25	Disable	01:00:5E:01:01:05
1.3	<input checked="" type="checkbox"/>	1234	239.1.1.8	1234	RTP	7	30	Disable	01:00:5E:01:01:08
1.4	<input type="checkbox"/>	1234	227.10.30.4	1234	RTP	7	50	Disable	01:00:5E:0A:1E:04
1.5	<input type="checkbox"/>	1234	227.10.30.5	1234	RTP	7	25	Disable	00:00:00:00:00:00
1.6	<input type="checkbox"/>	1234	227.10.30.6	1234	RTP	7	25	Disable	00:00:00:00:00:00

After pressing the button “**Apply**” all settings will be accepted.

#### Note

It is important to avoid IP conflicts between base board, the modules and other devices.

The activation of “*Destination MAC*“ is only necessary in certain cases where a unicast stream cannot be received for unknown reasons. To remedy this, the MAC address of the receiver can be activated and the correct recipient MAC address can be entered. This will be used instead of the unicast IP address.


The “**Service Configuration**“ menu is used to be set the service data (TS data, NIT) for the assigned programmes. If necessary, the service PIDs can be set here.

After clicking on the desired transport stream, the menu for setting the following data will be opened:

- Original Network ID (automatic transfer from the first service by selecting MUX)
- TS ID (automatic transfer from the first service by selecting MUX)
- Service ID (automatic transfer from the transport stream)
- Service Name (automatic transfer from the transport stream)
- Service Provider (automatic transfer from the transport stream)

After selecting the menu to adaption the NIT will be opened.

After selection of a service all specific data will be displayed.

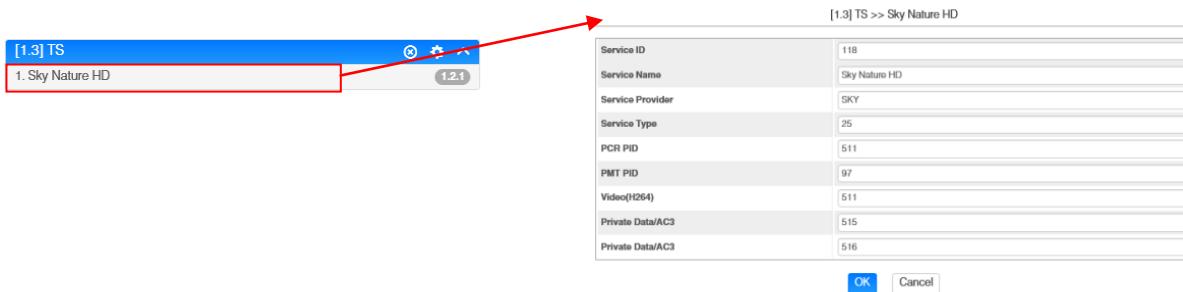

All settings in the submenus must be confirmed by clicking the button “**Apply**” or “**OK**”. After that the settings will be adopted.

In the menu “**System**“ the following common system adjustments can be done:

- Program Auto Scan (Activation of the automatically scan function)
  - EIT MUX (Activation of EIT multiplexing)
  - License (Saving and Loading the license files)
  - SNMP MIB (Possibility of MIB export)
  - Logs (Display and backup of Log data)
  - Others (Reboot = restart of the basic device)
- Reset to Defaults = load of the factory settings)

The screenshot shows the 'MPX 106 D' web interface. On the left is a 'Module List' sidebar with icons for MPM 4502, MPM 16010, and MPM 4230. The main area is titled 'MPM 4502' and contains several configuration sections:

- Program Auto Scan**: Enable checkbox with a 'Set' button.
- EIT MUX**: Enable checkbox with a 'Set' button.
- License**: Product ID: DE10143390137. Import License: input field with 'Browse' and 'Upload' buttons. Export License: 'Export' button.
- SNMP MIB**: Export MIB: 'Export' button.
- Logs**: 'Open' button.
- Others**: 'Reboot' and 'Reset to Defaults' buttons.

At the top right, there are navigation links: Status, CI, Biss, Basic Setting, Service Configuration, IP Output, and System Setting. The 'System' link is highlighted with a red box. The top right corner shows the date and time: Oct. 12th, 2023 10:00:29.

## Basic settings MPM4502

### Module 1

Modul	Service Name	Reception	Transponder	SAT Frequency	LNB Frequency	SymbolRate	LNB Power	SID	Destination	Channel Baseboard	Destination IP	Destination Port	Protocol
1/1.1	Das Erste HD	A/HL	19	11494 MHz	9750 MHz	22000 kSym	Off	10301	Baseboard	1.1	239.1.1.100	10001	RTP
1/1.1	Arte HD	A/HL	19	11494 MHz	9750 MHz	22000 kSym	Off	10302	Baseboard	1.2	239.1.1.101	10001	RTP
1/1.1	SWR BW HD	A/HL	19	11494 MHz	9750 MHz	22000 kSym	Off	10303	Baseboard	1.3	239.1.1.102	10001	RTP
1/2.1	ZDF HD	A/HL	11	11362 MHz	9750 MHz	22000 kSym	Off	11110	Baseboard	1.4	239.1.1.103	10001	RTP
1/2.1	ZDF Neo	A/HL	11	11362 MHz	9750 MHz	22000 kSym	Off	11130	Baseboard	1.5	239.1.1.104	10001	RTP
2/1.1	Sat.1 Deutschland	A/HH	107	12545 MHz	10600 MHz	22000 kSym	Off	17500	Baseboard	1.6	239.1.1.105	10001	RTP
2/1.1	Pro 7 Deutschland	A/HH	107	12545 MHz	10600 MHz	22000 kSym	Off	17501	Baseboard	1.7	239.1.1.106	10001	RTP
2/1.1	Kabel 1 Deutschland	A/HH	107	12545 MHz	10600 MHz	22000 kSym	Off	17502	Baseboard	1.8	239.1.1.107	10001	RTP
2/1.1	Welt	A/HH	107	12545 MHz	10600 MHz	22000 kSym	Off	17503	Baseboard	1.9	239.1.1.108	10001	RTP
2/1.1	Kabel 1 Doku Deutschland	A/HH	107	12545 MHz	10600 MHz	22000 kSym	Off	17509	Baseboard	1.10	239.1.1.109	10001	RTP
2/2.1	RTL Deutschland	A/HH	89	12188 MHz	10600 MHz	27500 kSym	Off	12003	Baseboard	1.11	239.1.1.110	10001	RTP
2/2.1	RTL 2 Deutschland	A/HH	89	12188 MHz	10600 MHz	27500 kSym	Off	12020	Baseboard	1.12	239.1.1.111	10001	RTP
2/2.1	Toggo Plus	A/HH	89	12188 MHz	10600 MHz	27500 kSym	Off	12030	Baseboard	1.13	239.1.1.112	10001	RTP
2/2.1	Super RTL	A/HH	89	12188 MHz	10600 MHz	27500 kSym	Off	12040	Baseboard	1.14	239.1.1.113	10001	RTP
2/2.1	VOX	A/HH	89	12188 MHz	10600 MHz	27500 kSym	Off	12060	Baseboard	1.15	239.1.1.114	10001	RTP
2/2.1	N-TV	A/HH	89	12188 MHz	10600 MHz	27500 kSym	Off	12090	Baseboard	1.16	239.1.1.115	10001	RTP

## 8.3 Programming of the DVB-C receiver module with CI MPM 4702 (Single slot module)

The MPM 4702 is a 4 channel DVB-C receiver module with 1 RF input for 4 RF input signals. It has 2 CI slots to which the services can be distributed independently.

After clicking on the module in the module list you will be forwarded to the programming interface of the selected module. In this menu the system-specific parameters of the MPM 4702 can be set. By selecting the menu "CI", "Basic Setting", "Service Configuration" and "System" these settings can be made according to the application.

In the menu "Status" the lock status and the performance of the input transport streams are displayed.

Channel	Locked Status	Total Bitrate(Mbps)	Effective Bitrate(Mbps)	PER	RF Level	TS Analysis	Service List
1.1	Locked	50.871	48.108	0.000000000	-22dBm (86dBuV)	1	2
1.2	Locked	37.153	26.985	0.998970368	-25dBm (83dBuV)		
1.3	Locked	29.727	28.826	0.9986919808	-26dBm (82dBuV)		
1.4	Unlocked	0.000	0.000	0.000000000	-		

PER  
Packet Error Rate  
RF Level  
SAT input level of the module

### 1 TS Analysis

After pressing the button "Reset Counter" the record of the continuity count errors restarts.

In the search field a specific search based on topics such as PID, service, type etc. can be done.

PID	Bitrate(Mbps)	Bandwidth(%)	Continuity Count Error	Type	Service
0x11fa(506)	0.469	0.922	0	Other	rbb Brandenburg, rbb Berlin
0x259f(601)	5.785	11.372	0	PCR, Video	rbb Brandenburg, rbb Berlin
0x25a5(602)	0.203	0.399	0	Audio	rbb Brandenburg, rbb Berlin
0x25b5(603)	0.203	0.399	0	Audio	rbb Brandenburg, rbb Berlin
0x25c5(604)	0.263	0.517	0	Audio	rbb Brandenburg, rbb Berlin
0x29e9(670)	0.010	0.020	0	AIT	rbb Brandenburg, rbb Berlin
0x3218(801)	2.961	5.821	0	Other	
0x3228(802)	0.203	0.399	0	Other	


### 2 Service List

After clicking on Service List all channels and the received services will be displayed. After selecting a service all service information will be displayed.

Type	PID	Bitrate(Mbps)
PCR	6110(0x17de)	0.000
PMT	6100(0x17d4)	0.000
StreamType:27-Video(0x264)	6110(0x17de)	0.000
StreamType:3-Audio	6120(0x17e6)	0.000
StreamType:3-Audio	6121(0x17e9)	0.000
StreamType:6-Private Data/AC3	6122(0x17ea)	0.000
StreamType:3-Audio	6123(0x17eb)	0.000
StreamType:6-Private Data/AC3	6130(0x17f2)	0.000
StreamType:6-Private Data/AC3	6131(0x17f3)	0.000
AIT	6170(0x18f4)	0.000

In the menu “**CI**“ information about the inserted CA modules and cards will be displayed.

If necessary, an automatic reset of the CAMs can be programmed. It is also possible to open the internal CA menu and thus make advanced settings (if this is supported by the CAM).

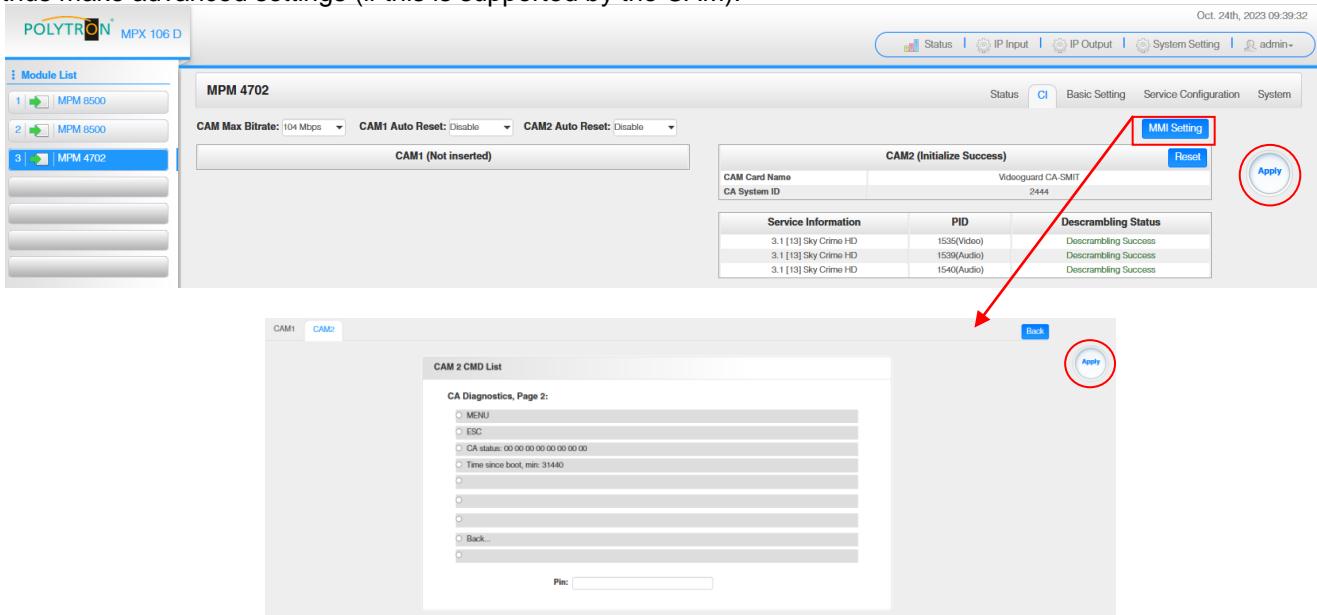


The screenshot shows the 'Basic Setting' tab selected in the top navigation bar. In the main content area, there is a table for 'Service Information' and a table for 'Descrambling Status'. Below these tables, there is a section titled 'CAM 2 CMD List' with a 'CA Diagnostics, Page 2:' sub-section. Two 'Apply' buttons are visible: one in the 'Basic Setting' section and one in the 'CAM 2 CMD List' section.

In the pull-down list “CAM Max Bitrate“ the maximum CAM bitrate can be selected in steps from 48 Mbit/s to 104 Mbit/s depending on the total effective bitrate of decrypted services.

After pressing the button “**Apply**” all settings will be accepted.

In the menu „**Basic Setting**“ the RF input parameters can be programmed. The receiving frequency per tuner are set.

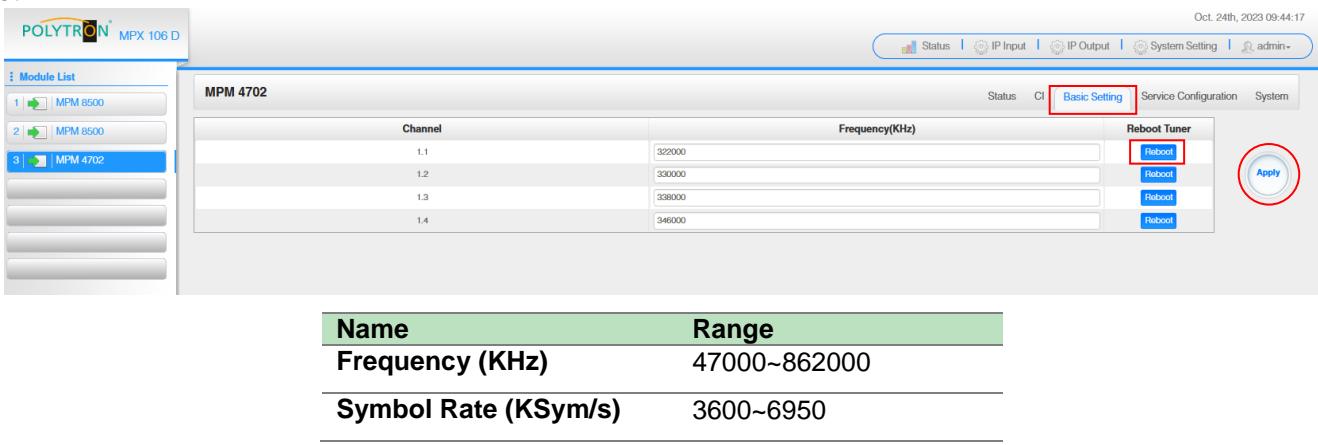


The screenshot shows the 'Basic Setting' tab selected in the top navigation bar. In the main content area, there is a table for 'Channel' and 'Frequency(KHz)' with four entries: 1.1 (322000), 1.2 (330000), 1.3 (338000), and 1.4 (346000). Below this table, there is a table for 'Name' and 'Range' with two entries: 'Frequency (KHz)' (47000~862000) and 'Symbol Rate (KSym/s)' (3600~6950). Two 'Reboot' buttons are visible in the 'Basic Setting' table, and one 'Apply' button is circled in red.

Via the “**Reboot**“ button a restart of the selected tuner can be manually started.

After pressing the button “**Apply**” all settings will be accepted


In the menu “**Service Configuration**“ the input signals or services can be assigned to an output module and the output transport streams contained therein. After clicking on the desired channel the menu for assigning the channel to an output module and the available multiplexes in this channel will be opened. There you can also select the channel for bypass mode. Furthermore, when you select “Bypass”, the output channel is occupied by this stream. The channel is then no longer available for other streams.

The assignment of individual services to an output module and output transport stream is done by clicking directly behind the desired service .

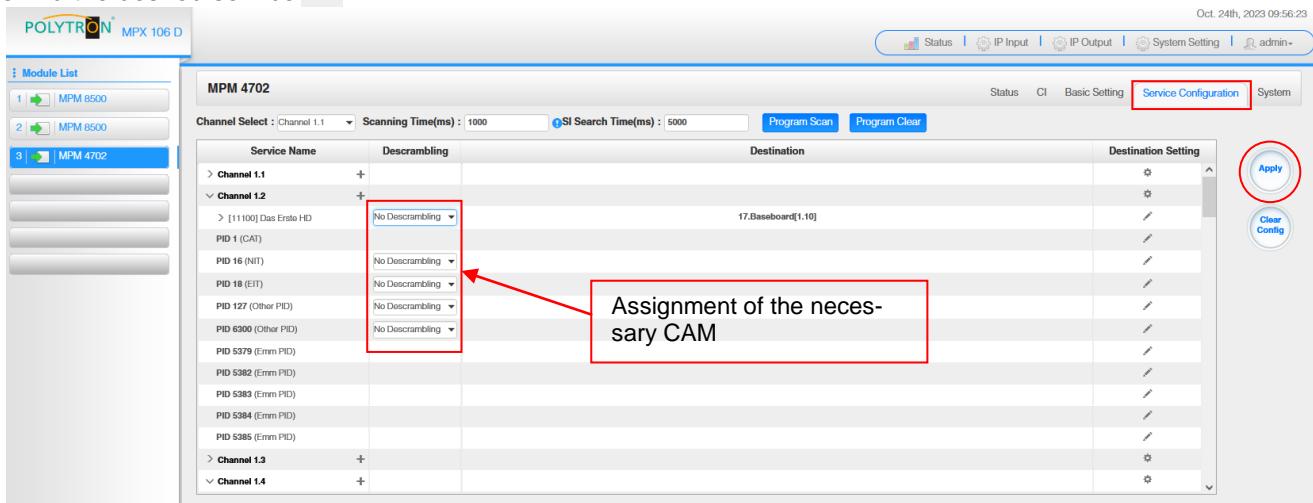


After pressing the button “**Apply**” all settings will be accepted.

#### *Assignment of a channel (fully transport stream)*

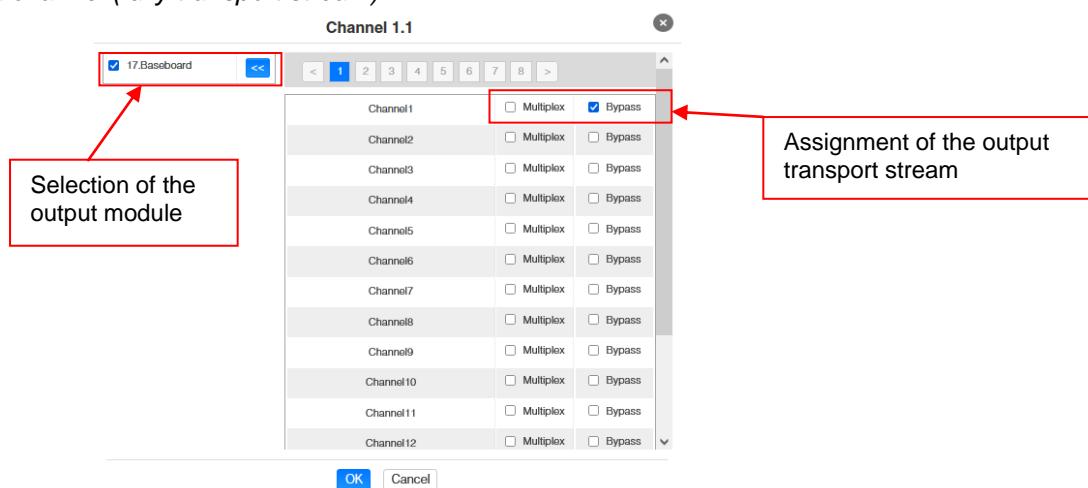

After pressing the button “**OK**” all settings will be accepted.

#### *Assignment of a service*

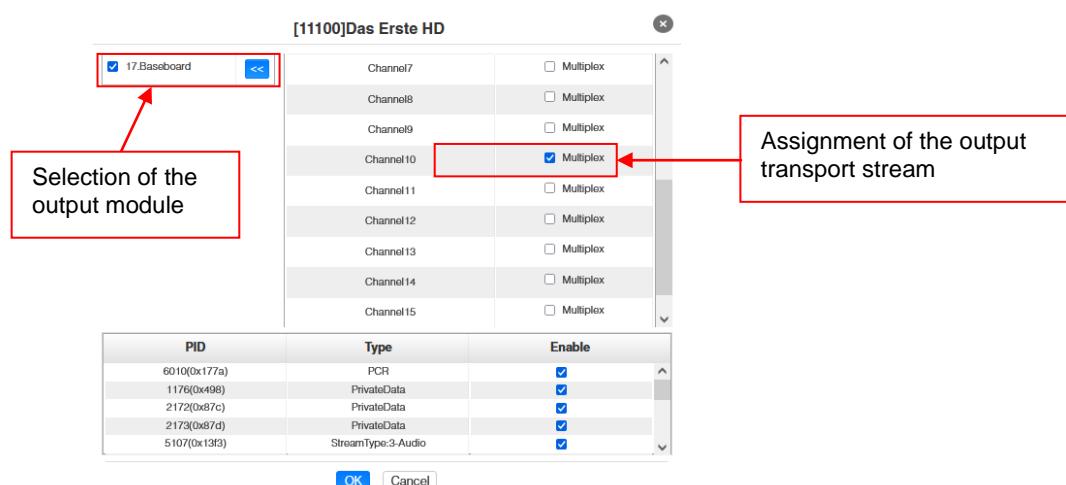

After pressing the button “**OK**” all settings will be accepted.

## Attention

If the programs are to be transmitted as SPTS, each program must be assigned to an own multiplex on the base board.

## Scanning Time

The “**Scanning Time**” can be set in the range 1000 ... 12000 ms. These should be increased if the service name is not displayed after a program scan.

Channel Select : Channel 1.1   Scanning Time(ms) : 2000   SI Search Time(ms) : 5000   Program Scan   Program Clear

## SI Search Time

The “**SI Search Time**” for the SI data can be set in the range 5000 ... 12000 ms. These should be increased if the SI data are not displayed after the scan.

Channel Select : Channel 1.1   Scanning Time(ms) : 2000   SI Search Time(ms) : 5000   Program Scan   Program Clear

In the menu “**System**“ the following common system adjustment can be done:

- Program Auto Scan (Activation of the automatically scan function)
  - License (Saving and Loading the license files)
  - SNMP MIB (Possibility of MIB export)
  - Logs (Display and backup of Log data)
  - Others (Reboot = restart of the basic device)
- Reset to Defaults = load of the factory settings)

The screenshot shows the "System" tab selected in the top right corner of the MPM 4702 configuration page. The left sidebar lists modules: 1 MPM 8500, 2 MPM 6500, and 3 MPM 4702 (selected). The main area displays various system settings like Modulate Type (DVB-C), Program Auto Scan (Enable), License (Product ID EB13144680062, Import License, Export License), SNMP MIB (Export MIB), Logs (Open), and Others (Reboot, Reset to Defaults).

## Basic settings MPM4702

Modul	Reception	Frequency	Destination	Channel Baseboard	Destination IP	Destination Port	Protocol
1/1.1	DVB-C	322000 kHz	Baseboard	1.1	239.1.1.100	10001	RTP
1/1.2	DVB-C	330000 kHz	Baseboard	1.2	239.1.1.101	10001	RTP
1/1.3	DVB-C	338000 kHz	Baseboard	1.3	239.1.1.102	10001	RTP
1/1.4	DVB-C	346000 kHz	Baseboard	1.4	239.1.1.103	10001	RTP

## 8.4 Programming of the DVB-T/-T2 receiver module with CI MPM 4802 (Single slot module)

The MPM 4802 is a 4 channel DVB-T/-T2 receiver module with 1 RF input for 4 RF input signals. It has 2 CI slots to which the services can be assigned independently.

After clicking on the module in the module list you will be forwarded to the programming interface of the selected module. In this menu the system-specific parameters of the MPM 4802 can be set. By selecting the menu "CI", "Basic Setting", "Service Configuration" and "System" these settings can be made according to the application.

In the menu "Status" the lock status and the performance of the input transport streams are displayed.

Channel	Locked Status	Total Bitrate(Mbps)	Effective Bitrate(Mbps)	RF Level	TS Analysis	Service List
1.1	Locked	30.160	14.020	-40dBm (48dBuV)		
1.2	Locked	30.160	12.464	-50dBm (49dBuV)		
1.3	Unlocked	0.000	0.000	-		
1.4	Unlocked	0.000	0.000	-		

### 1 TS Analysis

After pressing the button "Reset Counter" the record of the continuity count errors restarts.

In the search field a specific search based on topics such as PID, service, type etc. can be done.

PID	Bitrate(Mbps)	Bandwidth(%)	Continuity Count Error	Type	Service
0x0(0)	0.009	0.030	0	PAT	
0x1(1)	0.015	0.050	0	Other	
0x10(16)	0.003	0.010	0	Other	
0x11(17)	0.004	0.013	0	SDT	
0x12(18)	0.132	0.438	0	Other	
0x14(20)	0.000	0.000	0	Other	
0x61(97)	0.006	0.020	0	PMT	Sky One HD
0x6a(106)	0.006	0.020	0	PMT	Heimatkanal

### 2 Service List

After clicking on Service List all channels and the received services will be displayed. After selecting a service all service information will be displayed.

Channel	Locked Status	Total Bitrate(Mbps)	Effective Bitrate(Mbps)	RF Level	TS Analysis	Service List
1.1	Locked	30.161	11.609	-60dBm (48dBuV)		
1.2	Locked	30.161	13.458	-50dBm (49dBuV)		
1.3	Unlocked	0.000	0.000	-		
1.4	Unlocked	0.000	0.000	-		

Channel : 1.1

#	Service
1	[22] Heimatkanal
2	[147] Sky One HD

Channel : 1.2

#	Service
1	[13001] ORF1
2	[13002] ORF2

Channel : 1.3

#	Service
	No Data

Channel : 1.4

#	Service
	No Data


[13001] ORF1

Type	PID	Bitrate(Mbps)
PCR	160(0xa0)	5.449
PMT	100(0x3e0)	0.005
StreamType:2-Video(MPEG2)	160(0xa0)	5.449
StreamType:3-Audio	161(0xa1)	0.173
StreamType:3-Audio	162(0xa2)	0.173
StreamType:6-Private Data/AC3	163(0xa3)	0.469
StreamType:6-Private Data/AC3	165(0xa5)	0.263
AIT	7310(0x1cfe)	0.002
ECM	101(0x65)	0.005
ECM	103(0x67)	0.005
ECM	251(0xb1)	0.009
ECM	253(0xb3)	0.005

[Close](#)

In the menu “**CI**“ information about the inserted CA modules and cards will be displayed.

If necessary, an automatic reset of the CAMs can be programmed. It is also possible to open the internal CA menu and thus make advanced settings (if this is supported by the CAM).

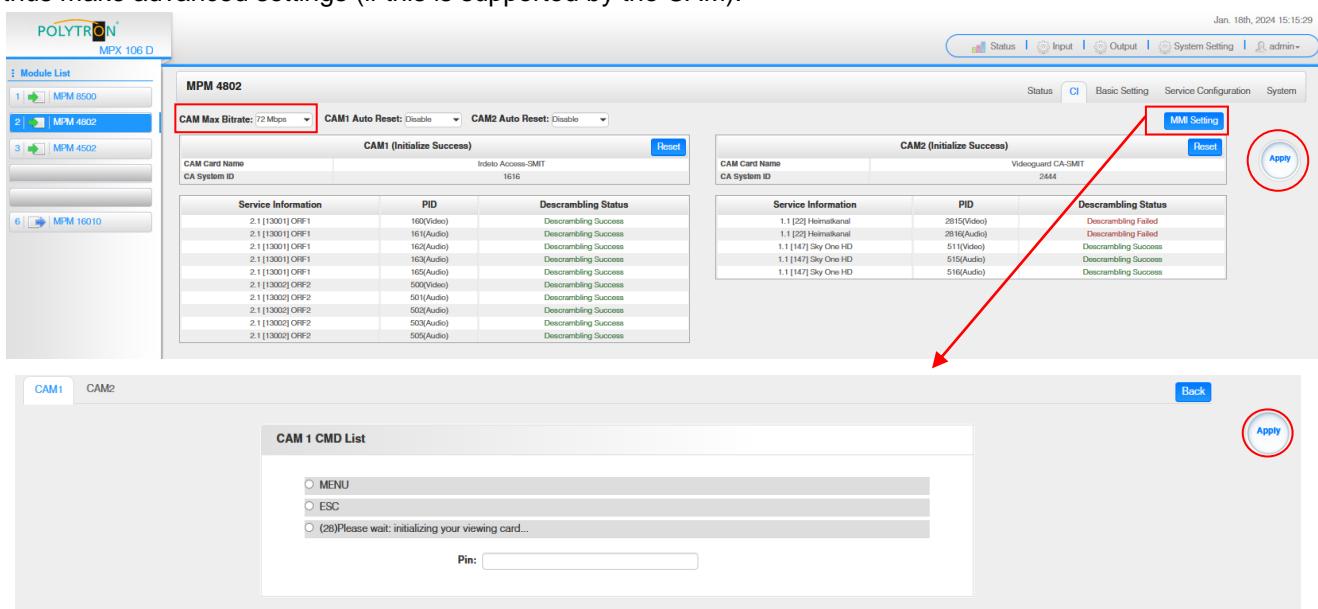

**CAM Max Bitrate:** 72 Mbps

**CAM1 Auto Reset:** Disable    **CAM2 Auto Reset:** Disable

**CAM1 (Initialize Success)**

CAM Card Name	CA System ID
Indeo Access-SMIT	1616

**CAM2 (Initialize Success)**

CAM Card Name	CA System ID
Videoguard CA-SMIT	2444

**CAM 1 CMD List**

- MENU
- ESC
- (28)Please wait: initializing your viewing card...

Pin: \_\_\_\_\_

**Apply**

In the pull-down list “CAM Max Bitrate“ the maximum CAM bitrate can be selected in steps from 48 Mbit/s to 104 Mbit/s depending on the total effective bitrate of decrypted services.

After pressing the button “**Apply**” all settings will be accepted.

In the menu “**Basic Setting**“ the RF input parameters can be programmed. The receiving frequency, the bandwidth and the PLP ID (DVB-T2) per tuner are set.



**T2 MI:** □

Channel	Frequency(KHz)	Bandwidth(MHz)	PLP ID	Reboot Tuner
1.1	306000	8	0	<b>Reboot</b>
1.2	314000	8	0	<b>Reboot</b>
1.3	322000	8	0	<b>Reboot</b>
1.4	330000	8	0	<b>Reboot</b>

**Apply**


Name	Range
<b>Frequency (KHz)</b>	47000~862000
<b>Bandwidth (MHz)</b>	6/7/8

Via the “**Reboot**“ button a restart of the selected tuner can be manually started.

After pressing the button “**Apply**” all settings will be accepted


In the menu “**Service Configuration**“ the input signals or services can be assigned to an output module and the output transport streams contained therein. After clicking on the desired channel the menu for assigning the channel to an output module and the available multiplexes in this channel will be opened. There you can also select the channel for bypass mode. Furthermore, when you select “Bypass”, the output channel is occupied by this stream. The channel is then no longer available for other streams.

The assignment of individual services to an output module and output transport stream is done by clicking directly behind the desired service .

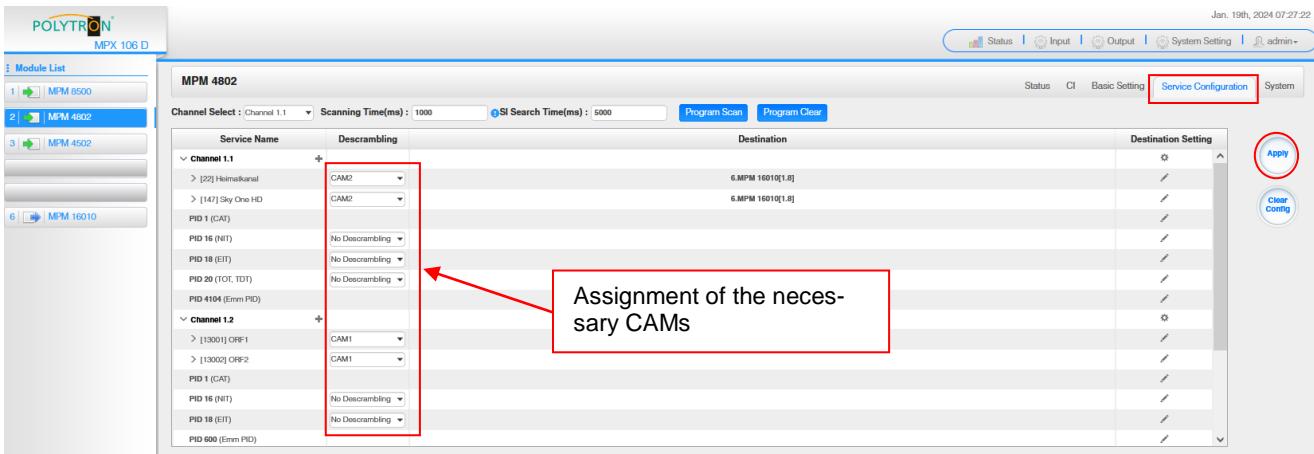


After pressing the button “**Apply**” all settings will be accepted.

#### Assignment of a channel (fully transport stream)

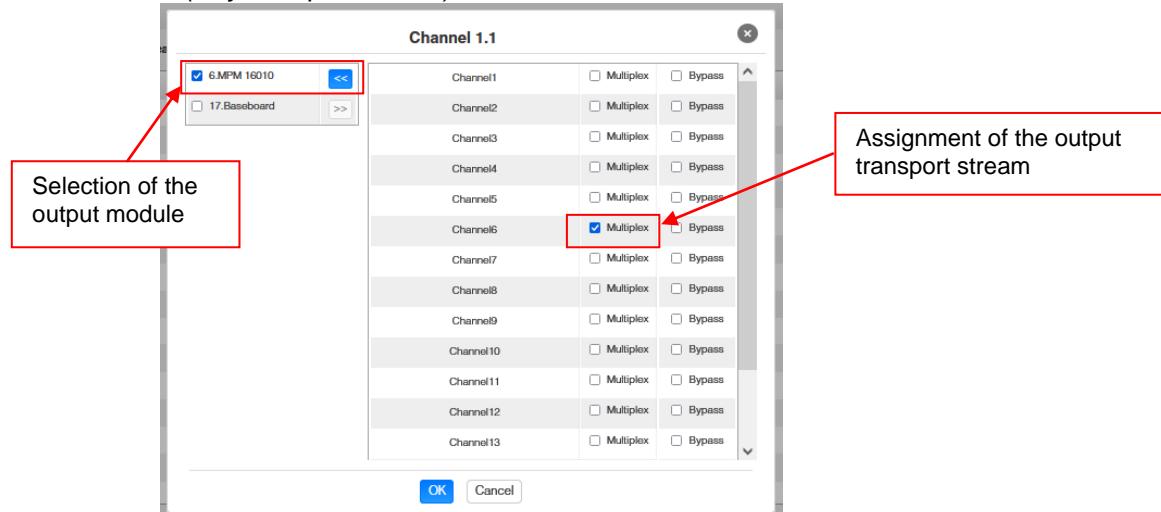

After pressing the button “**OK**” all settings will be accepted.

#### Assignment of a service

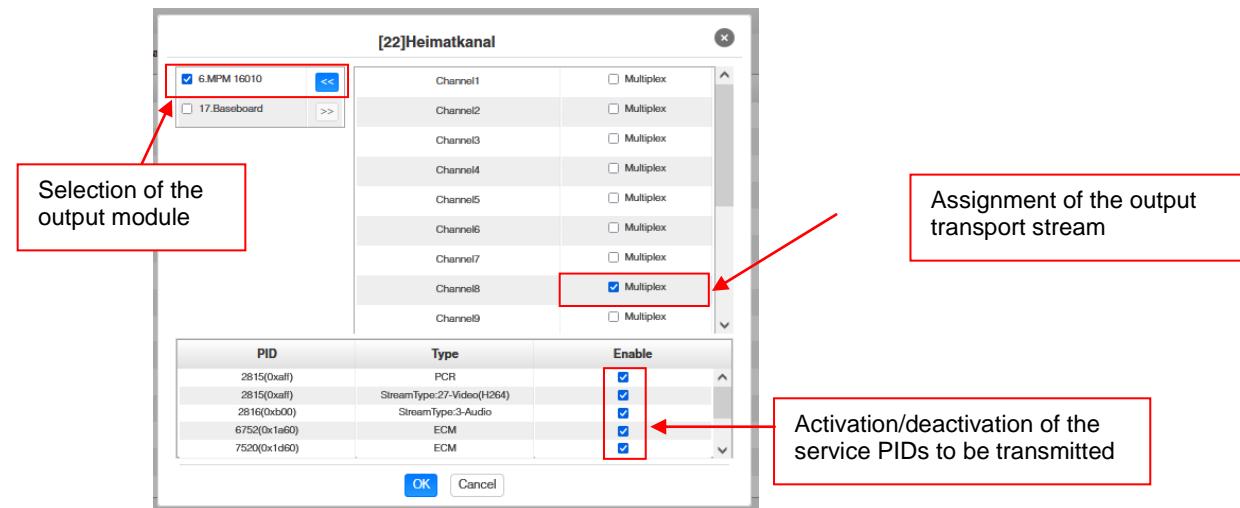

After pressing the button “**OK**” all settings will be accepted.

## Attention

**If the programs are to be transmitted as SPTS, each program must be assigned to an own multiplex on the base board.**

## Scanning Time

The “**Scanning Time**” can be set in the range 1000 ... 12000 ms. These should be increased if the service name is not displayed after a program scan.

Channel Select : Channel 1.1 Scanning Time(ms) : 2000 SI Search Time(ms) : 5000 Program Scan Program Clear


## SI Search Time

The “**SI Search Time**” for the SI data can be set in the range 5000 ... 12000 ms. These should be increased if the SI data are not displayed after the scan.

Channel Select : Channel 1.1 Scanning Time(ms) : 2000 SI Search Time(ms) : 5000 Program Scan Program Clear

In the menu “**System**“ the following common system adjustment can be done:

- License (Saving and Loading the license files)
  - SNMP MIB (Possibility of MIB export)
  - Advances Settings (Activation of the automatically program scan function)
  - Logs (Display and backup of Log data)
  - Others (Reboot = restart of the basic device  
Reset to Defaults = load of the factory settings)

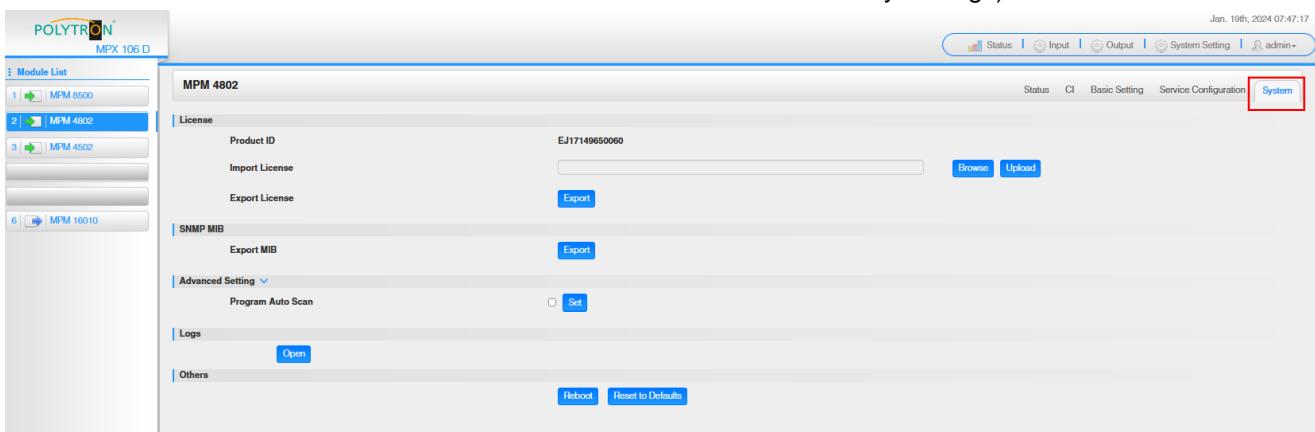

## Basic settings MPM 4802

Modul	Frequency	Bandwidth	PLP ID	Destination	Channel Baseboard	Destination IP	Destination Port	Protocol
1/1.1	322000 kHz	8 MHz	0	Baseboard	1.1	239.1.1.100	10001	RTP
1/1.2	330000 kHz	8 MHz	0	Baseboard	1.2	239.1.1.101	10001	RTP
1/1.3	338000 kHz	8 MHz	0	Baseboard	1.3	239.1.1.102	10001	RTP
1/1.4	346000 kHz	8 MHz	0	Baseboard	1.4	239.1.1.103	10001	RTP

## 8.5 Programming of the DVB-C output module MPM 16010 (Single slot module)

The MPM 16010 is an output module for modulation of 16 DVB-C output signals from the internal DVB-IP transport stream. The output module has an RF output. The 16 output channels (QAM) can be positioned independently in the frequency grid. The ethernet port is reserved for future applications. The MPM 16010 supports the automatical- ly generation of an NIT. Furthermore, a program number assignment can be carried out via LCN. The module oc- cupies a single slot into the base unit MPX 106 D (pro).

### Note

**The programs are assigned/routed to the required output channel in the input modules or when program- ming the IP signals of the baseboard.**

After clicking on the module in the module list you will be forwarded to the programming interface of the selected module. In this menu the system-specific parameters of the MPM 16010 can be set. By selecting the menu “Basic Setting”, “Output”, “PSIP” and “System” all settings can be made according to the application.

In the menu “**Status**“ the output bitrate of the DVB-C channels will be displayed as well as an evaluation based on the settings will be done.

The screenshot shows the software interface for the POLYTRON MPX 106 D. On the left, there's a sidebar with a "Module List" section containing three items: 1. MPM 8500, 2. MPM 8500, and 3. MPM 16010, which is highlighted with a red box. The main area is titled "MPM 16010" and displays a table of channel status. The table has columns: Channel, Effective Bitrate(Mbps), Total Bitrate(Mbps), Bitrate, TS Analysis, and Service List. The TS Analysis column contains two buttons: a play/pause button and a stop button, both of which are highlighted with red boxes. The Service List column contains a list icon, also highlighted with a red box. A tip at the top right says: "Tip: The module will automatically power off when the temperature reaches or exceeds 74 degrees Celsius(165.2 degrees Fahrenheit)!". The top right corner shows the date and time: Mar. 27th, 2023 14:05:30.

### 1 TS-Analysis

After pressing the button “**Reset Counter**“ restarts the recording of continuity count errors. In the search field, you can search specifically for topics such as PID, Service, Type, etc.

The screenshot shows a "Channel 1.5 TS Analysis" table. It includes columns for PID, Bitrate(Mbps), Bandwidth(%), Continuity Count Error, Type, and Service. The table lists several entries, each with a PID like 0x19e0(6630), a bit rate like 0.296 Mbps, and a service type like Audio or Video. A "Reset Counter" button is at the top right, and a search bar is at the bottom right.

### 2 Service List

After clicking the button Service List all received transport stream of the selected channel will be displayed. After selecting of one service the service-specific data will be shown.

The screenshot shows the "MPM 16010" module list. The "Service List" button for channel 1.1 is highlighted with a red box. An overlay window titled "Channel : 1.1" shows a list of services: 1. [10301] Das Erste HD, 2. [10302] arte HD, 3. [10303] SWR BW HD, and 4. [10304] SWR RP HD. The first item is selected. Below the list is a table of service-specific data with columns for Type and PID. Arrows point from the highlighted areas in the main interface to the corresponding elements in the overlay window.

In the menu “**Basic Setting**“ the DVB-C output parameters can be programmed. The output frequency, the bandwidth, the constellation and the symbol rate are set. The output frequencies can be allocated freely in the frequency range. The allocation of the bandwidth, constellation and symbol rate occurs in a pack of eight.

Channel	Enable	Frequency(KHz)	Bandwidth(MHz)	Constellation	SymbolRate(KBaud)
1.1	<input checked="" type="checkbox"/>	306000	8	QAM64	6875
1.2	<input checked="" type="checkbox"/>	314000	8	QAM64	6875
1.3	<input checked="" type="checkbox"/>	322000	8	QAM64	6875
1.4	<input checked="" type="checkbox"/>	330000	8	QAM64	6875
1.5	<input checked="" type="checkbox"/>	338000	8	QAM64	6875
1.6	<input checked="" type="checkbox"/>	346000	8	QAM64	6875
1.7	<input checked="" type="checkbox"/>	354000	8	QAM64	6875
1.8	<input checked="" type="checkbox"/>	362000	8	QAM64	6875
1.9	<input checked="" type="checkbox"/>	370000	8	QAM256	6900
1.10	<input checked="" type="checkbox"/>	378000	8	QAM256	6900
1.11	<input checked="" type="checkbox"/>	386000	8	QAM256	6900
1.12	<input checked="" type="checkbox"/>	394000	8	QAM256	6900
1.13	<input checked="" type="checkbox"/>	402000	8	QAM256	6900
1.14	<input checked="" type="checkbox"/>	410000	8	QAM256	6900
1.15	<input checked="" type="checkbox"/>	418000	8	QAM256	6900
1.16	<input checked="" type="checkbox"/>	426000	8	QAM256	6900

RF Level: Adjustment of the output level 15-45 dBmV (75-105 dBμV)

After pressing the button “**Apply**” all adjustments will be accepted.

The menu “**Output**“ offers an overview of the existing transport streams and the services they contain. Furthermore, the creation of a cable NIT, the assignment of an LCN or the adjustment of the TOT (Time Offset Table) can be done.

NO.	Service ID	Service Name	Service Provider
1	10301	Das Erste HD	ARD
2	10302	arte HD	ARD
3	10303	SWR BW HD	ARD
4	10304	SWR RP HD	ARD

All service specific data will be displayed after clicking on a service.

Service ID	Service Name	Service Provider
17508	SAT.1 NRW	ProSiebenSat.1
255		
104		
256		
259		
261		
262		
263		

## ATTENTION

Don't change the service-specific PIDs! Please consult specialist staff on this.

After clicking the configuration button the menu for creating the cable NIT will be opened. A network name and a network ID for the cable NIT can be assigned here.

Tag	Data	Length	Operation
0x40	PolyNet	7	

Network ID:   
 OK

Further, the automatic creation of the cable NIT for the entire module can be done via the button “**Add Descriptor**”. Via the button “**Export**” the NIT can be exported and via the button “**Import**” can be imported. **ATTENTION** the import will be overwrite the existing NIT.

The integration of external transport streams into the NIT is also possible.

ONID	TS ID	Descriptor	Operation
1	1019	[0x44] Cable Delivery System	
1	1011	[0x44] Cable Delivery System	
1	1107	[0x44] Cable Delivery System	
1	1089	[0x44] Cable Delivery System	
1	1010	[0x44] Cable Delivery System	
1	1025	[0x44] Cable Delivery System	
1	1061	[0x44] Cable Delivery System	
1	1021	[0x44] Cable Delivery System	
1	1039	[0x44] Cable Delivery System	
1	1091	[0x44] Cable Delivery System	
133	33	[0x44] Cable Delivery System	
133	5	[0x44] Cable Delivery System	
1	1053	[0x44] Cable Delivery System	
1	1055	[0x44] Cable Delivery System	
1	1078	[0x44] Cable Delivery System	
1	1109	[0x44] Cable Delivery System	

Logical Channel Number  
 Cable Delivery System  
 Terrestrial Delivery System  
 Satellite Delivery System  
 Service List

Entry of the transport stream specific data of the added channels.

Cable Delivery System

Frequency(KHz)	474000	[48000,858000]
Symbol Rate(Ksymbol/s)	6900	[0,999000]
Modulation	256-QAM	
FEC Outer	not defined	
FEC Inner	not defined	

OK Close

ONID	TS ID	Descriptor	Operation
1	1019	[0x44] Cable Delivery System	
1	1011	[0x44] Cable Delivery System	
1	1107	[0x44] Cable Delivery System	
1	1089	[0x44] Cable Delivery System	
1	1010	[0x44] Cable Delivery System	
1	1025	[0x44] Cable Delivery System	
1	1061	[0x44] Cable Delivery System	
1	1021	[0x44] Cable Delivery System	
1	1039	[0x44] Cable Delivery System	
1	1091	[0x44] Cable Delivery System	
133	33	[0x44] Cable Delivery System	
133	5	[0x44] Cable Delivery System	
1	1053	[0x44] Cable Delivery System	
1	1055	[0x44] Cable Delivery System	
1	1078	[0x44] Cable Delivery System	
1	1109	[0x44] Cable Delivery System	

Delete the descriptor  
 Delete the NIT stream  
 Open the editing window for the descriptor

The allocation of program numbers is possible via the LCN function.

After clicking on “**Descriptor**“ the selection menu for NIT processing will be opened. Select “**Logical Channel Number**“ in the selection menu and the configuration menu for assigning the LCN will be opened. A program number “LCN” can be defined for each service here.

ONID	TS ID	Descriptor	Operation
1	1019	[0x44] Cable Delivery System	<input checked="" type="checkbox"/> +Descriptor <input checked="" type="checkbox"/> Logical Channel Number
1	1011	[0x44] Cable Delivery System	<input checked="" type="checkbox"/> +Descriptor
1	1107	[0x44] Cable Delivery System	<input checked="" type="checkbox"/> +Descriptor
1	1099	[0x44] Cable Delivery System	<input checked="" type="checkbox"/> +Descriptor
1	1010	[0x44] Cable Delivery System	<input checked="" type="checkbox"/> +Descriptor
1	1025	[0x44] Cable Delivery System	<input checked="" type="checkbox"/> +Descriptor
1	1061	[0x44] Cable Delivery System	<input checked="" type="checkbox"/> +Descriptor
1	1021	[0x44] Cable Delivery System	<input checked="" type="checkbox"/> +Descriptor
1	1039	[0x44] Cable Delivery System	<input checked="" type="checkbox"/> +Descriptor
1	1091	[0x44] Cable Delivery System	<input checked="" type="checkbox"/> +Descriptor
133	33	[0x44] Cable Delivery System	<input checked="" type="checkbox"/> +Descriptor
133	5	[0x44] Cable Delivery System	<input checked="" type="checkbox"/> +Descriptor
1	1053	[0x44] Cable Delivery System	<input checked="" type="checkbox"/> +Descriptor
1	1055	[0x44] Cable Delivery System	<input checked="" type="checkbox"/> +Descriptor
1	1078	[0x44] Cable Delivery System	<input checked="" type="checkbox"/> +Descriptor
1	1109	[0x44] Cable Delivery System	<input checked="" type="checkbox"/> +Descriptor

TS	Service ID	Service Name	LCN [0, 1023]	Visible Service Flag
1.1	10301	Das Erste HD	1	<input checked="" type="checkbox"/>
1.1	10302	arte HD	2	<input checked="" type="checkbox"/>
1.1	10303	SWR BW HD	3	<input checked="" type="checkbox"/>
1.1	10304	SWR RP HD	4	<input checked="" type="checkbox"/>
1.2	11110	ZDF HD	5	<input checked="" type="checkbox"/>
1.2	11130	zdf_neo HD	6	<input checked="" type="checkbox"/>
1.3	17500	SAT.1	7	<input checked="" type="checkbox"/>
1.3	17501	ProSieben	8	<input checked="" type="checkbox"/>

After pressing the button “**OK**” all adjustments will be accepted.

After clicking the “**TOT**“ button, the menu for programming the data for the “Time Offset Table“.

NIT **TOT** [1.1]

[1.1] TOT Configuration

Country Code	CHN
Country Region Id	8
Local Time Offset Polarity	UTC -
Time Of Change	2022/04/04 12:10:00
Local Time Offset	00:00
Next Time Offset	00:00

**OK**

After pressing the button “**OK**” all adjustments will be accepted.

After pressing the button “**Apply**” all adjustments from the “**Output**“ menu will be saved.

After pressing the button “**Clear Config**” all assignments and settings will be deleted from the “**Output**“ menu.

In the menu „**PSIP**“ the specific selection of the tables which to be transferred can be done.

POLYTRON MPX 106 D

Apr. 04th, 2023 12:01:05

Module List

MPM 16010

Status Basic Setting Output **PSIP** System

Output Channel List

1.1	<input checked="" type="checkbox"/>
1.2	<input checked="" type="checkbox"/>
1.3	<input checked="" type="checkbox"/>
1.4	<input checked="" type="checkbox"/>
1.5	<input checked="" type="checkbox"/>
1.6	<input checked="" type="checkbox"/>
1.7	<input checked="" type="checkbox"/>
1.8	<input checked="" type="checkbox"/>
1.9	<input checked="" type="checkbox"/>
1.10	<input checked="" type="checkbox"/>
1.11	<input checked="" type="checkbox"/>
1.12	<input checked="" type="checkbox"/>

Output Channel [1.1] >> PSIP

<input checked="" type="checkbox"/> PAT Insert
<input checked="" type="checkbox"/> PMT Insert
<input checked="" type="checkbox"/> SDT Insert
<input checked="" type="checkbox"/> NIT Insert
<input checked="" type="checkbox"/> CAT Insert
<input checked="" type="checkbox"/> TDT Insert
<input type="checkbox"/> TOT Insert

**OK**

After pressing the button “**OK**” all adjustments will be accepted.

In the menu “**System**“ the following common system adjustments can be done:

- License (Saving and Loading the license files)
- SNMP MIB (Possibility of MIB export)
- Logs (Display and backup of Log data)
- Others (Reboot = restart of the basic device  
Reset to Defaults = load of the factory settings)

### **Basic settings MPM 16010**

Modul	Frequency	Bandwidth	Constellation	SymbolRate (KBAud)	Enable	Source	Channel MPM 8500	Transponder	Name
3/1.1	306 MHz	8 MHz	256 QAM	6900	✓	MPM 8500	1/1.1	19	ARD Digital
3/1.2	314 MHz	8 MHz	256 QAM	6900	✓	MPM 8500	1/2.1	11	ZDF Vision
3/1.3	322 MHz	8 MHz	256 QAM	6900	✓	MPM 8500	1/3.1	107	ProSieben/Sat.1 Media
3/1.4	330 MHz	8 MHz	256 QAM	6900	✓	MPM 8500	1/4.1	89	Mediengruppe RTL
3/1.5	338 MHz	8 MHz	256 QAM	6900	✓	MPM 8500	1/5.1	10	ZDF Vision
3/1.6	346 MHz	8 MHz	256 QAM	6900	✓	MPM 8500	1/6.1	25	ARD Digital
3/1.7	354 MHz	8 MHz	256 QAM	6900	✓	MPM 8500	1/7.1	61	ARD Digital
3/1.8	362 MHz	8 MHz	256 QAM	6900	✓	MPM 8500	1/8.1	21	ARD Digital
3/1.9	370 MHz	8 MHz	256 QAM	6900	✓	MPM 8500	2/1.1	39	ARD Digital
3/1.10	378 MHz	8 MHz	256 QAM	6900	✓	MPM 8500	2/2.1	91	SES
3/1.11	386 MHz	8 MHz	256 QAM	6900	✓	MPM 8500	2/3.1	104	SES
3/1.12	394 MHz	8 MHz	256 QAM	6900	✓	MPM 8500	2/4.1	103	SES
3/1.13	402 MHz	8 MHz	256 QAM	6900	✓	MPM 8500	2/5.1	53	SES
3/1.14	410 MHz	8 MHz	256 QAM	6900	✓	MPM 8500	2/6.1	55	SES
3/1.15	418 MHz	8 MHz	256 QAM	6900	✓	MPM 8500	2/7.1	78	Paramount International Networks
3/1.16	426 MHz	8 MHz	256 QAM	6900	✓	MPM 8500	2/8.1	92	SES

## 8.6 Programming of the DVB-T output module MPM 8020 (Single slot module)

The MPM 8020 is an output module for modulation of 8 DVB-T output signals from the internal DVB-IP transport stream. The output module has an RF output. The 8 output channels (OFDM) can be positioned independently in the frequency grid. The ethernet port is reserved for future applications. The MPM 8020 supports the manually generation of an NIT. Furthermore, a program number assignment can be carried out via LCN. The module occupies a single slot into the base unit MPX 106 D (pro).

### Note

**The programs are assigned/routed to the required output channel in the input modules or when programming the IP signals of the baseboard.**

After clicking on the module in the module list you will be forwarded to the programming interface of the selected module. In this menu the system-specific parameters of the MPM 8020 can be set. By selecting the menu "Basic Setting", "Output", "PSIP" and "System" all settings can be made according to the application.

In the menu "**Status**" the output bitrate of the DVB-T channels will be displayed as well as an evaluation based on the settings will be done.

The screenshot shows the software interface for the MPX 106 D. On the left, a sidebar lists modules: 1. MPM 8020 (selected), 2. MPM 8020 (highlighted in red), 3. MPM 2331, 4. MPM 4230. The main window title is "MPM 8020". It displays the temperature as 39°C (102.2°F). A table shows channel information:

Channel	Effective Bitrate(Mbps)	Total Bitrate(Mbps)	Bitrate	TS Analysis	Service List
1.1	10.022	31.668	Normal		
1.2	33.524	31.668	Overflow		
1.3	19.764	31.668	Normal		
1.4	10.040	31.668	Normal		
1.5	10.040	31.669	Normal		
1.6	10.040	31.669	Normal		
1.7	10.040	31.669	Normal		
1.8	10.021	31.669	Normal		

A tip at the bottom right says: "Tip: The module will automatically power off when the temperature reaches or exceeds 74 degrees Celsius(165.2 degrees Fahrenheit)".

### 1 TS-Analysis

After pressing the button "**Reset Counter**" restarts the recording of continuity count errors. In the search field, you can search specifically for topics such as PID, Service, Type, etc.

The screenshot shows the "Channel 1.3 TS Analysis" screen. It includes a "Search" field and a "Reset Counter" button. A table lists TS analysis data for various PIDs:

PID	Bitrate(Mbps)	Bandwidth(%)	Continuity Count Error	Type	Service
0x0(0)	0.015	0.047	0	PAT	
0x1(17)	0.015	0.047	0	SDT	
0xb(107)	0.015	0.047	0	PMT	ORF1 HD
0xc(108)	0.015	0.047	0	PMT	ORF2W HD
0x78(120)	0.006	0.019	0	PSEC/M	ORF1 HD
0x79(121)	0.004	0.013	0	PSEC/M	ORF2W HD
0x7a(122)	0.004	0.013	0	PSEC/M	ORF1 HD
0xb1(123)	0.004	0.013	0	PSEC/M	ORF2W HD

### 2 Service List

After clicking the button **Service List** all received transport stream of the selected channel will be displayed. After selecting of one service the service-specific data will be shown.

The screenshot shows the "MPM 8020" screen with "Temperature: 39°C (102.2°F)". A tip at the bottom right says: "Tip: The module will automatically power off when the temperature reaches or exceeds 74 degrees Celsius(165.2 degrees Fahrenheit)". A table shows channel information:

Channel	Effective Bitrate(Mbps)	Total Bitrate(Mbps)	Bitrate	TS Analysis	Service List
1.1	10.040	31.668	Normal		
1.2	33.524	31.668	Overflow		
1.3	19.764	31.668	Normal		
1.4	10.040	31.668	Normal		
1.5	10.040	31.669	Normal		
1.6	10.040	31.669	Normal		
1.7	10.040	31.669	Normal		
1.8	10.040	31.669	Normal		

A detailed view for "Service List" is shown for Channel 1.3, Service [4911] ORF1 HD, with a table of service-specific data:

Type	PID
PCR PID	1900
PMT PID	1917
Video PID	1920(Video0)(264)
Audio PID	1921/Private Data(AC3)
Audio PID	1922/Private Data(AC3)
Audio PID	1925/Private Data(AC3)

In the menu “**Basic Setting**“ the DVB-T output parameters can be programmed. The output frequency, the bandwidth, the FFT mode, the guard interval, the QAM mode and the code rate are set. The output frequencies can be allocated freely in the frequency range. The allocation of the bandwidth, FFT mode, guard interval, QAM mode and code rate occurs in a pack of four.

RF Level: Adjustment of the output level 15-45 dBmV (75-105 dB $\mu$ V)

After pressing the button “**Apply**” all adjustments will be accepted.


The menu “**Output**“ offers an overview of the existing transport streams and the services they contain. Furthermore, the creation of a cable NIT, the assignment of an LCN or the adjustment of the TOT (Time Offset Table) can be done.

All service specific data will be displayed after clicking on a service.

## ATTENTION


Don't change the service-specific PIDs! Please consult specialist staff on this.

After clicking the configuration button the menu for creating the cable NIT will be opened. A network name and a network ID for the cable NIT can be assigned here.

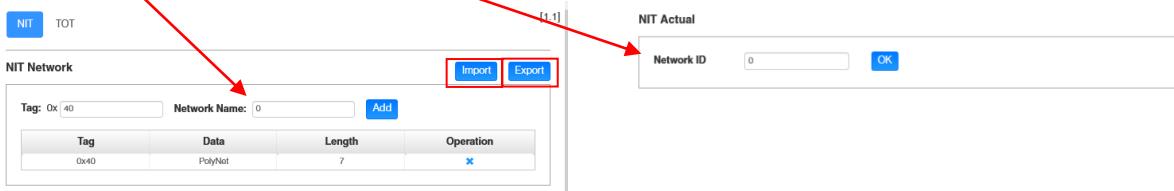

Furthermore, the NIT for the entire module can be created here.

1. Set Original Network ID and TS ID for the transport stream
2. Click button “**Add**” → adding the transport stream to the NIT stream
3. Click on “**Descriptor**” link
4. Select “**Terrestrial Delivery System**” to add the NIT data
5. Enter the transport stream-specific data into the submenu

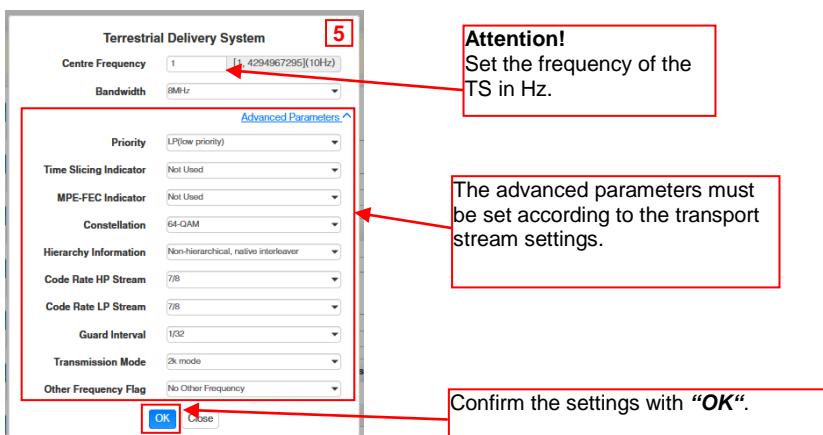

6. After all TS have been set into the NIT, it can be exported by using the “**Export**” button and imported by using the “**Import**” button. **ATTENTION** importing will overwrite the existing NIT.

It is recommended to create a uniform NIT for each transport stream. This can be easily done using the export/import function.

The integration of external transport streams into the NIT is possible by using the same procedure.

### NIT example

NIT Stream

ONID	TS ID	Descriptor	Operation
1	1006	[0x5a] Terrestrial Delivery System	x +Descriptor
1	1008	[0x5a] Terrestrial Delivery System	x +Descriptor
1	1007	[0x5a] Terrestrial Delivery System	x +Descriptor
1	1009	[0x5a] Terrestrial Delivery System	x +Descriptor
1	1010	[0x5a] Terrestrial Delivery System	x +Descriptor
1	1011	[0x5a] Terrestrial Delivery System	x +Descriptor
1	1012	[0x5a] Terrestrial Delivery System	x +Descriptor
1	1013	[0x5a] Terrestrial Delivery System	x +Descriptor

Annotations:

- Delete the descriptor
- Delete the NIT stream
- Open the selection menu to editing the NIT data for the transport stream.
- Open the editing window for the descriptor

The allocation of program numbers is possible via the LCN function.

After clicking on “**Descriptor**“ the selection menu for NIT processing will be opened. Select “**Logical Channel Number**“ in the selection menu and the configuration menu for assigning the LCN will be opened. A program number “LCN” can be defined for each service here.

NIT Stream

ONID	TS ID	Descriptor	Operation
1	1006	[0x5a] Terrestrial Delivery System	x +Descriptor
1	1008	[0x5a] Terrestrial Delivery System	x +Descriptor
1	1007	[0x5a] Terrestrial Delivery System	x +Descriptor
1	1009	[0x5a] Terrestrial Delivery System	x +Descriptor
1	1010	[0x5a] Terrestrial Delivery System	x +Descriptor
1	1011	[0x5a] Terrestrial Delivery System	x +Descriptor
1	1012	[0x5a] Terrestrial Delivery System	x +Descriptor
1	1013	[0x5a] Terrestrial Delivery System	x +Descriptor

Annotations:

- Allocation of LCN
- Activation of services for LCN

Logical Channel Number SD HD Add

TS	Service ID	Service Name	LCN [0, 1023]	Visible Service Flag
1.1	4913	ServusTV HD Oesterreich	1	Visible
1.2	4911	ORF1 HD	2	Visible
1.3	4912	ORF2W HD	3	Visible
1.4	4914	DF1 HD	4	Visible
1.5	4916	ORF2N HD	5	Visible
1.6	4920	OE3.	6	Visible
1.7	4930	RIC	7	Visible

Annotations:

- Allocation of LCN
- Activation of services for LCN

After pressing the button “**OK**” all adjustments will be accepted.

After clicking the “**TOT**“ button, the menu for programming the data for the “Time Offset Table“.

NIT TOT [1.1]

[1.1] TOT Configuration

Country Code	CHN
Country Region Id	8
Local Time Offset Polarity	UTC -
Time Of Change	2022/04/04 12:10:00
Local Time Offset	00:00
Next Time Offset	00:00

Annotations:


- OK

After pressing the button “**OK**” all adjustments will be accepted.

After pressing the button “**Apply**” all adjustments from the “**Output**“ menu will be saved.

After pressing the button “**Clear Config**” all assignments and settings will be deleted from the “**Output**“ menu.

In the menu “**PSIP**“ the specific selection of the tables which to be transferred can be done.

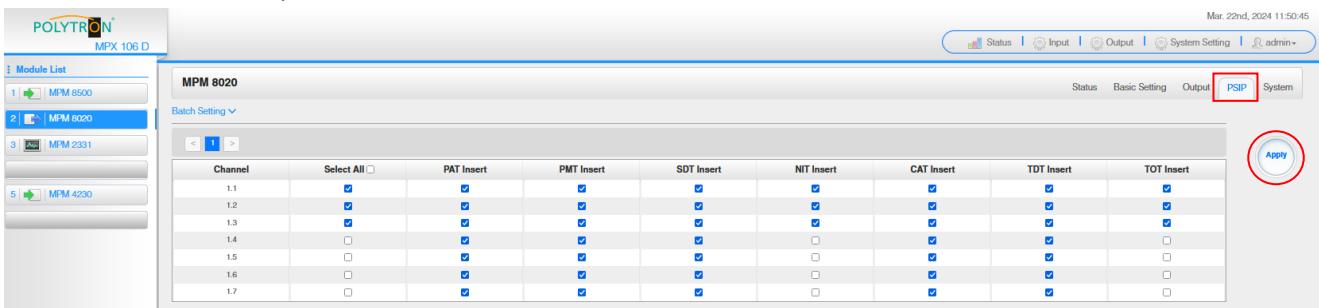


The screenshot shows the software interface for the MPM 8020 module. On the left, there's a 'Module List' with items 1 (MPM 8500), 2 (MPM 8020), 3 (MPM 2331), and 5 (MPM 4230). The 'MPM 8020' item is selected. The main window title is 'MPM 8020'. At the top right, there are tabs for Status, Basic Setting, Output, PSIP (which is highlighted with a red box), and System. Below the tabs is a 'Batch Setting' dropdown. The main area contains a table with columns for Channel (1.1 to 1.7) and various insert types (PAT Insert, PMT Insert, SDT Insert, NIT Insert, CAT Insert, TDT Insert, TOT Insert). Each row has checkboxes for selecting individual channels. At the bottom right of the table area is a red circle around the 'Apply' button.

After pressing the button “**Apply**” all adjustments will be accepted.

In the menu “**System**“ the following common system adjustments can be done:

- License (Saving and Loading the license files)
- SNMP MIB (Possibility of MIB export)
- Logs (Display and backup of Log data)
- Others (Reboot = restart of the basic device  
Reset to Defaults = load of the factory settings)

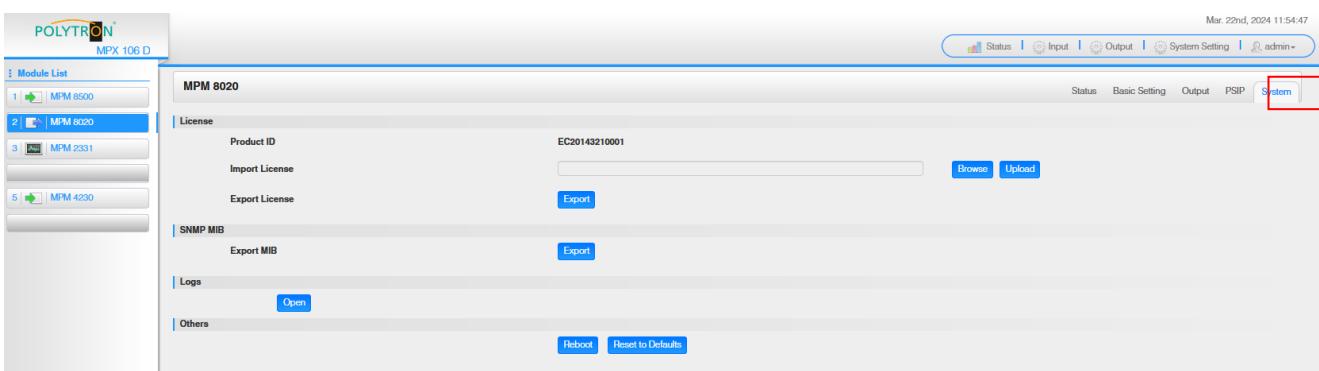

The screenshot shows the 'System' configuration screen for the MPM 8020 module. The left sidebar shows the same 'Module List' as the previous screenshot. The main window title is 'MPM 8020'. At the top right, there are tabs for Status, Basic Setting, Output, PSIP, and System (which is highlighted with a red box). Below the tabs are sections for License (Product ID: EC20143210001, Import License, Export License), SNMP MIB (Export MIB), Logs (Open), and Others. At the bottom are 'Reboot' and 'Reset to Defaults' buttons. A red circle highlights the 'Apply' button at the bottom right of the main area.

### **Factory settings MPM 8020**

Module	Frequency	Bandwidth	Constellation	FFT Mode	Enable	Guard Interval	Coderate	Ausgangspegel	RF Level Gain
1.1	474 MHz	8 MHz	64 QAM	2K	X	1/32	7/8	45 dBmV	0 dBµV
1.2	482 MHz	8 MHz	64 QAM	2K	X	1/32	7/8	45 dBmV	0 dBµV
1.3	490 MHz	8 MHz	64 QAM	2K	X	1/32	7/8	45 dBmV	0 dBµV
1.4	498 MHz	8 MHz	64 QAM	2K	X	1/32	7/8	45 dBmV	0 dBµV
1.5	578 MHz	8 MHz	64 QAM	2K	X	1/32	7/8	45 dBmV	0 dBµV
1.6	586 MHz	8 MHz	64 QAM	2K	X	1/32	7/8	45 dBmV	0 dBµV
1.7	594 MHz	8 MHz	64 QAM	2K	X	1/32	7/8	45 dBmV	0 dBµV
1.8	602 MHz	8 MHz	64 QAM	2K	X	1/32	7/8	45 dBmV	0 dBµV

## 8.7 Programming of the transcoder processing module MPM 1333 (Single slot module)

The MPM 1333 is a transcoder module, which supports the transcoding between different video compression standards such as H.265, H.264 and MPEG-2. The module has two GbE ports for input and output of IP streams. To install the operating system, the module is equipped with two USB ports and an HDMI port. With the transcoder module the input streams can be adapted to the desired output codec and thus to existing receiving devices in the network.

### Attention

The power consumption of the transcoder module depends on the number of transcoded services and the transcoding parameters. The module may only be used with the base unit MPX 106 D pro.

After clicking on the module in the module list you will be forwarded to the programming interface of the selected module. In this menu the system-specific parameters of the MPM 1333 can be set. By selecting the menu "Input" and "Engine" these settings can be made according to the application. The menus "System", "Alarm" and "About" provide status information as well as hard- and software information.

In the menu "**Status**" the current status as well as media information of the input and output transport streams according to the settings will be displayed. Via the button "**Advanced Settings**" the displayed status information can be preselected.

Engine	Status	Run Time	Input Source	Service	View	Output URL	Preview	Encoding Format	Resolution	Frame Rate	Total Bitrate(Mbps)	Video Bitrate(Mbps)	Audio 1 Codec
1	●	6:23:56:33	RTP/2238.1.1.101:10001/Internal	[10001] Das Erste HD	②	RTP/2238.2.1.101:10001	③	MPEG 2	720 x 576	25Hz Interlaced	6.00(Mbps)	5.00(Mbps)	MPEG M.2
2	●	6:23:56:33	RTP/2238.1.1.102:10001/Internal	[11110] ZDF HD	②	RTP/2238.2.1.102:10001	③	MPEG 2	720 x 576	25Hz Interlaced	6.00(Mbps)	5.00(Mbps)	MPEG M.2
3	●	6:23:56:33	RTP/2238.1.1.103:10001/Internal	[10002] SWR HD	②	RTP/2238.2.1.103:10001	③	MPEG 2	720 x 576	25Hz Interlaced	6.00(Mbps)	5.00(Mbps)	MPEG M.2
4	●	0:00:00	RTP/2238.1.1.112:10001/Internal	[10375] bageschau24 HD	②	RTP/2238.2.1.112:10001	③	MPEG 2	720 x 576	25Hz Interlaced	6.00(Mbps)	5.00(Mbps)	MPEG M.2
5	●	0:00:00	RTP/2238.1.1.113:10001/Internal	[10302] WDR HD Köln	②	RTP/2238.2.1.113:10001	③	MPEG 2	720 x 576	25Hz Interlaced	6.00(Mbps)	5.00(Mbps)	MPEG M.2
6	●	6:23:55:33	RTP/2238.1.1.114:10001/Internal	[10305] BR Fernsehen Std HD	②	RTP/2238.2.1.114:10001	③	MPEG 2	720 x 576	25Hz Interlaced	6.00(Mbps)	5.00(Mbps)	MPEG M.2
7	●	6:23:55:32	RTP/2238.1.1.115:10001/Internal	[10327] NDR 1 S-NDS HD	②	RTP/2238.2.1.115:10001	③	MPEG 2	720 x 576	25Hz Interlaced	6.00(Mbps)	5.00(Mbps)	MPEG M.2
8	●	0:01:52	RTP/2238.1.1.116:10001/Internal	[10300] BB Brandenburg HD	②	RTP/2238.2.1.116:10001	③	MPEG 2	720 x 576	25Hz Interlaced	6.00(Mbps)	5.00(Mbps)	MPEG M.2
9	●	0:12:32:38	RTP/2238.1.1.117:10001/Internal	[10302] MDR Sachsen HD	②	RTP/2238.2.1.117:10001	③	MPEG 2	720 x 576	25Hz Interlaced	6.00(Mbps)	5.00(Mbps)	MPEG M.2
10	●	6:23:55:33	RTP/2238.1.1.118:10001/Internal	[10305] hr Fernsehen HD	②	RTP/2238.2.1.118:10001	③	MPEG 2	720 x 576	25Hz Interlaced	6.00(Mbps)	5.00(Mbps)	MPEG M.2
11	●	0:00:00	RTP/2238.1.1.119:10001/Internal	[10376] SR Fernsehen HD	②	RTP/2238.2.1.119:10001	③	MPEG 2	720 x 576	25Hz Interlaced	6.00(Mbps)	5.00(Mbps)	MPEG M.2

Engine

Shows the channel number (the number of channels depends on license).

Status

Shows the status of the streams (green = okay; red = error; grey = deactivated).

Run Time

Shows the transcoding time from start of the transcoding.

Input Source  
intern/extern).

Shows information about the input transport stream (protocol, IP address, port, ethernet

Service

Shows the transcoded program.

View

Shows detailed information of the transcoded programs.

Output URL

Shows information about the output transport stream (protocol, IP address, port).

Preview

Previews the transcoding, click on the image to enlarge

Encoding Format

Shows the format of the output transport stream.

Resolution

Shows the resolution of the output transport stream.

Frame Rate

Shows the frame rate of the output transport stream.

Total Bitrate

Shows the total bit rate of the output transport stream.

Video Bitrate

Shows the video bitrate of the output transport stream.

Audio Bitrate 1-4

Shows the audio bit rate of the audio channel 1-4 of the output transport stream.

Audio Codec 1-4

Shows the audio codec of the audio channel 1-4 of the output transport stream.

Audio Sample Rate 1-4

Shows the sample rate of the audio channel 1-4 of the output transport stream.

### 1 Advanced Settings

After pressing the button "**Advanced Settings**" the displayed status information can be preselected.


Video Parameter	Resolution	Frame Rate	Total Bitrate
<input checked="" type="checkbox"/> Encoding Format	<input checked="" type="checkbox"/> Resolution	<input checked="" type="checkbox"/> Frame Rate	<input checked="" type="checkbox"/> Total Bitrate
<input checked="" type="checkbox"/> Video Bitrate			

Audio Parameter	Audio 2 Codec	Audio 3 Codec	Audio 4 Codec
<input checked="" type="checkbox"/> Audio 1 Codec	<input type="checkbox"/> Audio 2 Codec	<input type="checkbox"/> Audio 3 Codec	<input type="checkbox"/> Audio 4 Codec
<input type="checkbox"/> Audio 1 Bitrate	<input type="checkbox"/> Audio 2 Bitrate	<input type="checkbox"/> Audio 3 Bitrate	<input type="checkbox"/> Audio 4 Bitrate
<input type="checkbox"/> Audio 1 Sample Rate	<input type="checkbox"/> Audio 2 Sample Rate	<input type="checkbox"/> Audio 3 Sample Rate	<input type="checkbox"/> Audio 4 Sample Rate

## 2 View

After pressing “View“ all transport stream information of the selected input source will be displayed.

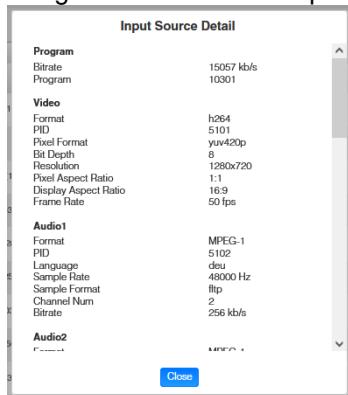

## 3 Preview

After pressing “Preview“ of the selected program the transcoded program will be displayed.

In the menu “Input“ the IP input data for the transcoded programs can be set.

MPM 1333									
Engine	Status	Enable	Network Port	Protocol	IP Address	Port	VLAN	VLAN ID	Action
1	<span style="color: green;">●</span>	<input checked="" type="checkbox"/>	Internal	RTP	239.1.1.101	10001	Disable	None	
2	<span style="color: green;">●</span>	<input checked="" type="checkbox"/>	Internal	RTP	239.1.1.102	10001	Disable	None	
3	<span style="color: green;">●</span>	<input checked="" type="checkbox"/>	Internal	RTP	239.1.1.103	10001	Disable	None	
4	<span style="color: grey;">●</span>	<input type="checkbox"/>	Internal	RTP	239.1.1.112	10001	Disable	None	
5	<span style="color: grey;">●</span>	<input type="checkbox"/>	Internal	RTP	239.1.1.113	10001	Disable	None	
6	<span style="color: green;">●</span>	<input checked="" type="checkbox"/>	Internal	RTP	239.1.1.114	10001	Disable	None	
7	<span style="color: green;">●</span>	<input checked="" type="checkbox"/>	Internal	RTP	239.1.1.115	10001	Disable	None	
8	<span style="color: green;">●</span>	<input checked="" type="checkbox"/>	Internal	RTP	239.1.1.116	10001	Disable	None	
9	<span style="color: green;">●</span>	<input checked="" type="checkbox"/>	Internal	RTP	239.1.1.117	10001	Disable	None	
10	<span style="color: green;">●</span>	<input checked="" type="checkbox"/>	Internal	RTP	239.1.1.118	10001	Disable	None	
11	<span style="color: green;">●</span>	<input checked="" type="checkbox"/>	Internal	RTP	239.1.1.119	10001	Disable	None	
12	<span style="color: green;">●</span>	<input checked="" type="checkbox"/>	Internal	RTP	239.1.1.123	10001	Disable	None	
13	<span style="color: green;">●</span>	<input checked="" type="checkbox"/>	Internal	RTP	239.1.1.124	10001	Disable	None	
14	<span style="color: green;">●</span>	<input checked="" type="checkbox"/>	Internal	RTP	239.1.1.125	10001	Disable	None	
15	<span style="color: green;">●</span>	<input checked="" type="checkbox"/>	Internal	RTP	239.1.1.126	10001	Disable	None	
16	<span style="color: green;">●</span>	<input checked="" type="checkbox"/>	Internal	RTP	239.1.1.127	10001	Disable	None	
17	<span style="color: green;">●</span>	<input checked="" type="checkbox"/>	Internal	RTP	239.1.1.128	10001	Disable	None	
18	<span style="color: green;">●</span>	<input checked="" type="checkbox"/>	Internal	RTP	239.1.1.129	10001	Disable	None	

Engine

Shows the channel number (the number of channels depends on license).

Status

Shows the status of the streams (green = okay; red = receiving error).

Enable

Activation  /Deactivation  of the selected input

Network Port

Selection of the corresponding input port

(DATA1/DATA2 = external, Internal = data port of the MPX base board)

Protocol

Selection UDP/RTP

IP Address

Programming of the source IP address

Port

Programming of the source port

V-LAN

Activation  /Deactivation  of VLAN, Filtering incoming streams for for

VLAN tags

Selection of the VLAN ID

V-LAN ID

Shows the programmed service with corresponding S-ID

Action

After pressing the button “Apply” all settings will be accepted.

In the menu “**Engine**“ the transcoding parameters per program will set. Via the Button “**Advanced Settings**“ the displayed parameters can be preselected.

The screenshot shows the MPX 106 D software interface. On the left, there's a 'Module List' with items like 'MPM 8500', 'MPM 1333' (highlighted with a red box), 'MPM 4502', and 'MPM 16010'. In the center, the 'MPM 1333' tab is active, displaying a table of 16 rows. Each row represents a service configuration with columns for Channel, Enable, Select Service, Network Port, Protocol, IP Address, Port, Total Bitrate(Mbps), Encoding Format, Video Bitrate(Mbps), Resolution, Frame Rate, and Data Table Standard. A red box highlights the 'Advanced Setting' button at the top of the table. At the bottom right of the table, there's a circled 'Apply' button.

Channel	Shows the channel number (the number of channels depends on license)
Enable	Activation <input checked="" type="checkbox"/> /Deactivation <input type="checkbox"/> of the selected input
Select Service	Selection of the desired service from the drop-down list
Network Port	Selection of the corresponding output port (DATA1/DATA2 = external, Internal = data port of the MPX base board)
Protocol	Selection of the IP protocol of the output transport stream (UDP/RTP/RTP with SDP)
IP Address	Programming of the output IP address (Multicast: 224.0.0.0...239.255.255.255/Unicast: terminal IP address)
Port	Programming of the port (1...65535)
Total Bitrate	Setting of the total bit rate of the output transport stream (0...30 Mbit/s – must be higher than the video bit rate)
Service Type	Setting of the service type (TV or radio)
Encoding Format	Programming of the encoding format of the output transport stream (MPEG-2/H.264/H.265 only with license)
Video Bitrate	Programming of the video bit rate of the output transport stream (0.48...20 Mbit/s)
Resolution	Programming of the resolution of the output transport stream (1920x1080/ 1280x720/720x576/720x480/Auto-follows the input)
Frame Rate	Programming of the frame rate of the output transport stream (25p/29.97p/30p/50p/59.94p/60p/25i/29.97i/30i/50i/59.94i/60i/Auto-follows the input)
Data Table Standard	Programming of the standard of the TS tables (DVB/ATSC)
Data Table Mode	Programming of the TS table transfer into the output transport stream (Disable/Pass-Through/Generate)
Closed Caption Decoder	Activation <input type="button" value="Enable"/> /Deactivation <input type="button" value="Disable"/> Closed Caption
Encoder	Selection of the used engine (Intel GPU/CPU) <i>Recommendation: Intel GPU</i>
Audio Codec 1-4	Selection of the used engine (Intel GPU/CPU) <i>Recommendation: Intel GPU</i>
Audio Bitrate 1-4	Programming of the audio codec for audio channel 1-4 of the output transport stream (Pass-Through/AAC-Main/AAV-LC/MPEG-1/L2)
Audio Channels 1-4	Programming of the audio bit rate for audio channel 1-4 of the output transport stream (0...384 kbps)
Audio Sample Rate 1-4	Setting of the sound mode for audio channel 1-4 of the output transport stream (mono/stereo/dual mono)
Audio Selection 1-4	Programming of the sample rate for audio channel 1-4 of the output transport stream (44.1 kHz/48 kHz)
Audio Loudness	Selection of the desired audio PID from the drop-down list
Subtitle Codec 1-4	Adjustment of the audio volume
Subtitle Input ID 1-4	Activation of subtitles (None/Pass-Through)
	Selection of the desired subtitle PID from the drop-down list

## 1 Advanced Settings

After pressing the button “**Advanced Settings**“ the displayed parameters can be preselected.

The screenshot shows the 'Advanced Setting' dropdown menu open, displaying three sections: Video Parameter, Audio Parameter, and Subtitle Parameter. Each section contains several checkboxes for various configuration options. At the bottom right of the form is a blue 'Apply' button.

After pressing the button “**Apply**” all settings will be accepted.

In the menu “**System**“ the following common system adjustments can be done:

- |                           |  |
|---------------------------|--|
| → Network                 | (Setting of the interface parameters)  |
| → VLAN                    | (Activation of VLANs)  |
| → Firmware Version Update | (Update of the module)   |
| → Software License        | (Saving and Loading the license files)   |
| → System Resource         | (Display of the used system resources)   |
| → Profile                 | (Backup and Loading of configurations)   |
| → SNMP                    | (Possibility of MIB export)  |
| → System Restart          | (Reboot = restart of the basic device<br>Reset to Defaults = load of the factory settings) |
| → Logs                    | (Display and backup of Log data)   |

## ➤ Network and VLAN

The screenshot shows the 'Network' configuration page. On the left, there's a 'Module List' with items 1 MPM 8500, 2 MPM 1333 (highlighted with a red box), 3 MPM 4502, and 6 MPM 16010. The main area has tabs for 'Network' and 'VLAN'. Under 'Network', there's a table with columns: Network, IP Address, Subnet Mask, Default Gateway, Primary DNS, Secondary DNS, MAC Address, and Link Status. The table shows three entries: Data 1 (Eih 0) with IP 10.200.1.154, Data 2 (Eih 1) with IP 192.168.2.12, and Internal (Eih 2) with IP 10.184.83.12. The 'Link Status' column shows red dots for Data 1 and Data 2, and a green dot for Internal. At the bottom right of the network table is a blue 'Apply' button (highlighted with a red box). Under 'VLAN', there's a table with columns: Network, VLAN ID, VLAN IP, and Operation. The 'Operation' column has 'Save' and 'Delete' buttons, with 'Delete' highlighted with a red box.

### Network

The MPM 1333 has two external data ports and an internal port, which can be used as IP input/output. The link status shows whether a connection to the data port has been established (green = active connection / red = no connection).

### VLAN

The MPM 1333 offer the option of setting VLANs for the interfaces. To set up a VLAN, the button **+ VLAN** must be pressed. The input mask then expands and the VLAN can be set. The data is saved using “**Save**” and the VLAN is deleted from the list using “**Delete**”.

The screenshot shows the 'VLAN' configuration page. It has a table with columns: Network, VLAN ID, VLAN IP, and Operation. The 'Operation' column has 'Save' and 'Delete' buttons, both highlighted with red boxes. The 'Network' dropdown is set to 'Data 1', 'VLAN ID' is '1', and 'VLAN IP' is '192.168.1.1'.

- |         |   |
|---------|---|
| Network | Selection of the desired interface (NIC)<br>(Data1/Data2/Internal)  |
| VLAN ID | Setting of the VLAN tag, to be assigned to outgoing streams and filtered for incoming streams<br>(1...4094) |
| VLAN IP | Setting of the VLAN IP address<br>(fix IP address according to the network requirements)                    |

## ➤ Firmware Version Update and Software License

Jan. 16th, 2024 13:38:17

Module List

- 1 MPM 6500
- 2 MPM 1333**
- 3 MPM 4502
- 6 MPM 16010

Firmware Version Update

Upgrade

Software License

Product ID: 93eee42e49abbd5a25016cd96081d7e4e

Import License

Export License

Browse Upload Export

### Firmware Version Update

The MPM 1333 can be updated via web browser. If an update is required, please contact our service via [info@polytron.de](mailto:info@polytron.de).

### Software License

If a renewal or reactivation of the software licenses is required, please export the current license file and send it to [info@polytron.de](mailto:info@polytron.de). Each MPM 1333 module has its product identifier and the license files can only be assigned to one specific module.

## ➤ System Resource

The overview shows the current utilization of the CPU, the memory and the GPU. These depend on the number of channels to be transcoded and the transcoding parameters.

Jan. 16th, 2024 13:41:17

Module List

- 1 MPM 6500
- 2 MPM 1333**
- 3 MPM 4502
- 6 MPM 16010

System Resource

CPU	33%
GPU	55%
Memory	43.3%

## ➤ Profile

The MPM 1333 is able to save all configurations in multiple profiles. Profiles can be saved locally or externally for use on other MPM 1333 modules or to create a backup for the current module.

Jan. 16th, 2024 13:53:21

Module List

- 1 MPM 6500
- 2 MPM 1333**
- 3 MPM 4502
- 6 MPM 16010

Profile

Profile Name	Date	Operation
2024_01_16_20_54_12.sys.img	2024-01-16 20:54:12	Apply Download Delete

Import Profile Backup Profile

**Backup Profile** Creation of a new profile from the current parameters in the profile list

**Import Profile** Import of a profile from the PC into the profile list

**Apply** Confirm of a profile of the profilelist

**Download** Download of a profile of the profilelist to the PC

**Delete** Delete of a profile from the profilelist

## ➤ SNMP, System Restart and Logs

The screenshot shows the POLYTRON MPX 106 D web interface. In the top right corner, it says "Jan. 16th, 2024 15:04:30". The left sidebar lists modules: MPM 8500, MPM 1333 (highlighted with a red box), MPM 4502, and MPM 16010. The main content area has three tabs: "SNMP", "System Restart", and "Logs".

- SNMP:** A form with fields for "Read-Only Community" (public), "Password" (default), "IP", "Read-Write Community" (private), and "IP" (default). A red box highlights the "Apply" button.
- System Restart:** Two buttons: "Reboot" and "Reset to Defaults", both highlighted with red circles.
- Logs:** A scrollable list of log entries from January 16, 2024. Each entry includes a timestamp, alarm ID, type, and description. For example:
  - 2024-01-16 18:30:46 [Alarm] Description\_Channel[16] Source recovered
  - 2024-01-16 18:30:57 [Alarm] ID:00040003, Description\_Stop\_Channel[16] The encoding channel is stopped, Solution:Notice
  - 2024-01-16 18:33:59 [Alarm] ID:00030002, Description\_Channel[16] Source The input signal is lost, Solution:Check the input signal
  - 2024-01-16 18:33:59 [Alarm] ID:00030002, Description\_Channel[16] Source recovered
  - 2024-01-16 18:37:12 [Alarm] ID:00030002, Description\_Channel[16] Source The input signal is lost, Solution:Check the input signal
  - 2024-01-16 18:37:12 [Alarm] ID:00030002, Description\_Channel[16] The encoding channel is stopped, Solution:Notice
  - 2024-01-16 18:37:12 [Alarm] ID:00030002, Description\_Channel[16] Source recovered
  - 2024-01-16 18:40:25 [Alarm] ID:00030002, Description\_Channel[16] Source The input signal is lost, Solution:Check the input signal
  - 2024-01-16 18:40:25 [Alarm] ID:00030002, Description\_Channel[16] The encoding channel is stopped, Solution:Notice
  - 2024-01-16 18:43:39 [Alarm] ID:00030002, Description\_Channel[16] Source The input signal is lost, Solution:Check the input signal
  - 2024-01-16 18:43:39 [Alarm] ID:00030002, Description\_Channel[16] The encoding channel is stopped, Solution:Notice
  - 2024-01-16 18:46:49 [Alarm] ID:00030002, Description\_Channel[16] Source The input signal is lost, Solution:Check the input signal
  - 2024-01-16 18:46:49 [Alarm] ID:00030002, Description\_Channel[16] The encoding channel is stopped, Solution:Notice
  - 2024-01-16 18:50:01 [Alarm] ID:00040003, Description\_Stop\_Channel[16] The encoding channel is stopped, Solution:Notice
  - 2024-01-16 18:50:03 [Alarm] ID:00030002, Description\_Channel[16] Source The input signal is lost, Solution:Check the input signal
  - 2024-01-16 18:50:03 [Alarm] ID:00040003, Description\_Stop\_Channel[16] The encoding channel is stopped, Solution:Notice
  - 2024-01-16 18:53:14 [Alarm] ID:00030002, Description\_Channel[16] Source The input signal is lost, Solution:Check the input signal
  - 2024-01-16 18:53:14 [Alarm] ID:00040003, Description\_Stop\_Channel[16] The encoding channel is stopped, Solution:Notice
  - 2024-01-16 18:53:16 [Alarm] ID:00030002, Description\_Channel[16] Source recovered
  - 2024-01-16 18:53:16 [Alarm] ID:00040003, Description\_Stop\_Channel[16] The encoding channel is stopped, Solution:Notice
  - 2024-01-16 18:56:27 [Alarm] ID:00030002, Description\_Channel[16] Source The input signal is lost, Solution:Check the input signal
  - 2024-01-16 18:56:27 [Alarm] ID:00040003, Description\_Stop\_Channel[16] The encoding channel is stopped, Solution:Notice
  - 2024-01-16 18:58:29 [Alarm] ID:00030002, Description\_Channel[16] Source recovered
  - 2024-01-16 18:58:29 [Alarm] ID:00040003, Description\_Stop\_Channel[16] The encoding channel is stopped, Solution:Notice
  - 2024-01-16 18:59:42 [Alarm] ID:00030002, Description\_Channel[16] Source The input signal is lost, Solution:Check the input signal

At the bottom of the logs section are buttons: "Clear Log", "Export Log", and "Export System Log".

### SNMP

The MPM 1333 can be managed via SNMP MIB file. All settings must be confirmed with “Apply”.

### System Restart

Via the “Reboot” button the MPM 1333 can be restarted. The button “Reset to Defaults” resets the module to the factory settings.

### Logs

All log data are displayed in this area. The logs can be deleted (Clear Log) and exported.

The menu “**Alarm**” is used to display alarm messages.

The screenshot shows the POLYTRON MPX 106 D web interface. In the top right corner, it says "Jan. 16th, 2024 15:25:06". The left sidebar lists modules: MPM 8500, MPM 1333 (highlighted with a red box), MPM 4502, and MPM 16010. The main content area shows a table for the MPM 1333 module.

NO.	Location	Alarm Type	Last Changed	Notification	Operation
1	Data 1	The management Data is down	2024/01/09 15:09:45	Check the network connection	<input type="button" value="Ignore"/>
2	Data 2	The ethernet is not connected to any IP networks	2024/01/09 15:09:45	Check the Data cable connection	<input type="button" value="Ignore"/>

At the bottom left is a blue button labeled "Ignore" with the text "Ignore displayed alarm".

The menu “**About**” is used to display the software and hardware versions of the module.

The screenshot shows the POLYTRON MPX 106 D web interface. In the top right corner, it says "Jan. 16th, 2024 15:31:58". The left sidebar lists modules: MPM 8500, MPM 1333 (highlighted with a red box), MPM 4502, and MPM 16010. The main content area shows a table for the MPM 1333 module under the "About" tab.

Information	
Product ID:	93eee42e49abd5a25016cd96081d7e4e
Firmware Name:	release
Firmware Version:	1.6.0
Hardware Version:	1.0.0.0
Build Version:	10709
Release Date:	2023-10-21 22:45:17
Hardware Fingerprint:	4c30d6e39fcda3ec2b10a1c0ea21d7f

## 8.8 Programming of the HDMI encoder module MPM 4230 (Single slot module)

The MPM 4230 is a 4 channel HDMI encoder module with four HDMI 1.4 inputs. The module supports H.264 AVC and H.265 HEVC video formats.

After clicking on the module in the module list, you will be redirected to the programming interface of the selected module. In this menu the system-specific parameters of the MPM 4230 can be set. By selecting the menu “Basic Setting”, “Insertion”, “Output” and “System” these settings can be made according to the application.

In the menu “**Status**“ the lock status, the video resolution at the input and output as well as the data rate of the transport stream are displayed.

The screenshot shows the software interface for the POLYTRON MPX 106 D. On the left, there's a sidebar with a tree view showing three modules: MPM 6500, MPM 4230, and MPM 2331. The MPM 4230 node is expanded, and its sub-node 'MPM 4230' is highlighted with a red box. The main panel displays a table for the MPM 4230 module. The table has columns for Program (1 to 4), Signal (checkmark for 1, crossed for others), HDCP Encryption (Unencrypted for all), Input Video Resolution (1080x720, 50p for all), Output Video Resolution (No\_Video for all), Total Bitrate(Mbps) (10.506 for all), Effective Bitrate(Mbps) (0.000 for all), TS Analysis (button with '1'), and Program Name (button with 'Program-01'). A red box highlights the 'Status' button in the top right of the main panel. Below the table, there's a note 'HDCP Unauthorized'.

### 1 TS Analysis

After pressing the button “**Reset Counter**“ the record of the continuity count errors restarts.

In the search field a specific search based on topics such as PID, service, type etc. can be done.

The screenshot shows the 'TS Analysis' search interface. It includes a search bar with a 'Search' field and a 'Reset Counter' button. Below the search bar is a table with columns: PID, Bitrate(Mbps), Bandwidth(%), Continuity Count Error, Type, and Service. The table contains five rows of data. A red box highlights the 'Reset Counter' button.

PID	Bitrate(Mbps)	Bandwidth(%)	Continuity Count Error	Type	Service
0x0(0)	0.015	0.143	0	PAT	
0x64(100)	0.015	0.143	0	PMT	Program-01
0x65(101)	0.075	0.713	0	PCR	Program-01
0x66(102)	10.219	97.166	0	Video	Program-01
0x67(103)	0.189	1.797	0	Audio	Program-01

### 2 Program Name

After clicking on the corresponding program name **Program-01** ⓘ all service information will be displayed.

The screenshot shows a dialog box titled 'Program-01'. Inside, there's a table with columns: Type, PID, and Bitrate(Mbps). The table contains four rows of data. A red box highlights the 'Program-01' label above the table. A red arrow points from the 'Program-01' label in the previous screenshot to this dialog box. A 'Close' button is at the bottom right of the dialog.

Type	PID	Bitrate(Mbps)
PCR	101(0x65)	0.074
PMT	100(0x64)	0.015
StreamType:27-Video(H264)	102(0x66)	10.235
StreamType:3-Audio	103(0x67)	0.176

In the menu “**Basic Setting**“ the parameters of the encoded programmes can be set. The specific video and audio parameters as well as services parameters can be selected and changed using the “Advanced Setting” button.

Status | Input | Output | System Setting | admin...
Status Basic Setting Insertion Output System

Apply

Status | Input | Output | System Setting | admin...
Status Basic Setting Insertion Output System


Apply

Name	Value	Name	Value
<b>Video Encoder Details</b>			
<b>Video Type</b>	H.264, H.265	<b>Video PID</b>	32~8190
<b>Video Bitrate (Kbps)</b>	600~12000	<b>PCR PID</b>	32~8190
<b>GOP Size</b>	1~60	<b>PMT PID</b>	32~8190
<b>Video Resolution</b>	Auto, Manual <b>Horizontal Pixels:</b> 160~1920, <b>Vertical Pixels:</b> 120~1080, <b>Framerate:</b> 24~60, <b>Scan Type:</b> Progressive	<b>Program Name</b>	Length 1~31
<b>Video Aspect Ratio</b>	Automatic, 16:9 (SD) , 4:3 (SD)		
<b>Profile</b>	MAIN HIGH		
<b>Audio Encoder Details</b>			
<b>Audio Enable</b>	Enable/Disable	<b>Delay (ms)</b>	-2000~2000
<b>Audio Type</b>	MPEG1_Layer2 AAC AC3	<b>Audio PID</b>	32~8190
<b>Audio Bitrate (Kbps)</b>	32~192(MPEG1_Layer2) 32~192(AAC) - <b>Option</b> 96~192 (AC3) - <b>Option</b>		
<b>Volume(dB)</b>	-20~20		
<b>Shelter parameters</b>			
<b>Shelter</b>	Enable/Disable	<b>X</b>	0~1920 (Dual)
<b>Y</b>	0~1080 (Dual)	<b>Width</b>	2~1920 (Dual)
<b>Height</b>	2~1080 (Dual)	<b>Color</b>	White/Black/Blue/Green/Red

After pressing the button “**Apply**” all settings will be accepted.

The “*Insertion*” tab allows the extension of additional information to the video image. Possible additions include a logo, a QR code or text, which is superimposed on the image at the desired position.

### Logo

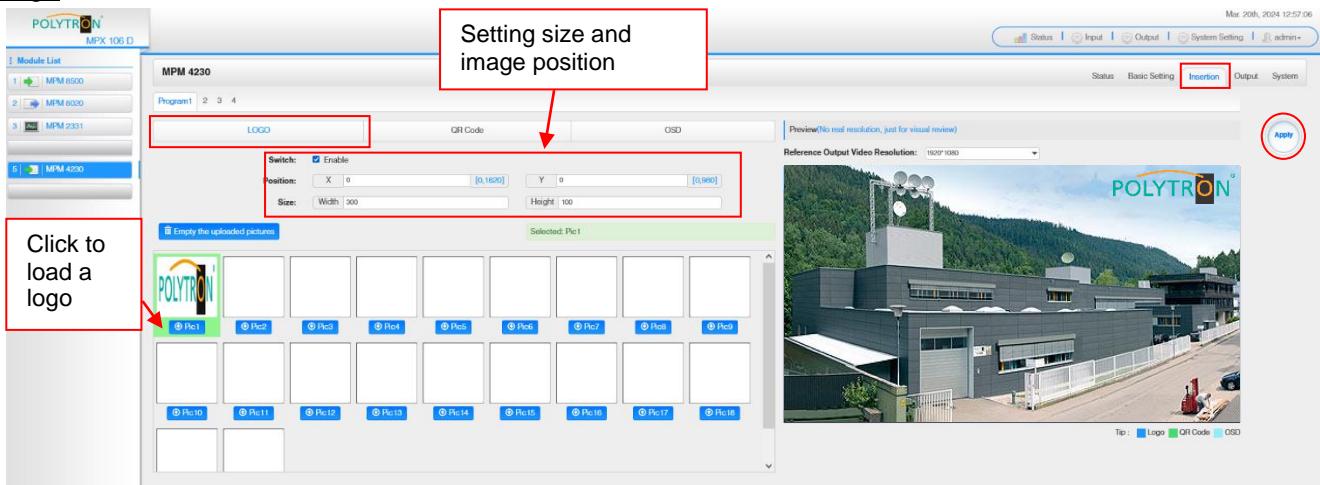


### LOGO Parameter

Position X	Values
0~1920 (Dual)	
Size width	2~1920 (Dual)

### LOGO Parameter

Position Y	Values
0~1080 (Dual)	
Size Height	2~1080 (Dual)

### QR-Code

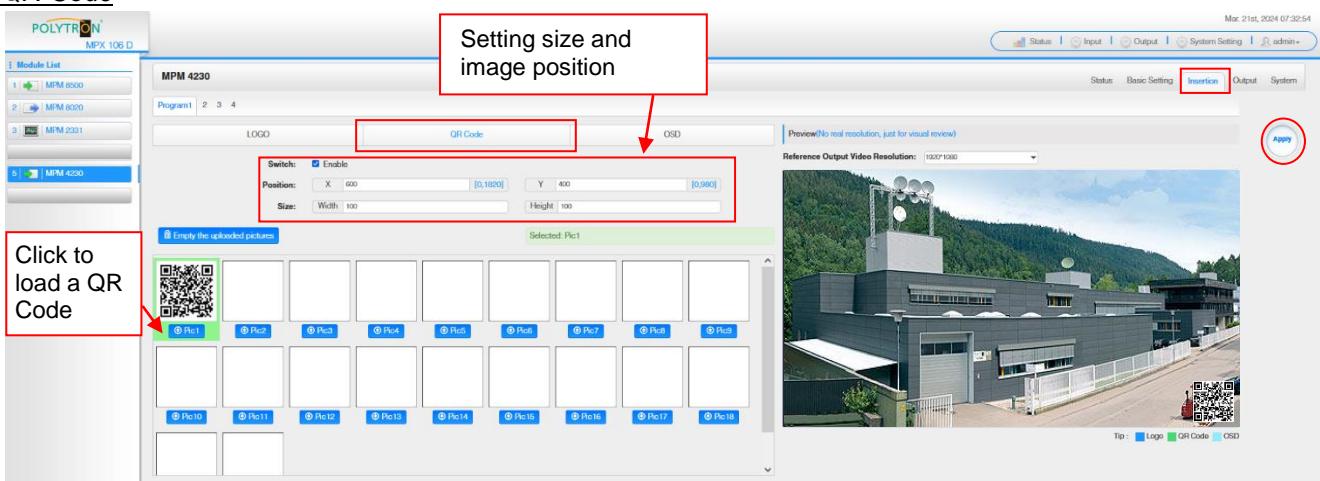


### QR Code Parameter

Position X	Values
0~1920 (Dual)	
Size width	0~1920 (Dual)

### QR Code Parameter

Position Y	Values
0~1080 (Dual)	
Size Height	0~1080 (Dual)

### OSD

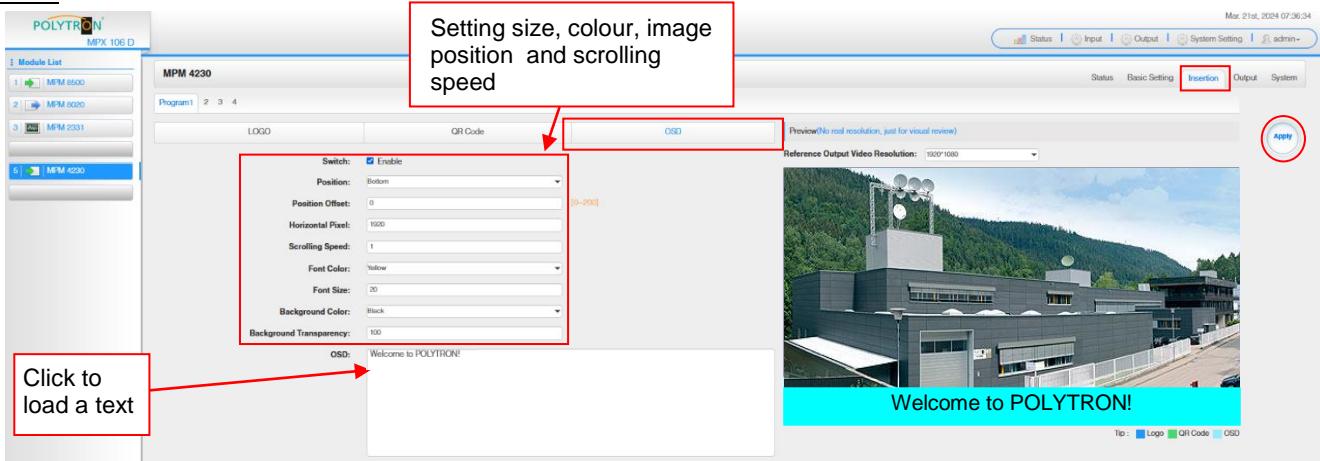


Subtitle Parameter	Values	Subtitle Parameter	Values
<b>Position</b>	Bottom/Top/Middle	<b>Position Offset</b>	-200~200
<b>Horizontal Pixel</b>	10~1920	<b>Scrolling Speed</b>	1~20
<b>Front Color</b>	White/Black/Blue/Green/ Red/Yellow	<b>Front Size</b>	0~100

After pressing the button “**Apply**” all settings will be accepted.

In the menu “**Output**“ the IP parameters for the direct IP output as well as the assignment of the encoded services to an output module or the baseboard can be set.

#### Direct IP Output

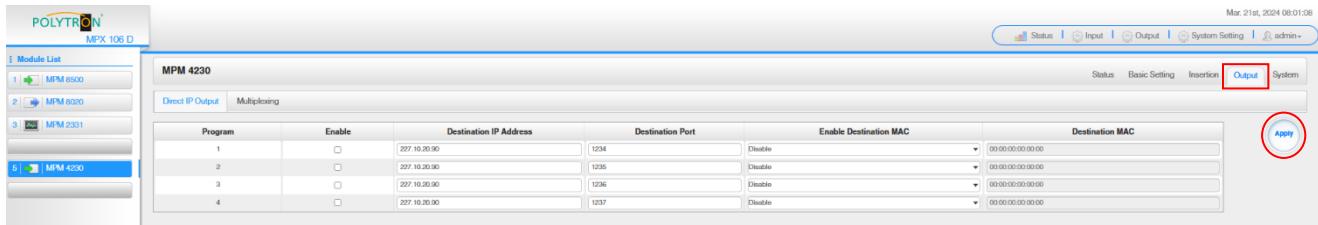

This function is specifically intended for direct IP output. Outputting in this manner does not consume baseboard multicast bandwidth.

#### **Attention!**


When the IP output channel in the encoder module and the baseboard IP output module are used at the same time, multicast IP address conflicts must be avoided. If two identical IP addresses are activated, all multicast videos are affected by interference.

Activate Destination MAC: Generally, this option does not need to be enabled. This is reserved for exceptional cases where the unicast stream cannot be received using unicast IP addresses.

After pressing the button “**Apply**” all settings will be accepted.

#### Multiplexing

The specific assignment of a program to an output module and output transport stream or for routing to the baseboard is done by clicking directly behind the desired program.

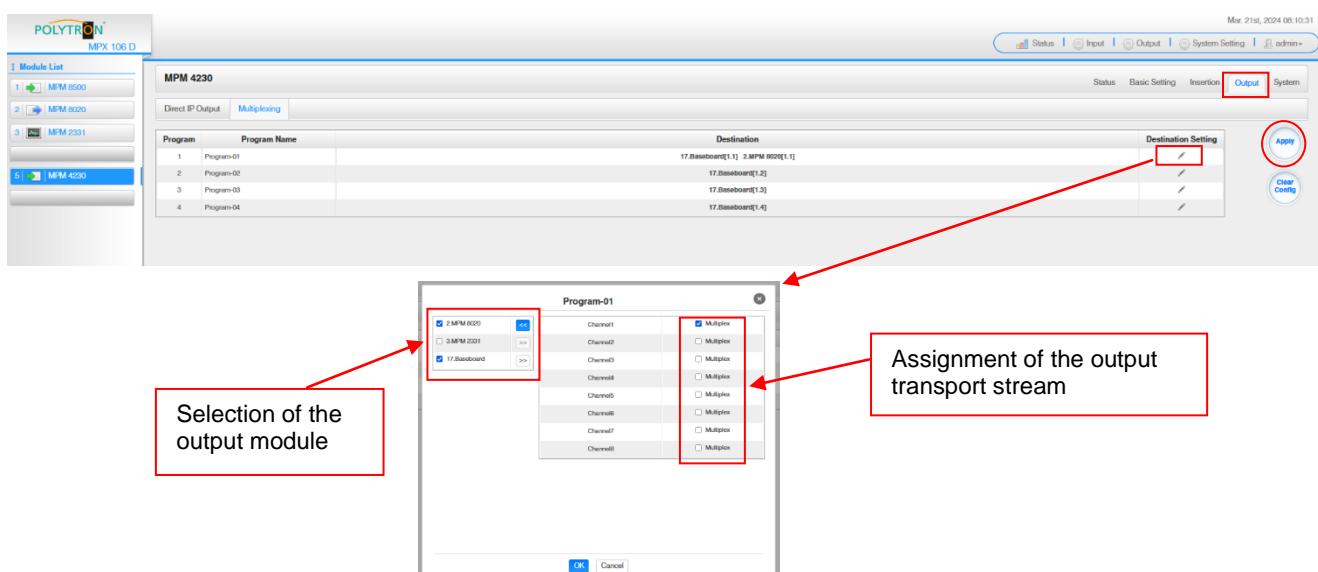


After pressing the button „**OK**“ all settings will be accepted.

After pressing the button “**Apply**” all settings will be accepted.

In the menu “**System**“ the following common system adjustment can be done:

- License (Saving and Loading the license files)
- SNMP MIB (Possibility of MIB export)
- Logs (Display and backup of Log data)
- Others (Reboot = restart of the basic device  
Reset to Defaults = load of the factory settings)

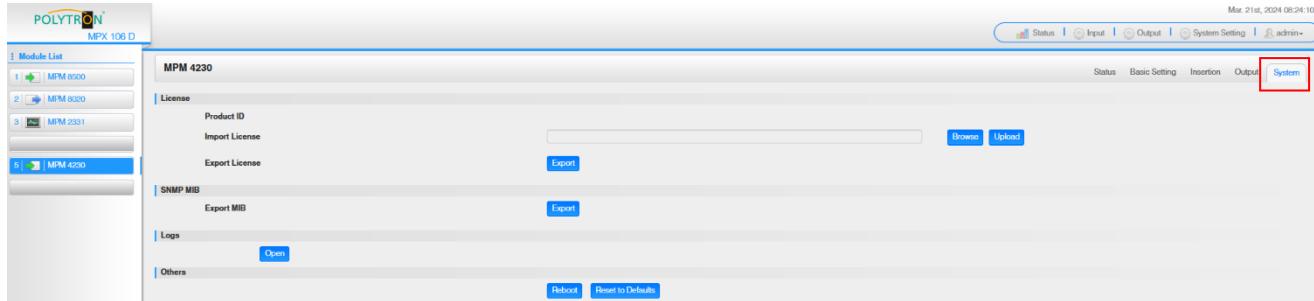

### Basic settings MPM 4230

Module	Video Encoding Format	Video Bitrate	Video Resolution	Audio Encoding Format	Insertion	Destination	Enable	Destination IP	Destination Port	Destination MAC
1/1.1	H.264	8000 kbps	Auto	MPEG1_Layer2	No	Direct IP Output	No	227.10.20.90	1234	Disable
1/1.2	H.264	8000 kbps	Auto	MPEG1_Layer2	No	Direct IP Output	No	227.10.20.90	1235	Disable
1/1.3	H.264	8000 kbps	Auto	MPEG1_Layer2	No	Direct IP Output	No	227.10.20.90	1236	Disable
1/1.4	H.264	8000 kbps	Auto	MPEG1_Layer2	No	Direct IP Output	No	227.10.20.90	1237	Disable

## 8.9 Programming of the CI descrambler module MPM 2331 (Single slot module)

The MPM 2331 is a CI descrambler module with two CI slots for decrypting encrypted programs. The module supports various CAM card decryption systems, whereby the number of programs to be decrypted depends on the CAM and card used.

After clicking on the module in the module list you will be forwarded to the programming interface of the selected module. In this menu the system-specific parameters of the MPM 2331 can be set. By selecting the menu "CI", "Service Configuration" and "System" these settings can be made according to the application.

In the menu „**Status**“ the total and the effective bit rate are displayed. The prerequisite for receiving programs for decryption is that they are routed from the existing program pool. This can be done from the receiver cards or from the IP input.

### ATTENTION

It is important to ensure that all PIDs required for decryption (EMM, ECM, ...) are routed to the descrambling module.

#### 1 TS-Analysis

After pressing the button “**Reset Counter**“ the record of the continuity count errors restarts. This should be pressed every time you change channels to clear expired data in memory.

In the search field a specific search based on topics such as PID, service, type etc. can be done.


#### 2 Service List

After clicking on Service List all channels and the received services will be displayed. After selecting a service all service information will be displayed.

Type	PID	Bitrate(Mbps)
PCR	1920(0x780)	12.928
PMT	107(0x6b)	0.015
StreamType:27-Video(H264)	1920(0x780)	12.928
StreamType:6-Private Data/AC3	1921(0x781)	0.469
StreamType:6-Private Data/AC3	1922(0x782)	0.469
StreamType:6-Private Data/AC3	1925(0x785)	0.301
AIT	7310(0x1c8e)	0.000
PrivateData	7311(0x1c8f)	0.000
ECM	120(0x78)	0.005
ECM	122(0x7a)	0.005
ECM	270(0x10e)	0.009
ECM	272(0x110)	0.005
ECM	320(0x140)	0.012
ECM	461(0x1cd)	0.008
ECM	470(0x1d6)	0.006
ECM	480(0x1e0)	0.006

In the menu „**CI**“ information about the inserted CA modules and cards will be displayed.

If necessary, an automatic reset of the CAMs can be programmed. It is also possible to open the internal CA menu and thus make advanced settings (if this is supported by the CAM).

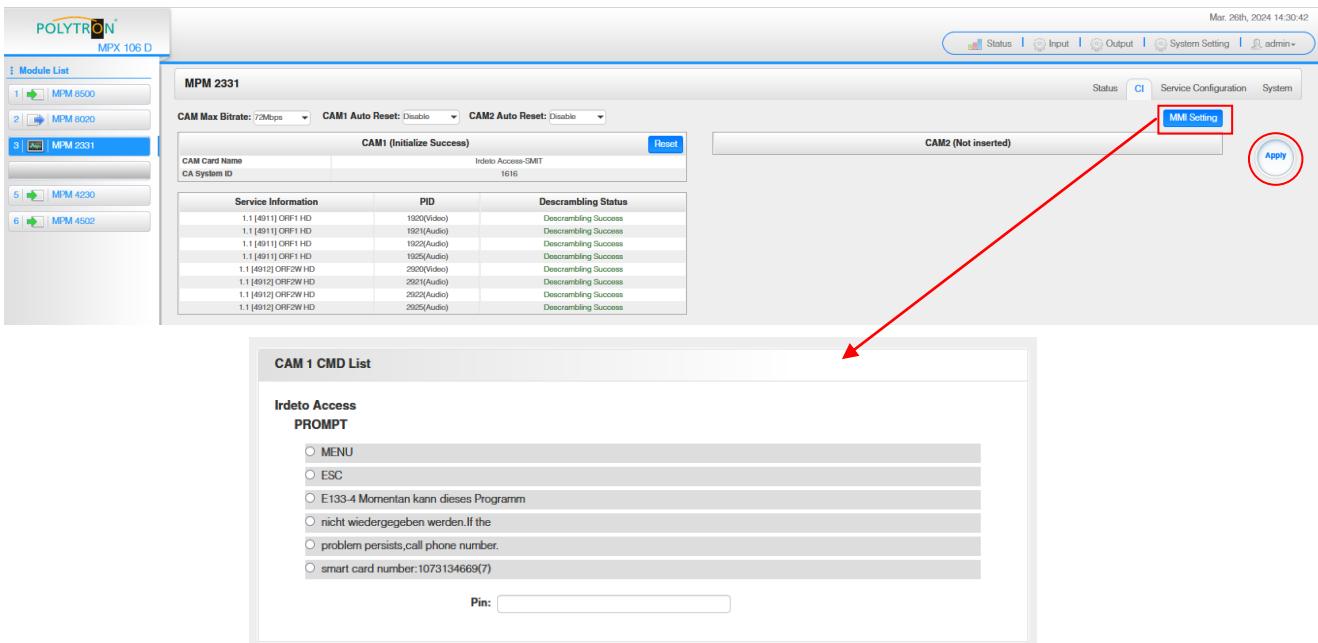


After pressing the button “**Apply**” all settings will be accepted.

In the menu “**Service Configuration**“ the input signals or services can be assigned to an output module and the output transport streams contained therein or to the IP output of the base unit.

After clicking on the desired channel the menu for assigning the channel to an output module and the available multiplexes in this channel will be opened.


The assignment of individual services to an output module and output transport stream is done by clicking directly behind the desired service .

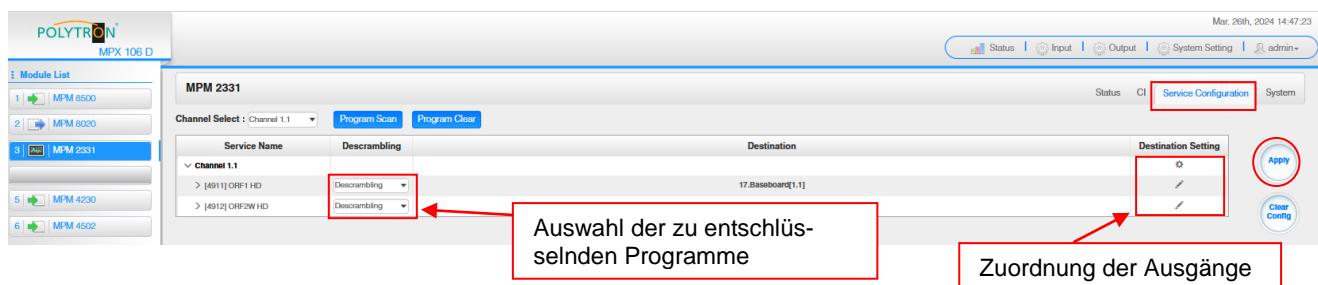

After pressing the button “**Apply**” all settings will be accepted.


The „**Clear Config**“ button is used to delete all settings.

#### Assignment of a channel (fully transport stream)

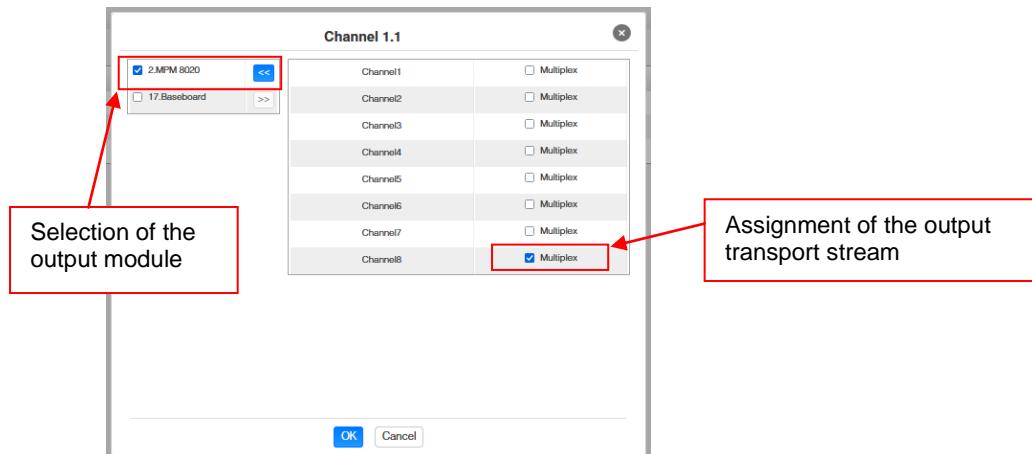

After pressing the button “**OK**” all settings will be accepted.


## Assignment of a service

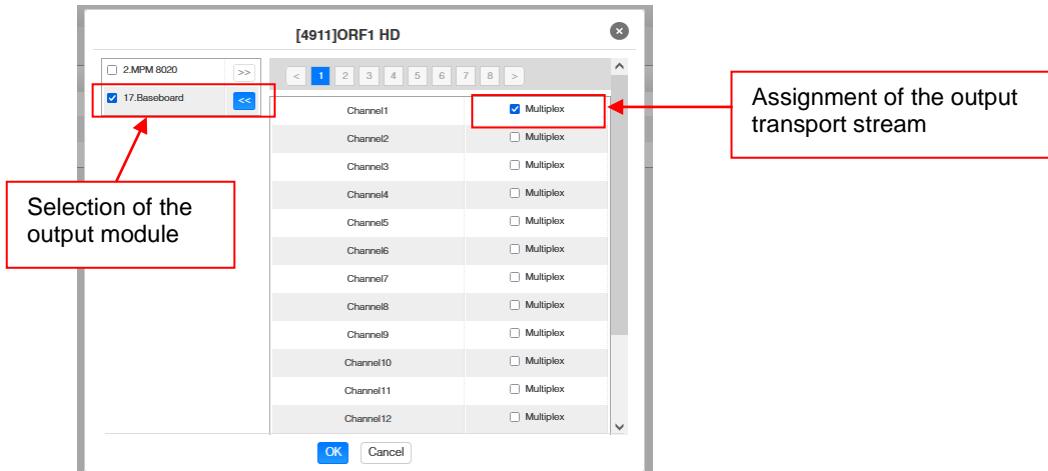

After pressing the button “OK” all settings will be accepted.

In the menu “**System**“ the following common system adjustment can be done:

- Program Auto Scan (Activation of the automatically scan function)
- License (Saving and Loading the license files)
- SNMP MIB (Possibility of MIB export)
- Logs (Display and backup of Log data)
- Others (Reboot = restart of the basic device  
Reset to Defaults = load of the factory settings)

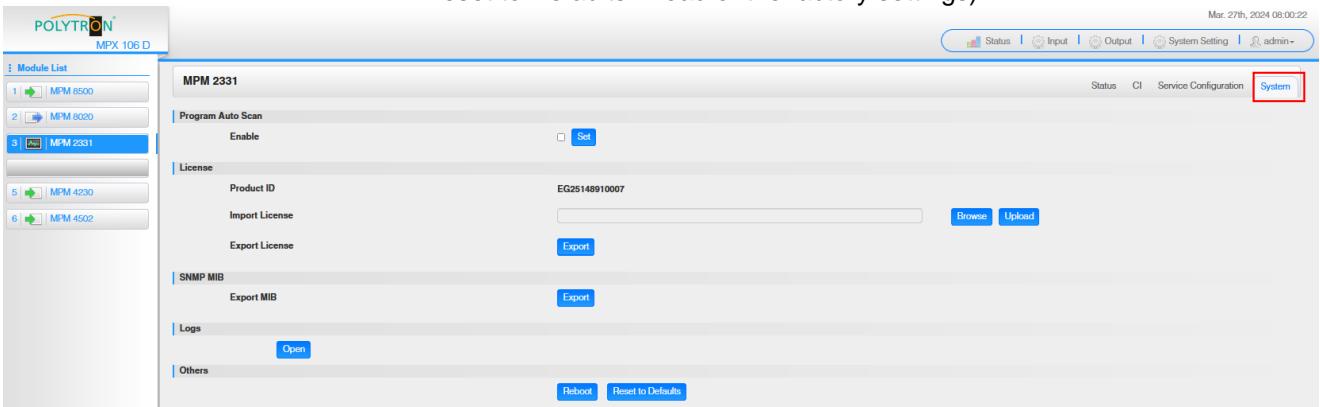

The screenshot shows the 'System' tab of the MPX 106 D configuration interface. The left sidebar shows a 'Module List' with 'MPM 2331' selected. The main area displays settings for 'MPM 2331': 'Program Auto Scan' (Enable checkbox), 'License' (Product ID: EG25148910007, Import License input field, Export License button, Browse and Upload buttons), 'SNMP MIB' (Export MIB button), 'Logs' (Open button), and 'Others' (Reboot and Reset to Defaults buttons). The top right shows a navigation bar with 'Status', 'CI', 'Service Configuration', and a 'System' tab which is highlighted with a red box. The date 'Mar. 27th, 2024 08:00:22' is also visible.

## Factory settings MPM 2331

The module does not have any pre-configurations in its factory settings, as routing from or to the basic device or an input/output card is necessary. Therefore, for commissioning, the routing parameters and the selection of the programs to be decrypted must first be made.

## 9. Technische Daten / Technical data

### MPX 106 D (Chassis)

Typ / Type	MPX 106 D
Artikel-Nr. / Article no.	5530001
<b>Chassis</b>	
Steckplätze / Slots	6
Netzteil-Redundanz / Power supply redundancy	ja / yes
Multiplexing	ja / yes (auf Serviceebene / on Service-level)
Stream Port	4 Gbit RJ45
	MPEG-TS over UDP/RTP multicast/unicast SPTS/MPTS
	max. 120 Eingänge und Ausgänge / max. 120 inputs and outputs
Betriebsparameter / Operating parameters	
Stromversorgung / Power supply	100...240 V <sub>AC</sub>
Leistungsaufnahme / Power consumption	120 W
Betriebstemperatur / Operating Temperature	0...50 °C
Relative Luftfeuchte / Operating humidity	<95 %
Abmessungen (BxHxT) / Dimensions (WxHxD)	482.6 x 44.5 x 435 mm
Platzbedarf / Space	19"/ 1HE

### MPX 106 D pro (Chassis)

Typ / Type	MPX 106 D pro
Artikel-Nr. / Article no.	5530002
<b>Chassis</b>	
Steckplätze / Slots	6
Netzteil-Redundanz / Power supply redundancy	ja / yes
Multiplexing	ja / yes (auf Serviceebene / on Service-level)
Stream Port	4 Gbit RJ45, 2x SFP Ports
	MPEG-TS over UDP/RTP multicast/unicast SPTS/MPTS
	max. 120 Eingänge und Ausgänge / max. 120 inputs and outputs
Betriebsparameter / Operating parameters	
Stromversorgung / Power supply	100...240 V <sub>AC</sub>
Leistungsaufnahme / Power consumption	400 W
Betriebstemperatur / Operating Temperature	0...50 °C
Relative Luftfeuchte / Operating humidity	<95 %
Abmessungen (BxHxT) / Dimensions (WxHxD)	482.6 x 44.5 x 435 mm
Platzbedarf / Space	19"/ 1HE

### MPM 8500 (DVB-S/S2 FTA Receivermodul / Receiver module)

Typ / Type	MPM 8500	
Artikel-Nr. / Article no.	5530010	
<b>Eingang / Input</b>		
Tuner	8 (C/KU-Band)	
Frequenzbereich / Frequency range	950 ... 2150 MHz	
Eingangsspegel / Input level	-68 ... -20 dBm (40 ... 89 dB <sub>μ</sub> V)	
Modulation	DVB-S	DVB-S2
Konstellation / Constellation	QPSK, 8PSK	QPSK, 8PSK, 16APSK
Symbolrate / Symbol rate	1 ... 45 MSps	1 ... 45 MSps
FEC	1/2, 2/3, 3/4, 5/6, 7/8	1/2, 2/3, 3/4, 3/5, 4/5, 5/6, 8/9, 9/10
Roll-off Faktor / Roll-off factor	0.15, 0.20, 0.25, 0.35	
<b>LNB</b>		
LNB-Versorgung / LNB power	unabhängig je LNB / independent for each LNB	
LNB-Schaltkriterien / LNB switching commands	13/18 V, 0/22 kHz, DiSEqC 1.0/DiSEqC 1.1	
LNB-Strom / LNB current	max. 400 mA	
<b>Betriebsparameter / Operating parameters</b>		
Leistungsaufnahme / Power consumption	70 W worst case/ 40 W (German standard application)	
Platzbedarf / Space	Doppelslot / Double slot	

**MPM 4502 (DVB-S/S2 CI Receivermodul / Receiver module)**

Typ / Type	MPM 4502	
Artikel-Nr. / Article no.	55300111	
Eingang / Input		
Tuner	4 (C/KU-Band) via 2 Eingänge / 2 inputs	
Frequenzbereich / Frequency range	950 ... 2150 MHz	
Eingangsspegel / Input level	-70 ... -20 dBm (39 ... 89 dB $\mu$ V)	
Modulation	DVB-S	DVB-S2
Konstellation / Constellation	QPSK, 8PSK	QPSK, 8PSK, 16APSK
Symbolrate / Symbol rate	1 ... 45 MSps	1 ... 45 MSps
FEC	1/2, 2/3, 3/4, 5/6, 7/8	1/2, 2/3, 3/4, 3/5, 4/5, 5/6, 8/9, 9/10
Roll-off Faktor / Roll-off factor	0.15, 0.20, 0.25, 0.35	
CI	2x PCMCIA CI Slot	
CAM*	CAMs können verschieden sein / CAMs could be different	
LNB		
LNB-Versorgung / LNB power	unabhängig je LNB / independent for each LNB	
LNB-Schaltkriterien / LNB switching commands	13/18 V, 0/22 kHz, DiSEqC 1.0/DiSEqC 1.1	
LNB-Strom / LNB current	max. 400 mA	
Betriebsparameter / Operating parameters		
Leistungsaufnahme / Power consumption	22 W	
Platzbedarf / Space	Einzelslot / Single slot	

\* Anzahl der entschlüsselbaren Programme ist von der Kapazität des CAMs abhängig/

Descrambled channel quantity depends on CAM capability

**MPM 4702 (DVB-C CI Receivermodul / Receiver module)**

Typ / Type	MPM 4702	
Artikel-Nr. / Article no.	55300112	
Eingang / Input		
Tuner	4 (RF) via 1 Eingang / 1 input	
Frequenzbereich / Frequency range	47 ... 862 MHz	
Eingangsspegel / Input level	-69 ... -29 dBm (40 ... 80 dB $\mu$ V)	
Modulation	DVB-C (Annex A/C)	
Konstellation / Constellation	16QAM, 32QAM, 64QAM, 128QAM, 256QAM	
Symbolrate / Symbol rate	3.6 ... 6.952 MSps	
CI	2x PCMCIA CI Slot	
CAM*	CAMs können verschieden sein / CAMs could be different	
Betriebsparameter / Operating parameters		
Leistungsaufnahme / Power consumption	9 W	
Platzbedarf / Space	Einzelslot / Single slot	

\* Anzahl der entschlüsselbaren Programme ist von der Kapazität des CAMs abhängig/

Descrambled channel quantity depends on CAM capability

**MPM 4802 (DVB-T/-T2 CI Receivermodul / Receiver module)**

Typ / Type	MPM 4802	
Artikel-Nr. / Article no.	55300113	
Eingang / Input		
Tuner	4 (RF) via 1 Eingang / 1 input	
Frequenzbereich / Frequency range	47 ... 862 MHz	
Eingangsspegel / Input level	6, 7, 8 MHz	
Modulation	-80 ... -20 dBm (29 ... 89 dB $\mu$ V)	
Konstellation / Constellation	DVB-T: QPSK, 16QAM, 64QAM DVB-T2: QPSK, 16QAM, 64QAM, 256QAM	
Guard-Intervall / Guard interval	DVB-T: 1/4, 1/8, 1/16, 1/32 DVB-T2: 1/4, 1/8, 1/16, 1/32, 1/64, 1/128	
FFT	DVB-T: 2K, 8K DVB-T2: 8K, 16K, 32K	
CI	2x PCMCIA CI Slot	
CAM*	CAMs können verschieden sein / CAMs could be different	
Betriebsparameter / Operating parameters		
Leistungsaufnahme / Power consumption	8 W	
Platzbedarf / Space	Einzelslot / Single slot	

\* Anzahl der entschlüsselbaren Programme ist von der Kapazität des CAMs abhängig/

Descrambled channel quantity depends on CAM capability

**MPM 16010 (DVB-C Modulatormodul / Modulator module)**

Typ / Type	<b>MPM 16010</b>
Artikel-Nr. / Article no.	5530020
Ausgang / Output	16 agile Frequenzen / agile frequencies
Konnektor / Connector	F-Buchse / F female
Frequenzbereich / Frequency range	47 ... 862 MHz
Ausgangspegel / Output level	15 ... 45 dBmV (75 ... 105 dB $\mu$ V)
Modulation	DVB-C
Konstellation / Constellation	16 QAM, 32 QAM, 64 QAM, 128 QAM, 256 QAM
Symbolrate / Symbol rate	3.6 ... 6.9 MSps
MER	>40 dB
Betriebsparameter / Operating parameters	
Leistungsaufnahme / Power consumption	max. 21 W
Platzbedarf / Space	Einzelslot / Single slot

**MPM 8020 (DVB-T Modulatormodul / Modulator module)**

Typ / Type	<b>MPM 8020</b>
Artikel-Nr. / Article no.	5530025
Ausgang / Output	8 agile Frequenzen / 8 agile frequencies
Konnektor / Connector	F-Buchse / F female
Frequenzbereich / Frequency range	47 ... 862 MHz
Ausgangspegel / Output level	15 ... 45 dBmV (75 ... 105 dB $\mu$ V)
Standard	ETSI EN 300744
Konstellation / Constellation	QPSK, 16 QAM, 64 QAM
Guard Intervall / Guard Interval	1/4, 1/8, 1/16, 1/32
FFT	2K
Coderate / Code rate	1/2, 2/3, 3/4, 5/6, 7/8
MER	>32 dB
Betriebsparameter / Operating parameters	
Leistungsaufnahme / Power consumption	max. 23 W
Platzbedarf / Space	Einzelslot / Single slot

**MPM 1333 (Transcoder-Modul / Transcoder module)**

Typ / Type	<b>MPM 1333</b>
Artikel-Nr. / Article no.	5530035
Video-Decodierung / Video decoding	
Format	MPEG-2, H.264, H.265
Auflösung / Resolution	576i25, 480i29.97, 720p50/60, 1080i25/29.97/30, 1080p25/30/50/59.94/60
Bitrate / Bit rate	1...40 Mb/s
Protokoll / Protocol	UDP, RTP, Unicast, Multicast
Video-Encodierung / Video encoding	
Format	MPEG-2, H.264, H.265
Auflösung / Resolution	576i25, 480i29.97, 720p50/60, 1080i25/29.97/30, 1080p25/30/50/59.94/60
Bitrate / Bit rate	1...20 Mb/s
Protokoll / Protocol	UDP, RTP, Unicast, Multicast
Audio-Parameter / Audio parameters	
Eingangs-Format / Input format	MPEG-1/L2, AAC, AC3
Ausgangs-Format / Output format	MPEG-1/L2, AAC, AC3
Processing	Bis zu 4 Audio-Paare / up to 4 audio pairs
Allgemein / Common	
Downscale	HD zu SD Video / HD to SD video
Closed Caption	CEA/EIA-708 closed caption
Untertitel / Subtitle	DVB-Untertitel / DVB subtitle
Anschlüsse / Connectors	
Netzwerk / Network	2x RJ45-Ports, 100/1000 Mbit/s / 2x RJ45 ports, 100/1000 Mbit/s
Debugging	1x HDMI, 2x USB
Betriebsparameter / Operating parameters	
Leistungsaufnahme / Power consumption	max. 48 W
Platzbedarf / Space	Einzelslot / Single slot

**MPM 4230 (HDMI Encodermodul / encoder module)**

Typ / Type	<b>MPM 4230</b>
Artikel-Nr. / Article no.	5530030
Eingang / Input	4x HDMI (HDMI 1.4 Buchse/female)
Video Format	H.264/AVC MP/HP@4.1 (1080P) H.264/AVC MP/HP3.1 (720P) H.265/HEVC MP@L4.1 (1080P) H.265/HEVC MP@L3.1 (720P)
Auflösung / Resolution	HD: 1080p-29.97/30/50/59.94/60, 1080i-29.97/30/50/59.94/60, 720p-50/59.94/60 SD: 576i50, 576p50, 480i-59.94/60 Ausgang unterstützt nur Progressiv / Output supports progressive only
Bitrate	600...10000 kbps (CBR)
GOP-Struktur / GOP structure	IPPP
GOP-Größe / GOP size	1...60
Seitenverhältnis / Aspect ratio	Automatic, 16:9 (SD), 4:3 (SD)
Audio	MPEG-1 Layer 2, AC 3 (Option), AAC (Option)
Bitrate	32...192 kbps
Mode	Stereo 2.0
Abtastrate / Sampling rate	48 kHz
Lautstärke-Einstellung / Volume leveling	-20...20 dB
OSD	Logo, QR-Code, Text
Betriebsparameter / Operating parameters	
Leistungsaufnahme / Power consumption	19 W
Platzbedarf / Space	Einzelslot / Single slot

**MPM 2231 (CI-Descrambler-Modul / descrambler module)**

Typ / Type	<b>MPM 2331</b>
Artikel-Nr. / Article no.	5530040
Interface	2x PCMCIA CI slots
Standard	EN 50221
CAM-Entschlüsselung / CAM descrambling	Unterstützt Mainstream-CAS; Anzahl der entschlüsselten Kanäle ist von CAM und Karte abhängig, 2 CAMs können unterschiedlich sein / <i>supports mainstream CAS Descrambled channel quantity depends on CAM capability, 2 CAMs could be different</i>
CAM-Verschlüsselung / CAM scrambling	Unterstützt Xcrypt CAMCAS / <i>supports Xcrypt CAMCAS</i>
Betriebsparameter / Operating parameters	
Leistungsaufnahme / Power consumption	6 W
Platzbedarf / Space	Einzelslot / Single slot



**Polytron-Vertrieb GmbH**

Postfach 10 02 33  
75313 Bad Wildbad

Zentrale/Bestellannahme  
H.Q. Order department + 49 (0) 70 81 / 1702 - 0

Technische Hotline + 49 (0) 70 81 / 1702 - 0  
Technical hotline + 49 (0) 70 81 / 1702 - 0

Telefax + 49 (0) 70 81 / 1702 - 50

Internet <http://www.polytron.de>  
eMail info@polytron.de

Technische Änderungen vorbehalten  
Subject to change without prior notice

**Copyright © Polytron-Vertrieb GmbH**